INNEO®
That's IT.

GENIUS TOOLS®

GENIUS TOOLS Starter

Release 8.0.1.0

User Manual

© 2021 INNEO Solutions GmbH

www.inneo.com

1 Overview 6

1.1 GENIUS TOOLS Starter philosophy ... 6

1.2 Advantages ... 6

1.3 Component modules ... 7

1.4 License-dependent features ... 8

1.5 GENIUS TOOLS Starter: part of Startup TOOLS ... 11

2 System architecture and terms 12

2.1 Important terms ... 12

2.2 Workflow and synchronization ... 13

2.2.1 Operating environments ... 14

2.3 Directory structure ... 15

2.4 Configuration concept ... 16

2.4.1 Creo configuration files ... 16

2.4.2 Config.pro blocks ... 17

2.4.3 Types of config.pro blocks ... 18

2.4.4 Call hierarchy for configuration files ... 19

2.4.5 Call hierarchy ... 21

2.4.6 Searchmode directory ... 22

2.4.7 Configuring an operating environment with batch files ... 22

2.4.8 User-driven configuration ... 23

3 Allocating Creo licenses with GENIUS TOOLS Starter 25

3.1 Basic information ... 25

3.1.1 Creo licenses ... 26

3.1.2 Creo startkeys (PSF keys) ... 27

3.2 Determining license servers ... 28

3.3 Optimally assigning licenses ... 28

3.4 Automatic distribution of Creo startkeys ... 31

4 GENIUS TOOLS Environment Administrator 33

4.1 User interface ... 33

4.2 Creating an operating environment ... 35

4.3 Adding components to an operating environment ... 38

4.4 Updating software ... 41

4.5 Modifying settings ... 42

4.6 Migrating a Startup TOOLS environment ... 45

4.7 Converting a Startup TOOLS database ... 49

5 GENIUS TOOLS Project Configurator 52

5.1 Starting GENIUS TOOLS Project Configurator ... 52

5.2 User interface and navigation ... 53

5.2.1 Main menu ... 54
5.2.1.1 Configuration page ... 54
5.2.1.2 Projects page ... 55
5.2.1.3 Projects collections page ... 56
5.2.1.4 Resources page ... 57
5.2.1.5 Access rights page ... 57
5.2.2 User menu ... 57
5.2.3 Sidebar ... 59
5.2.4 Footer ... 59
5.3 Role-based permission concept ... 61
5.4 Graphical overview: groups in Project Configurator ... 61
5.5 Creating resources ... 62
5.5.1 Creating users ... 63
5.5.2 Creating computers ... 66
5.5.3 Importing from Excel ... 67
5.5.4 Default roles ... 69
5.5.5 Creating roles ... 69
5.5.6 Add users and computers to a role ... 70
5.5.7 Accessing Windows user management ... 71
5.5.8 Creating Creo startkeys ... 73
5.5.9 Creating Creo license servers ... 74
5.5.10 Creating synchronization servers (satellites) ... 75
5.6 Configuring global environments ... 77
5.6.1 GENIUS TOOLS Starter App ... 77
5.6.2 Additional environment variables ... 78
5.6.3 Synchronization ... 78
5.6.4 GENIUS TOOLS License Manager ... 79
5.6.5 Network connections ... 80
5.6.6 Creo settings ... 81
5.6.6.1 Application ... 81
5.6.6.2 Start ... 83
5.6.6.3 Cleanup ... 86
5.6.6.4 Write ... 87
5.6.7 Windchill settings ... 88
5.7 Configuring heterogeneous environments: groups and units ... 90
5.7.1 Working with units ... 91
5.7.1.1 Displaying units in GENIUS TOOLS Starter App ... 91
5.7.1.2 Creating units ... 93
5.7.1.3 Grouping units ... 95
5.7.1.4 Deactivating units ... 96
5.7.1.5 Assigning unit folders ... 96
5.7.1.6 Mapping organization structures with units ... 97
5.7.1.7 Call hierarchy for subunits ... 99

5.7.1.8 Using unit tag IDs ... 100
5.7.1.9 Project options with several unit tag IDs ... 101
5.7.2 User and computer groups ... 102
5.7.2.1 Creating user and computer groups ... 103
5.7.2.2 Assigning users to user groups ... 104
5.7.2.3 Assigning computers to computer groups ... 105
5.7.2.4 Remove users and computers from a group ... 106
5.7.2.5 Deactivate user and computer groups ... 106
5.7.3 Blocking individual users or computers ... 107
5.8 Deviations from the default configuration ... 108
5.8.1 User-defined language ... 108
5.9 Creating projects ... 109
5.9.1 Defining Creo project configurations ... 110
5.9.2 Creating a new project ... 113
5.9.3 Copying a project ... 114
5.9.4 Displaying projects to users ... 114
5.9.5 Hiding and blocking projects ... 116
5.9.6 Settings for Creo projects ... 116
5.9.7 Defining start behavior for a project ... 117
5.9.8 Language of a Creo project ... 119
5.9.9 Default settings for license borrowing ... 119
5.9.10 Assigning Creo licenses to projects ... 120
5.9.11 Assigning Creo license extensions to projects ... 122
5.9.12 Workspace for Windchill ... 123
5.10 Making use of project options ... 124
5.10.1 Single project options ... 126
5.10.2 Combined project options ... 131
5.11 Linking projects with SAP ... 135
5.12 App-Projects: Creating projects of other applications ... 136
5.13 Project collections ... 139
5.13.1 Creating project collections ... 139
5.13.2 Auto projects ... 141
5.14 Working with project access groups ... 142
5.14.1 Creating project access groups ... 142
5.14.2 Using project access groups ... 143
5.14.3 General project access ... 144
5.15 Customizing Creo user interface ... 144
5.15.1 creo_parametric_customization.ui ... 144
5.16 Working with Windchill ... 147
5.16.1 Object search hierarchy in Creo ... 148
5.16.2 Using a Windchill library ... 149
5.16.3 Automatic Windchill server rename ... 149
5.16.4 Automatic Windchill server registration ... 149

5.16.5 Project-specific Windchill settings 151
5.16.6 Integration in Windchill Worker 151
5.17 Access rights 152
5.17.1 Creating function access groups 152
5.17.2 Assigning access rights 154
5.18 Settings for GENIUS TOOLS Starter App 157
5.18.1 Presenting projects 157
5.18.2 Defining project options 158
5.18.3 Customizing the information pane 161
5.18.4 Displaying license information 163
5.18.5 Configuring the desktop link 164
5.18.6 Support link and logging 165
5.18.7 Operating environment clean-up 166
5.18.8 Sending messages to the users 166
5.18.9 Freely configurable debug mode 166
6 GENIUS TOOLS Starter App 168
6.1 Starting GENIUS TOOLS Starter App 168
6.2 User interface 168
6.3 Selecting a unit 170
6.4 Project details and options 171
6.4.1 Information 174
6.4.2 Licenses 175
6.4.3 Configuration files 177
6.4.4 Options 178
6.4.5 Customization.ui file 179
6.4.6 Project report 179
6.4.7 Warning and error tab 180
6.5 User menu 181
6.6 Sidebar 183
6.7 Footer 183
6.8 GENIUS TOOLS Starter App Config Analyzer 185
6.8.1 Project information 185
6.8.2 Compare projects 187
7 GENIUS TOOLS product overview 189
7.1 GENIUS TOOLS product family 190
7.2 Startup TOOLS product development 191
8 Appendix 192
8.1 Start parameters 192
8.2 Environment variables 193
9 Glossary 197

10 Copyright **203**

1 Overview

GENIUS TOOLS Starter is used to start locally installed applications (for example Creo Parameteric) using a centrally managed configuration. All required data is synchronized from a central storage location (Caddepot) to the local computer (Cadpool).

1.1 GENIUS TOOLS Starter philosophy

GENIUS TOOLS Starter lets you manage centrally configured operating environments. Typically, a company uses one productive operating environment. This operating environment can be synchronized to all application computers using GENIUS TOOLS Starter. GENIUS TOOLS Starter also works with multiple operating environments, so that test environments or environments with customer-specific configurations can be configured with little effort.

An operating environment can contain any number of projects.

The Startup TOOLS software package includes pre-defined projects for a number of Creo versions that can be adapted or extended as required by each company. GENIUS TOOLS Starter also works with publicly available configurations for Creo.

Using synchronization between the administration computer and a number of client computers, you can manage large and complex installations, distribute central configuration settings to each Creo workstation and also distribute the required data.

Changes to the configuration are made centrally on the administration computer and are automatically made available to all users. Different configuration settings can be defined for user groups, computer groups or units. The software offers global administration capabilities for heterogeneous IT landscapes and user-specific adaptation options.

1.2 Advantages

– project-oriented workflow

– support for different operating environments

– easy handling through graphical configuration interface for the Creo setup

– central configuration for distributed application computers

– database-driven management of Creo configuration settings

– licensing with FlexLM, fail-safe mode and license borrowing supported

– organization of resources into user groups, computer groups and units

© 2021 INNEO Solutions GmbH

– role-based permission concept
– Windchill integration
– Creo configuration file management
– blocking or granting of access to projects based on project access groups
– support for multiple languages
– license management
– synchronization based on a configurable interval
– fastest possible Creo Parameteric startup, as all data is stored locally
– easy offline work using license borrowing

1.3 Component modules

GENIUS TOOLS Starter provides user-friendly graphical interfaces for managing the Creo installation. It consists of three components with separate UIs:

– GENIUS TOOLS Environment Administrator for managing operating environments
– GENIUS TOOLS Project Configurator for configuring projects within an operating environment
– GENIUS TOOLS Starter App for starting the configured projects

GENIUS TOOLS Environment Administrator

GENIUS TOOLS Environment Administrator 33 provides functionality for managing operating environments. Use GENIUS TOOLS Environment Administrator to

– create new operating environments
– change properties of an operating environment
– update GENIUS TOOLS Starter and GENIUS TOOLS for Creo in an operating environment
– configure license servers and synchronization settings

GENIUS TOOLS Environment Administrator is a stand-alone administrative tool. The executable file *gtsa.exe* is located in the Installdepot directory.

GENIUS TOOLS Project Configurator

GENIUS TOOLS Project Configurator 52 provides functionality for configuring different Creo projects with only a few mouse clicks. Projects are provided to the end users for starting an application using specific configuration settings. Use GENIUS TOOLS Project Configurator to

© 2021 INNEO Solutions GmbH

– define adaptable configuration settings for homogeneous or heterogeneous Creo landscapes
– define group-specific settings
– manage different projects

GENIUS TOOLS Project Configurator is started from the user menu of GENIUS TOOLS Starter App. The administrator can bar users from accessing Project Configurator.

GENIUS TOOLS Starter App

The configured projects are listed in GENIUS TOOLS Starter App for the users to select and start. The user interface also displays additional information, e.g., available Creo licenses, working directory and error messages.

GENIUS TOOLS Starter App is a stand-alone tool. The executable file *gts.exe* is located in the Caddepot directory under *Software*.

1.4 License-dependent features

Starting with GENIUS TOOLS Starter 6.0.1, the product functionality depends on the type of license you are using. From the year 2020 onwards, GENIUS TOOLS Starter is only sold with subscription licenses.

The following functions are available with a subscription license for GENIUS TOOLS Starter.

Release	Subscription function / module	Description
6.0.1.0	Dynamic access to Windows user management with LDAP/Active Directory (lightweight directory access protocol)	Creates access to Windows user management and enables live queries so that user assignment is always up-to-date. Users thus do not have to be created and maintained manually. ⇨ Less maintenance work
6.0.1.0	Configuring units	Adds a group element (“unit”) that can easily reflect complex configurations such as for company sites and units. ⇨ Easier configuration for companies with many sites and/ or units

© 2021 INNEO Solutions GmbH

Release	Subscription function / module	Description
		⇨ Allows for a reduction of projects
6.0.1.0	Access to directory “users”	Adds a group element (“users”) that can easily reflect complex configurations for many users. ⇨ Less maintenance work
7.0.0.0	Selecting Creo startkey when starting a project	Provides a project with a choice from several Creo startkeys (start command that opens Creo with a defined license package). Users can start a project with a default startkey or select another one when opening a project in GENIUS TOOLS Starter App. ⇨ Allows the reduction of projects
7.0.0.0	Apps projects	Creates projects that run on any other program. Assigning a project directory and batch files is possible. ⇨ GENIUS TOOLS Starter App can be made the central access point for users.
7.0.1.0	Operating satellites in GENIUS TOOLS Starter Service	Enables the connection of satellite servers to a main server and their automatic synchronization. ⇨ Faster connection of user computers to a synchronized satellite server ⇨ Reducing queries from network to main server
7.0.1.0	Edit and compare config.pro blocks	Release-dependent config.pro editor and graphic comparison tool ⇨ Quick overview, comparison and editing of project-related config.pro blocks (config_*.pro files)
7.0.2.0	Company-specific project collections	Start projects can be put together in defined project groups by the administrator. ⇨ In many projects, these can be structured according to your own requirements.

© 2021 INNEO Solutions GmbH

Release	Subscription function / module	Description
8.0.0.0	Selectable project options	Projects can be started with multiple, individually defined config.pro blocks, e. g.for license extensions or additional programs.
8.0.1.0	Reproducing organization structure with units and subunits	Subordinate units (subunits) can be created to provide additional configuration levels for project settings. ⇨ Better mapping for locations, subunits etc. and the resulting complex project configurations ⇨ Allows for further reduction of projects
8.0.1.0	Combined project options	Users can select a project option in GENIUS TOOLS Starter App, which activates multiple configuration options which are located in different directories and configuration levels, e. g. for license extensions and add-on applications. ⇨ Number of projects can be minimized

User can see whether projects include subscription functions  by consulting data base mode in the footer of GENIUS TOOLS Starter App.

Warning: If you are using mixed licenses (perpetual and subscription) and configure functionality that is limited to subscription licenses, the projects in GENIUS TOOLS Starter App will no longer start if there is no subscription license available.

For information on managing PTC license packages, please refer to Assigning Creo licenses to projects 120.

Falsely activating a subscription function

When activating a subscription function, a backup copy of the configuration database *sut.db* is created. Use this backup copy, if you want to undo an activation of any of the above functions so you can work again with permanent licenses.

Procedure:


1. On the installation computer, go to the backup directory: .. *\caddepot\<operatingenvironmentname>\configuration\database\BackupBeforeUpgrade*
2. Copy the backup file *sut.db* from the *BackupBeforeUpgrade* folder.

© 2021 INNEO Solutions GmbH

3. Paste this file into the *database* directory.

1.5 GENIUS TOOLS Starter: part of Startup TOOLS

With Startup TOOLS version 6.0, GENIUS TOOLS Starter has been introduced as a stand-alone tool for managing Creo workstations.

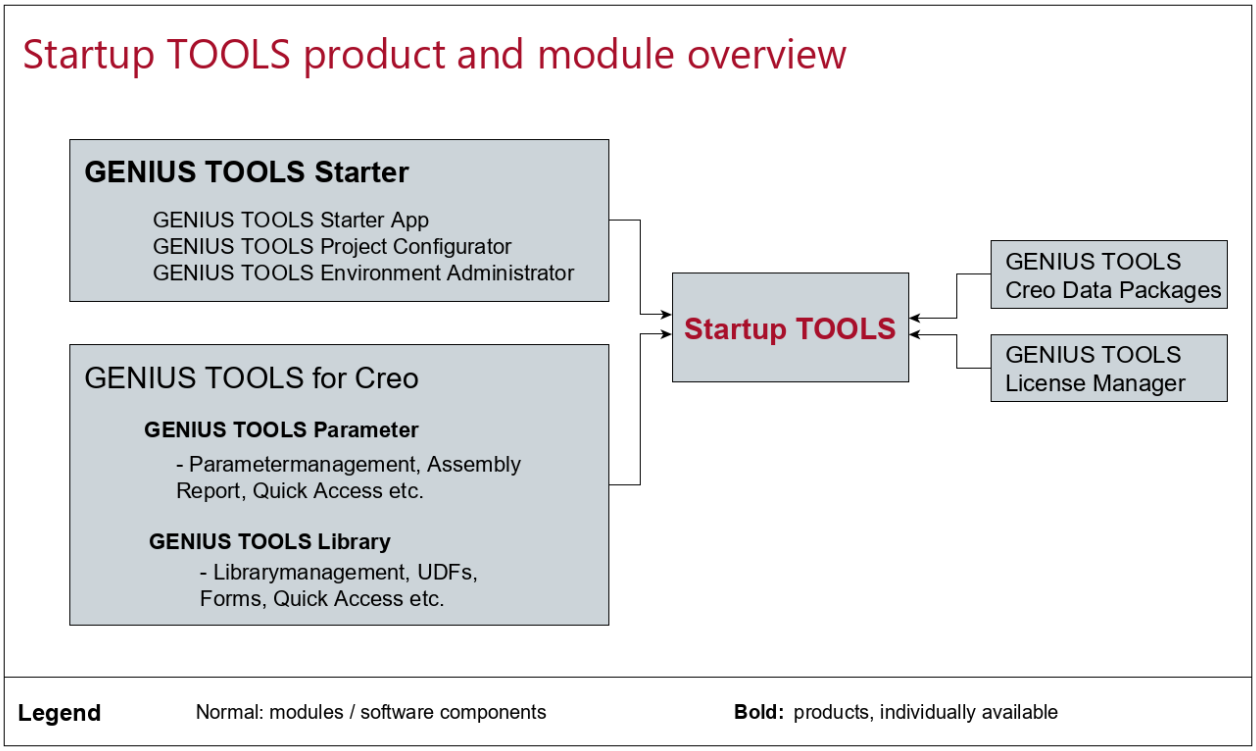

© 2021 INNEO Solutions GmbH

2 System architecture and terms

2.1 Important terms

The **administration computer** is a computer on which the administrative user has full write access to the Caddepot directory in order to manage all data on the file system level. It is the work station where

– GENIUS TOOLS Environment Administrator is used

– GENIUS TOOLS Project Configurator is used

– the configured projects can be run

Caddepot is a subdirectory of the installation directory. It is the source for the synchronization of the local work environments on the application computers, that is, the source for the local *Cadpool* directories.

The *Caddepot* directory is shared to be accessible for distributed work.

All work environments that are used locally, via network shares or via synchronization are managed in the *Caddepot*.

An **operating environment** is a directory that contains all the data required for working with the desktop application. This includes configuration data, libraries, templates and additional applications. The operating environment also contains a database with all configured projects. An operating environment can contain an arbitrary number of projects.

If you work locally, the directory you use for your operating environment is the Caddepot. If you work across a network, the directory for the operating environment is the Caddepot on the administration computer and the Cadpool on the application computers.

The operating environments contains the software GENIUS TOOLS Starter App (*GTS.exe*) in a defined version.

A **project** is a collection of application properties such as project directory, data directory and license. Projects allow users to start an application with a specific set of configuration settings. A project combines locally available data with a centrally managed configuration settings.

Projects are opened by the users via GENIUS TOOLS Starter App, and edited by the administrator using GENIUS TOOLS Project Configurator. Each project is saved in a work environment under *cadpool* > *configuration* > *projects*, e.g., *project_creo6p_en*.

When a project is started, the configuration settings in the standard directory as well as in the directories for the unit and for the user are considered.

© 2021 INNEO Solutions GmbH

The central **configuration file** in Creo is the **config.pro** 16 file. This file contains all user configuration settings.

By using GENIUS TOOLS Starter configuration options are defined in various separate configuration files that are then assembled into a single config.pro file that is read by Creo. The separate configuration files in GENIUS TOOLS Starter are called **config.pro blocks** 17, for example, *config_sut_de_c5p_mapkeys.pro* or *config_sut_de_c6p_dir_file.pro*.

2.2 Workflow and synchronization

Standard workflow: Working locally with synchronization

With GENIUS TOOLS Starter, Creo users typically have all the data they need locally on their workstation. This ensures the fastest possible data access and makes it possible to work offline.

If the data is copied to the local workstation, it has to be kept up-to-date with data synchronization. The local data is kept in the operating environment in the Cadpool directory, which is synchronized with the Caddepot directory, meaning that the data is copied from Caddepot to Cadpool at a configurable interval.

Data synchronization means that local configuration changes will be overwritten. Changes to the operating environment, for example entries in a configuration file, have to be copied manually to the Caddepot. Synchronization has to be paused during the time in which changes are made. To pause synchronization, open GENIUS TOOLS Project Configurator and select *Pause synchronization* from the user menu .

Please note: For data synchronization to work, the users need to have access to the Caddepot directory. It is recommended to only grant read access if you do not want users to change settings by themselves.


The setup for working locally with synchronization is created by GENIUS TOOLS Starter by default. If you start the *GTS.exe*, it will open from the local Cadpool directory, or create the Cadpool directory if it does not exist (initial synchronization).

Network mode: Working without synchronization

You can work locally with the data in the Caddepot and without synchronization within a computer network. To do so, the standard behavior of GENIUS TOOLS Starter has to be changed and set to network mode, meaning that the *GTS.exe* will be started in the Caddepot directory.

To set access rights for network mode, open GENIUS TOOLS Project Configurator and set *Access rights* > *Function access* > *Select group* > *Function access* > *Prevent switch to local installation: Yes*.

© 2021 INNEO Solutions GmbH

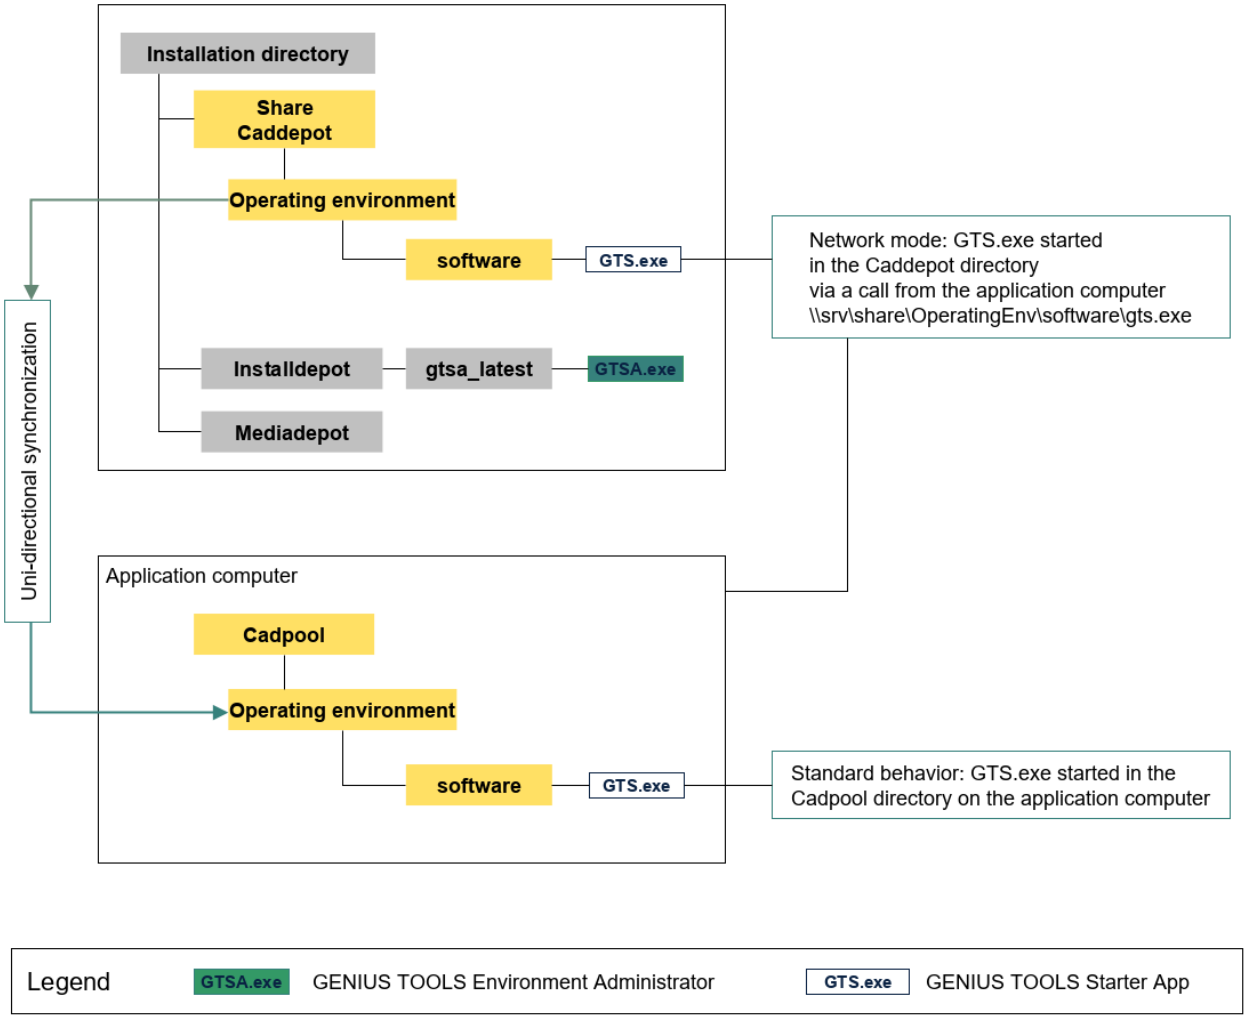

Way of synchronization from Caddepot to Cadpool in GENIUS TOOLS Starter.

2.2.1 Operating environments

You can manage any number of operating environments with GENIUS TOOLS Starter. This means that you can have both a test and a production environment installed and manage environments for different clients.

Each operating environment contains a set of projects, the required data and the GENIUS TOOLS Starter software. Each operating environment is fully independent of the others.

The directory for the operating environment contains configuration data, libraries and templates, additional applications as well as the database for project-specific configuration settings.

Data in an operating environment cannot be changed by setup programs. Changes to an operating environment and software updates are managed using GENIUS TOOLS Environment Administrator. This gives the IT administrator better control over which data

© 2021 INNEO Solutions GmbH

is actually being changed or updated in an operating environment, e.g., GENIUS TOOLS Starter software, GENIUS TOOLS for Creo, configuration files, or standard parts.

2.3 Directory structure

The directory for an operating environment contains the following subdirectories:

_Images contains an image or images for the operating environment as well as the start icon. The image and the icon have to use the operating environment name as their file name. The icon has to be in the icon format (ICO). See also Configuring the desktop link 164.

_Information contains messages to the users as text files. See also Sending messages to the users 166.

apps contains all additional applications for Creo Parametric. The subdirectory *ui* contains the freeware tool GENIUS TOOLS UI File Loader. The subdirectory *gtfc* contains the data for the GENIUS TOOLS for Creo products Library and/or Parameter, which are part of the Startup TOOLS software package 190.

configuration contains all configuration data for the operating environment, e.g., settings for company standards 77, units, usergroups and computer groups.

data contains all data directories available in a project, e.g., libraries, materials, ModelCheck configuration files etc. See also Defining Creo project configurations 110.


help contains the manuals and installation instructions for GENIUS TOOLS for Creo, GENIUS TOOLS Starter and Startup TOOLS.

serveronly is only present in the Caddepot directory. It contains additional tools such as GENIUS TOOLS Comma-to-dot or GENIUS TOOLS Purge. The subdirectory *_ErrorLog* contains log files for errors.

software contains the GENIUS TOOLS Starter software

userdata contains user-defined settings, e.g., mapkeys or user images. In contrast to the directory in *configuration/Users*, this directory can be managed by the user themselves.

© 2021 INNEO Solutions GmbH

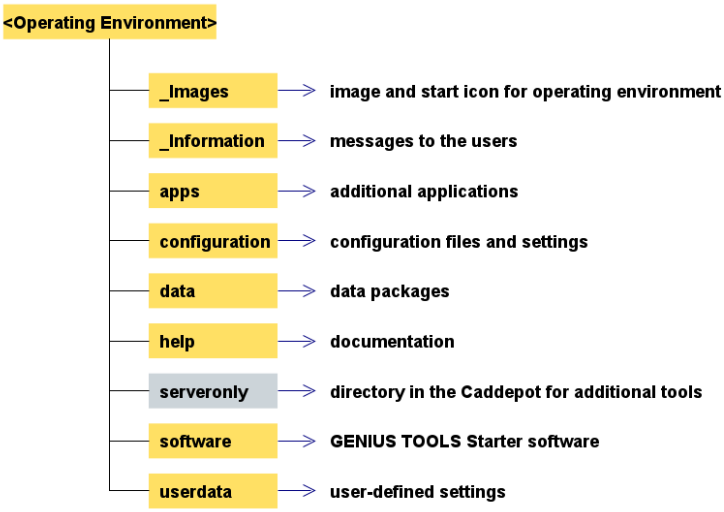

2.4 Configuration concept

As delivered by PTC, Creo does not support settings for different groups of users, for example for different projects, business units or locations. Creo reads a number of configuration files that determine the behavior of the application. The central configuration file is the *config.pro*. It contains user settings such as appearance of objects and of the graphics window, units and tolerances, or layers and mapkeys.

GENIUS TOOLS Starter assembles configuration files that can then be applied to project groups, user groups, computer groups and units. It takes a number of configuration file building blocks, called *config_*.pro* files, e.g., *config_sut_de_c5p_mapkeys.pro*, and assembles them into a *config.pro* file that can be read by Creo.

If an option is not specified in the *config.pro* file, the default value will be used.

2.4.1 Creo configuration files

The behavior of Creo is largely determined by the configuration file *config.pro*. This is a text file storing all settings that determine how Creo Parametric runs.

Settings in config files are called configuration options – the calculation accuracy is, for example, set by the command `enable_absolute_accuracy yes`.

The Config.pro file of Creo can be located in three different folders:

– in the text directory (<*installdir*>*Common Files**text*),

– in the home directory,

– in the user directory (start directory of the user).

© 2021 INNEO Solutions GmbH

In this order Creo copies the configuration options defined there to a single config.pro file. If a configuration option is set more than once, the last entry is the valid option value, i. e. the config.pro file is read from top to bottom.

Configuration options can also be specified in another configuration file, the config.sup file. The options set there cannot be overridden by the options in the config.pro file.

The following configuration files determine the settings for a Creo application.

Configuration file	Function
config.pro	crucial configuration file of Creo contains settings for a user, e. g. – appearance of objects and of the graphics window – behavior when creating, saving or opening objects – units, tolerances, search paths and default directories – printing, import and export settings – settings for optional modules such as Pro/NC, Pro/Sheetmetal, Pro/Mold – layers and mapkeys If a configuration option is not defined, the default value will apply to Creo.
config.sup	contains settings that the user may not modify, i.e., that cannot be overwritten by the config.pro file, for example to ensure drawing standards
config.val	contains validation settings for data import
creo_parametric_customization.ui	contains UI customizations for a user
creo_parametric_admin_customization.ui	Created by administrator, contains UI customizations

2.4.2 Config.pro blocks

By using GENIUS TOOLS Starter, configuration options are not written to the Config.pro file of Creo, but to different fragmented configuration files of GENIUS TOOLS Starter, called config.pro blocks.

A **config.pro block**

© 2021 INNEO Solutions GmbH

– is a text file that must start with "config_" and end with ".pro", e.g. *config_sut_de_c6p_dir_file.pro, config_c5p_mapkeys.pro.*

– is one of many configuration files that are read by GENIUS TOOLS Starter and converted into a config.pro file for starting Creo,

– can contain one or more multiple Creo configuration options, i. e. settings for users,

– is also called config_*.pro file,

– is not to be mistaken for the config.pro file of Creo, which exists only once.

Config.pro blocks are created manually and distributed to the desired configuration levels: standard, units, projects and user. Thus they provide company-wide settings as well as settings for specific departments, projects or user groups, see next chapter. 19

There are two types of config.pro blocks: simple and conditional, see chapter Types of config.pro blocks. 18

2.4.3 Types of config.pro blocks

Config.pro blocks are read in different ways. There are basic and conditional config.pro blocks.

1. Basic config.pro blocks: without tag ID
The config.pro block (config_*.pro file) is given a meaningful name and stored in one of the directories Standard, Unit, Project, User. If the directory is valid for the selected project, the Config.pro module is read out.

– Control: Call hierarchy of the directories determines which config.pro block is used for the project, see Call hierarchy for configuration files 19.

– Notation: *config_*.pro,* e.g.: *config_1_lic_sim_live.pro*

2. Conditional config.pro blocks: with tag ID
A tag ID is a textual identifier that is recognized by GENIUS TOOLS Starter. By adding a tag ID to a config.pro block, its validity can be linked to conditions.

– Notation: *config_*.TAGID.pro*, e. g. *config_mbd.europe.berlin.mbd.pro*

GENIUS TOOLS Starter distinguishes between unit tag IDs and free tag IDs.

Unit tag ID

A unit tag ID is an additional textual marking in a config.pro block that defines a unit and limits the validity of the block to it. This means a conditional config.pro blocks with a unit tag ID is activated by the selection of a unit in GENIUS TOOLS Starter App.

Unit tag IDs can be used

– as name of the unit folder 96


© 2021 INNEO Solutions GmbH

– as name of an image file: 93 to assign images to a unit

– in config.pro blocks: to restrict configuration options to a unit, see Using unit tag IDs 100.

Free tag ID

A free tag ID is an additional textual marking in a config.pro block that defines a combined project option 131 and limits the validity of the block to it, e. g. *config_lic.mbd.pro*. That means users have to activate the project option – here: mbd – in GENIUS TOOLS Starter App in order for the config.pro block to be read at project start. The first config.pro block with the free tag ID creates a checkbox.

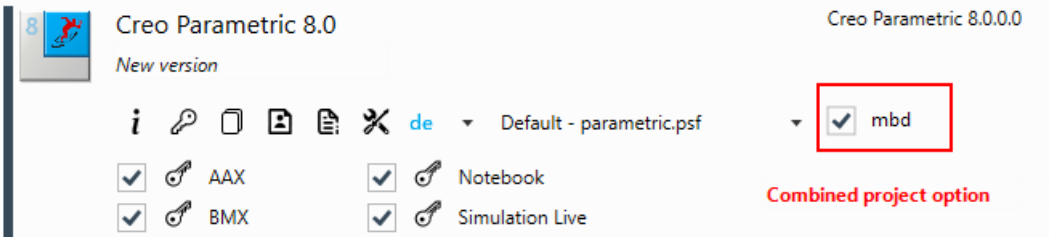

Free tag IDs can be choosen freely, but cannot be assigned to a unit.

2.4.4 Call hierarchy for configuration files

Many configuration options can be set only once in Creo. For such options, the value used is the last value that is found when reading the *config.pro* file from top to bottom. If multiple settings are defined for an option, only the last settings is relevant.

The configuration settings are copied into the *config.pro* file for Creo in the following sequence by GENIUS TOOLS Starter.

The config.pro blocks of GENIUS TOOLS Starter can be located in four directories: standard directory for global system settings, unit directories, project directories and user directory for user-defined settings.

GENIUS TOOLS Starter overwrites the config.pro file 16 of Creo with the config.pro blocks you have. They are copied in the following order. The last entry of a configuration option is the valid value.

1. Standard (global directory)
2. Standard searchmode, if Windchill is active
3. Units (individual subdirectory)
4. Units searchmode, if Windchill is active
5. Projects (individual subdirectory)
6. Projects searchmode, if Windchill is active

© 2021 INNEO Solutions GmbH


7. Users (individual subdirectory, named by Windows user name)
8. Users searchmode, if Windchill is active
9. Userdata (configurable)

Please note: The directories units and users can only be used with a subscription license.

For more information on searchmode, please refer to Searchmode directory 22.

Project configuration: example


The following diagram explains the call hierarchy when user Meier of Unit Germany opens Project 1. The value of the last called config.pro block is the valid value.

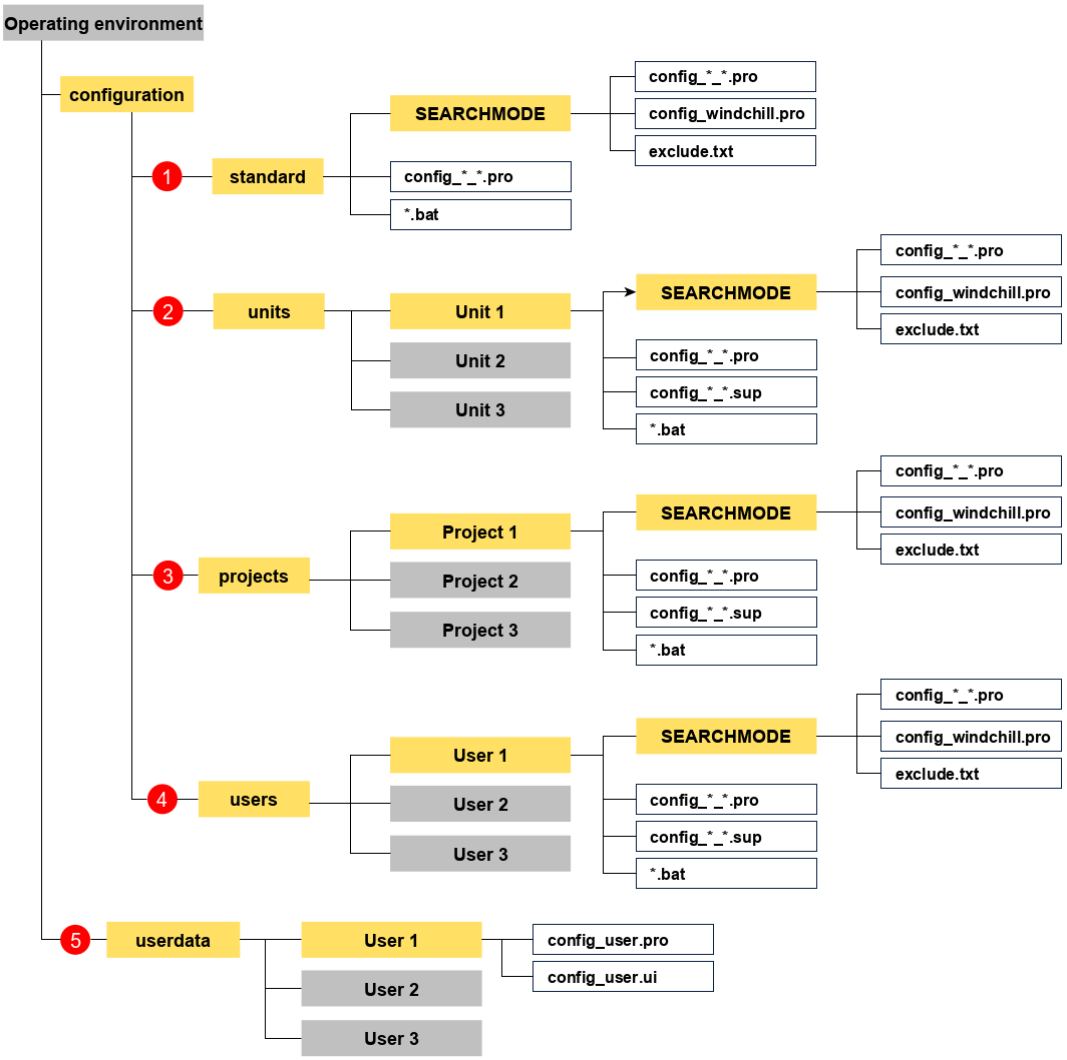

© 2021 INNEO Solutions GmbH

2.4.5 Call hierarchy

Configuration files and batch files are subject to the same call hierarchy. Unlike configuration files, batch files cannot be saved in the searchmode directory.

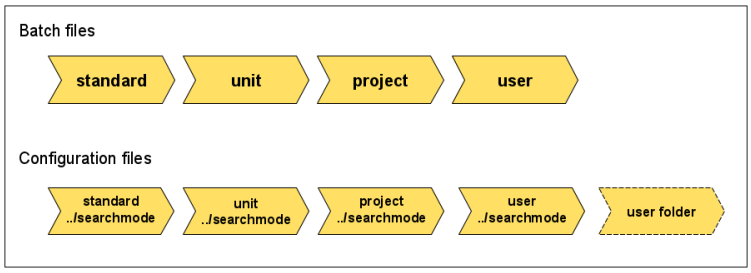

Call hierarchy for batch and configuration files in a started project

The following search and call sequence applies to configuration files.

1. Standard (global directory)
2. Standard searchmode, if Windchill is active
3. Units (individual subdirectory)
4. Units searchmode, if Windchill is active
5. Projects (individual subdirectory)
6. Projects searchmode, if Windchill is active
7. Users (individual subdirectory, named by Windows user name)
8. Users searchmode, if Windchill is active
9. Userdata (configurable)


Please note: The directories units and users can only be used with a subscription license.

Warning: Starting with GENIUS TOOLS Starter 6.0.1, a new configuration mechanism is in use. When you update from version 6.0.0.0 or migrate from Startup TOOLS 20xx, the files in the *projects* directory, that is, the general configuration files, will be moved to a new directory named *standard*. Project-specific configuration files located in subdirectories under *projects* will not be moved.

Example project configuration

The following graphic illustrates the call hierarchy for user *C Meier* starting *Project 1* in the unit *Deutschland*.

© 2021 INNEO Solutions GmbH

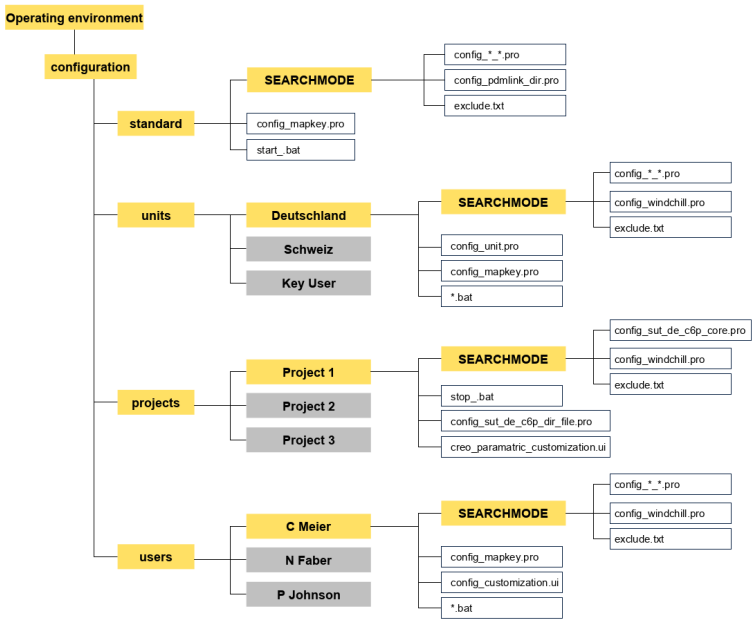

2.4.6 Searchmode directory

The searchmode directory is part of the calll hierarchy when you are working with Windchill. It contains additional settings that are defined on starting Windchill, as well as commented-out settings for Creo projects. Commenten-out settings are located in the file *exclude.txt*.

As soon as Windchill is activated, the searchmode directories within all configuration directories relevant to a project will also be included into the configuration call hierarchy. All configuration files within the searchmode directories will be used.

Please note: It can be useful to add a special directory under a project directory. If you create a special directory called SEARCHMODE within a project directory, this directory will also be used in determining the configuration settings.

Searchmode directories are used according to the same hierarchy as configuration files:

1. in the standard directory
2. in the unit directory
3. in the project directories
4. in the user directory

2.4.7 Configuring an operating environment with batch files

If you want to execute additional instructions before Creo is started or when Creo is stopped, you can place project-specific batch files in the directory .. *\configuration\projects\<PROJECT>*. The batch files names have to start with one of the

© 2021 INNEO Solutions GmbH

prefixes `prestart_`, `start_` or `stop_`. You can use batch files to set additional environment variables or copy additional data.

Warning: Starting with GENIUS TOOLS Starter 6.0.1, a new configuration mechanism is in use. When you update from version 6.0.0.0 or migrate from Startup TOOLS 20xx, verify references to configuration files in your batch files. References to *..\configuration\projects* have to be changed to *..\configuration\standard*.
Batch files in the project-specific subdirectories under *projects* do not have to be changed.

Types of batch files

Prefix	Start time	Comment
prestart_	Started before the Creo Parametric configuration is created	When a project is started, GENIUS TOOLS Starter calls the *prestart_* batch files before the *config.pro* files for the project are assembled.
start_	Started before Creo Parametric is started	When a project is started, GENIUS TOOLS Starter assembles the *config.pro* files for the project, then calls the *start_ batch* files.
stop_	Started after Creo Parametric is closed	Please note that *Enable stop batches* has to be set to *Yes* in the Project Configurator under *Configuration* > *(Select group)* > *Creo Settings* > *Startup Settings*.

Warning: The batch file types *runonce_* and *env_* are not supported any longer. If you want to keep using your batch files, rename them to *start_*, e.g., *env_inneo.bat* to *start_inneo.bat*


2.4.8 User-driven configuration

Users may manage configuration files on their own and are thus able to overwrite or append the settings established by the administrator. This is often done, for example, when working with user-defined mapkeys.

For a user to administer his or her own settings the configuration files have to be saved in the *userdata* directory to which the user needs to be given write access. There are two ways to provide a user with a *userdata* directory.

© 2021 INNEO Solutions GmbH

1. Users can work in *userdata* that is a subdirectory of the Caddepot directory of the adminstrator computer and which is synchronized to the Cadpool directory of the client computer.
2. A *userdata* directory can be set up on any location on the client computer. There, it does not undergo data synchronization. The storage location has to be defined in *Configuration* > *(select) group* > *Creo Settings* > *Application* > *User settings* > *configuration folder*.

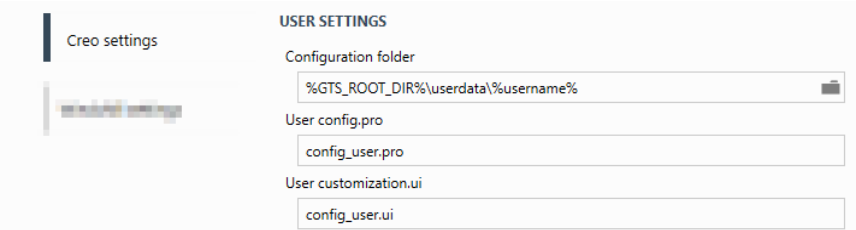

© 2021 INNEO Solutions GmbH

3 Allocating Creo licenses with GENIUS TOOLS Starter

Companies that only have a few workstations may be able to maintain license files at each workstation individually, but as corporate structures grow this will be a tedious task: different workstations require different licenses, the expiration of licenses must be monitored, but most importantly an efficient assignment of licenses and license extensions to projects becomes difficult.

With GENIUS TOOLS Starter you can:

1. Specify license servers
You can assign one or more license servers 28 to a project.

2. Assign licenses and license extensions to a project
Creo licenses can be made available to users in various ways, especially to minimize the number of projects and provide choices for users. See chapter Optimally assigning licenses. 28

3. Distribute Creo startkeys (license keys, PSF keys) automatically
You can distribute Creo startkeys automatically to all user computers. GENIUS TOOLS Starter copies all PSF files located in the configuration folder (Cadpool) of the user computer to the bin directory of the Creo installation folder. Alternatively, only those PSF keys that control a specific project can be copied. See chapter Start. 83

Automatic copying is greatly beneficial when changes are made to the PSF keys as the maintenance effort is reduced significantly.

4. Work offline by license borrowing
Borrowing licenses for a certain period of time is especially advantageous for mobile working. Users who have the right to borrow licenses can see the button in the Licenses tab in GENIUS TOOLS Starter App and can use it to start the license borrowing 175 process of PTC.

3.1 Basic information

This chapter introduces Creo licenses 26 and Creo startkeys. 27

© 2021 INNEO Solutions GmbH

3.1.1 Creo licenses

When purchasing Creo Parametric software from PTC, you receive a FlexNet license key (license key for FlexNet). This consists of the name of the base license and – if available – the numbers of the license extensions (modules), e.g. #116 for NC-SHEETMETAL, #339 for Mold Analysis.

1. **Creo Parametric base license**, e. g. Creo Foundation (*PROE_Foundation*)
   – is necessary to start Creo Parametric
   – depending on the purchased product, a base license can contain a list of modules and is then labeled **base license package**, e. g. Creo Advanced XE
2. **Creo Parametric license extensions** (also called license key features), e. g. Plastic Advisor (*134*)
   – extends a basic license (package) with functions
   – can be purchased separately
   – always requires a base license package
   – a **license extension package** contains several license extensions, e. g. Creo Advanced Assembly Extension (*AAX*)

Creo Parametric – together with the previous products Pro/ENGINEER and Wildfire – has been on the market for over 30 years. During this time many modules have been created and many products were sold by PTC and resellers. In addition, countless product packages were created as part of sales initiatives. Thus, it is hardly possible to keep track of all basic license packages and their diverse functionalities. As a result, all long-time users of Creo Parametric have a different license key architecture.

The following table lists some examples of products and their license keys.

Produkt	Beschreibung	Lizenzschlüssel
Creo Foundation	Base license	PROE_Foundation
Creo Advanced SE	Basic license package with the additional modules Surface, Design Animation, Modelcheck, Mold Analysis Lite and others	PROE_AdvSE
Creo Advanced XE with AAX	Basic license package with the additional modules	PROE_FAPAAX

© 2021 INNEO Solutions GmbH

Produkt	Beschreibung	Lizenzschlüssel
	Assembly/AAX and other modules	
Assembly	License extension	6
Creo Advanced Assembly Extension (AAX)	License extension package with Notebook (0), Assembly (6), Process for Assemblies (97), WebLink (108), Creo Layout 3D Integration (292), Creo Options Modeler Basic (329)	PROBUNDLE_10119 0,6,97,108,292,329

Administrators of Creo Parametric have the task of correctly assigning existing as well as newly purchased licenses to users. In other words, administrator are faced with a license structure and have to set up the Creo Parametric startup options, i.e. the Creo startkeys, accordingly.

3.1.2 Creo startkeys (PSF keys)

A startkey is a configured start command that opens Creo with one or more specified licenses or license extensions.

Creo startkeys are created as PSF files and are located in the directory *<creoinstalldir>\Parametric\bin*. Startkeys are generated during setup with the PTC installation wizard or can be reconfiguared later (*<creoinstalldir>\Parametric\bin\reconfigure*). Refer to the Creo manuals from PTC for more information.

When the program starts, Creo reads the startkey to determine which licenses and extensions are to be searched for on which license server(s). This is defined in the environment variables PTC_D_LICENSE_FILE- and CREOPMA_FEATURE_NAME.

GENIUS TOOLS Starter intervenes in this process and

– *replaces* the PTC environment variables:
  when settings are made in GENIUS TOOLS Project Configurator, i. e. for license server and base license specifications.

or

– *adds* additional information to the PTC environment variables:
  when settings are entered into config.pro blocks, i. e. for license extensions and other project options, such as add-on programs.

© 2021 INNEO Solutions GmbH

Assigning licenses to a startkey

Each startkey should contain information about the base license package and the license extensions. One startkey can contain several license extensions, as well as several base licenses.

Usually, multiple startkeys are created for Creo, since the same license structure is typically not available for all workstations. The actual number of startkeys required and the license information they contain depends on the procedure you choose to optimize license usage 28, as described in the next chapter.

Examples for license information in start keys:

Feature in der Datei *found.psf*: `ENV=CREOPMA_FEATURE_NAME=PROE_FOUNDATION ()`

Feature in der Datei *manikin.psf*: `ENV=CREOPMA_FEATURE_NAME=PROE_FOUNDATION (277 278)`

Feature in der Datei *AAX.psf*: `ENV=CREOPMA_FEATURE_NAME=PROE_AdvSE ()`

3.2 Determining license servers

If multiple license servers exist in an organization, you can assign one or more license servers to a specific project, unit or group.

You can also assign multiple license servers to a project and define the order in which the servers are accessed.

Example: For the unit United Kingdom the license server in the United Kingdom should be searched first and the license server in Asia last.

1. In the Resources main page create the resource Creo license server with the name *ALLSERVERS*, which contains all license servers, e. g. *7788@licserverUK;7788@licserverUS;7788@licserverAS*

   The order of the servers corresponds to the search query.

2. Go to the unit United Kingdom and select the license server *ALLSERVERS* in the tab *Start* in *Creo Settings*.

3.3 Optimally assigning licenses

There are three ways to use GENIUS TOOLS Starter to assign licenses and extensions to one or more projects.

– Method 1: Fixed assignment of a startkey to a project

– Method 2: Assigning several startkeys to one project

© 2021 INNEO Solutions GmbH

– Method 3: Assigning license extensions to a project

Choose the method according to the license structure.

The three methods can best be explained using an example.

Methods of license usage by example

The following example describes an optimal creation of Creo startkeys for different typical situations.

Assumptions: The license server CADLICENSES is used. Creo startkeys (PSF keys) are created by default with the PTC Setup or edited with "reconfigure". They are located in the bin folder of PTC, e. g. *PTC\Creo 8.0.0.0\Parametric\bin*.

Initial scenario: One type of license
A company employs 10 Creo users and has 10 "Creo Foundation" base license packages.


Solution / **Method 1**: You require one Creo startkey which is assigned to one project.

– Content of the file *parametric.psf:*

```
ENV=PTC_D_LICENSE_FILE-=7788@cadlicenses
ENV=CREOPMA_FEATURE_NAME= PROE_Foundation ()
```

– In GENIUS TOOLS Project Configurator, assign the startkey *parametric.psf* to the project *Creo Parametric*. (Consult the chapter Assigning Creo licenses to projects 120 for a step-by-step guide).

Result: 10 users can start the project without any options.

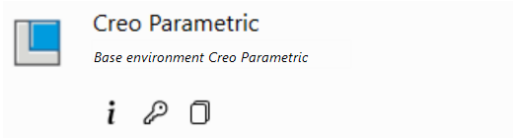

Scenario A: Several types of licenses
Two construction engineers join the team. The base license package "Creo Foundation" no longer exists, so the base license package "Creo Advanced SE" is purchased.

Situation: There are 10 Creo Foundation base license packages and 2 Creo Advanced SE base license packages for 12 users.


Solution / **Method 1**: The existing PSF key is extended.

– In the *parametric.psf* file the license specification for Creo Advanced SE has to be added:

```
ENV=PTC_D_LICENSE_FILE-=7788@cadlicenses
ENV=CREOPMA_FEATURE_NAME= PROE_Foundation PROE_AdvSE ()
```

– No editing needed in GENIUS TOOLS Project Configurator for the 12 users to work.

Result: 12 users can start the project without any options.

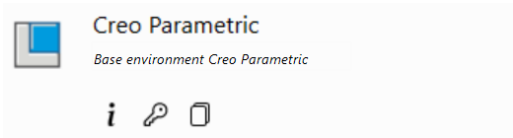

© 2021 INNEO Solutions GmbH

Result: The project is started without any selections in the GENIUS TOOLS Starter App user component.

Scenario B: One license type with license extension package
The top-down technology (skeleton models, reference control etc.) is to be used. For this purpose, two license extension packages "Creo Advanced Assembly Extension" (AAX) are purchased.

Situation: There are 10 Creo Foundation base license packages and 2 AAX license extension packages for 10 users. Creo Parametric can be started without AAX and with AAX (but only 2 times).

Solution: You can use all three methods. For all of them users are given the option to start a project with or without an AAX license extension.

– Content of *parametric.psf* (as in initial scenario):

```
ENV=PTC_D_LICENSE_FILE-=7788@cadlicenses
ENV=CREOPMA_FEATURE_NAME= PROE_Foundation ()
```


– For methods 1 and 2, a second startkey is created with the content:

```
ENV=PTC_D_LICENSE_FILE-=7788@cadlicenses
ENV=CREOPMA_FEATURE_NAME= PROE_AdvSE (0 6 97 108 292 329)
```

Method 1: Assigning a startkey permanently to a project.

– GENIUS TOOLS Project Configurator a new project is created with the second Creo startkey *aax.psf*.

Result: Two projects can be started without any options.

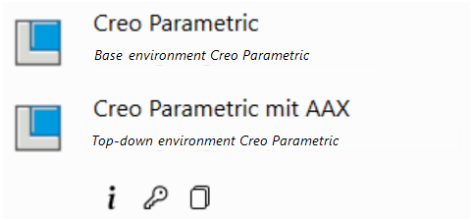


Hint: Project permissions can be used to grant selected users only the right to see the project with AAX.

Method 2: Assigning multiple startkeys to a project.

– The second startkey *aax.psf* is assigned to the project. (See Projects with several startkeys to choose from 120).

Result: The project has an option for selecting the Creo startkey.

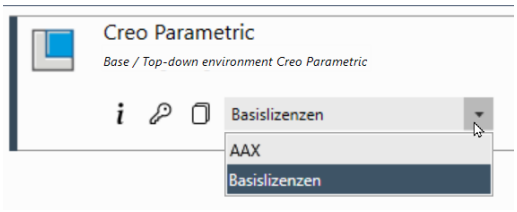

Method 3: Assigning license extensions to a project

© 2021 INNEO Solutions GmbH


– The *aax.psf* startkey is not used.

– Create a config.pro block in the project folder which contains information about the AAX license extension package. (See chapter Single project options 126 for details).

– Contents of the *config_aax.pro* file:

```
! gts_creo_lic = 0 6 97 108 292 329
```

Result: The project has an option for selecting the AAX license extension (checkbox).

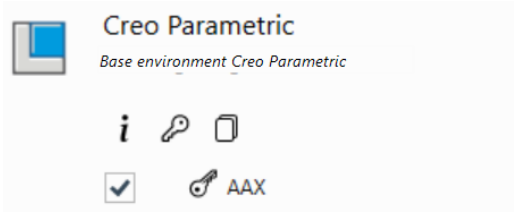


Tabular overview of license usage methods:

	Method 1	Method 2	Method 3
Description	Fixed assignment of a startkey to a project	Assigning several startkeys to one project 121	Assigning license extensions to a project 122
Project options in GENIUS TOOLS Starter App 158	No options for project	Selecting a startkey from a list of startkeys	Anklicken einer oder mehrerer Projektoption(en) am Projekt
Settings	*Projects* > *Application* > *Project* > *Tab: Start* > *Creo startkey*	*Projects* > *Application* > *Project* > *Tab: Start* > *Creo startkey configuration*	Creating a config.pro- block in the project folder
Advantage	Quick provision of a simple configuration	Number of projects is minimized	Number of projects is minimized significantly

3.4 Automatic distribution of Creo startkeys

You can automatically distribute Creo startkeys (PSF keys) to all user computers. GENIUS TOOLS Starter copies all PSF files located in the configuration directory (Cadpool) of the user computer to the bin directory of the Creo installation directory of the user computer. The files are copied to the bin directory of the Creo version that is assigned to the project.

© 2021 INNEO Solutions GmbH

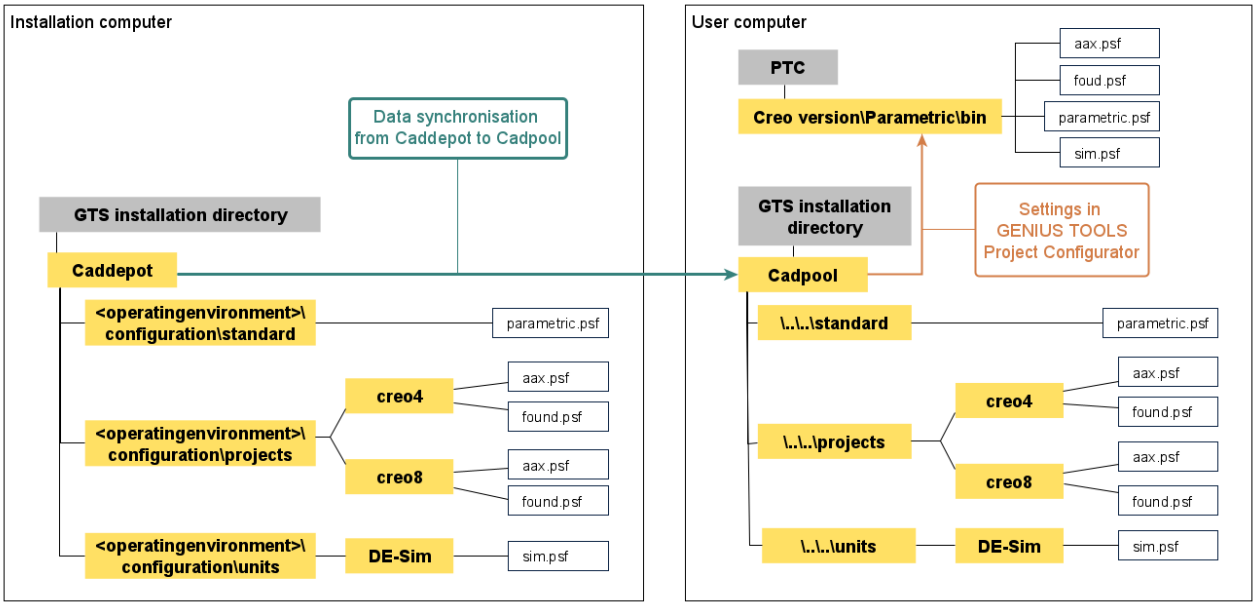

Automatic copying is useful when PSF keys were edited. The maintenance effort is significantly reduced.

The function to copy startkeys is activated in GENIUS TOOLS Project Configurator in the menu item *Configuration* under *Creo Settings* > *Tab: Start* > *Dialog:* *Creo startkey* 83. There you can choose:

- whether all Creo startkeys are copied to the bin directory or
- whether only project-relevant startkeys are copied to the bin directory oder
- whether the bin directory is cleaned up before, i. e. all startkeys are deleted before copying. (This is only possible for startkeys in the units and users directories).

The startkey used for the project depends on the call hierarchy for config.pro blocks. 19

© 2021 INNEO Solutions GmbH

4 GENIUS TOOLS Environment Administrator

GENIUS TOOLS Environment Administrator is an administrative tool for managing operating environments. Use GENIUS TOOLS Environment Administrator to handle the following tasks.

– create operating environments *(Create)*

– add components to an operating environment *(Add Components)*

  – project folders (directories with *config.pro* and other project-specific files)

  – data folders

  – additional applications

– update operating environments (GENIUS TOOLS Starter App and GENIUS TOOLS for Creo) (*Update*)

– change the settings for an operating environment *(Modus)*

  – license server


  – synchronization settings (Caddepot, Cadpool)

– migrate from Startup TOOLS versions prior to 6.0 (*Migration*)

– convert Startup TOOLS databases *(Convert)*

The following sections describe the functions of GENIUS TOOLS Environment Administrator. GENIUS TOOLS Environment Administrator also comes with inline help, which describes the individual steps and is displayed in the rightmost pane when you use the software.

4.1 User interface

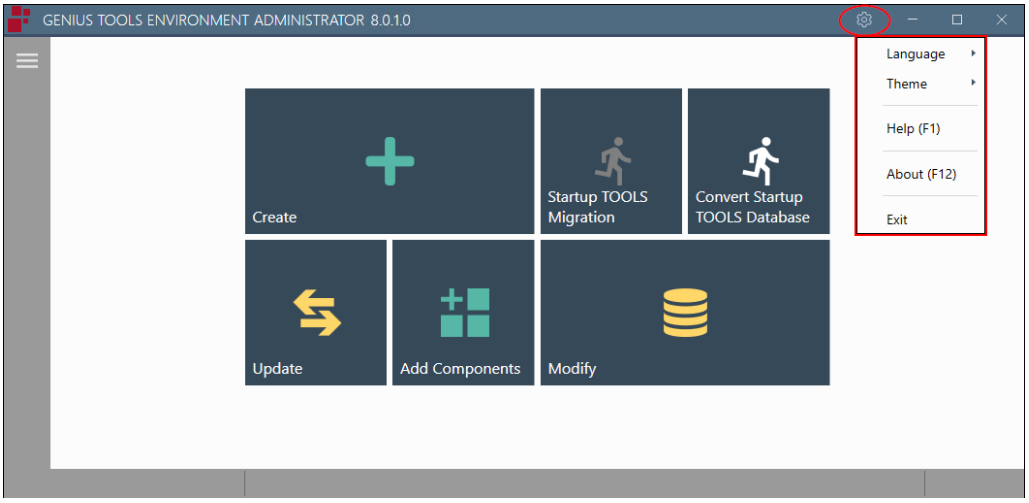

© 2021 INNEO Solutions GmbH

To access general settings for GENIUS TOOLS Environment Administrator, click on the gear symbol in the header.

Language: user interface language

You can switch the user interface language between English, German and French at any time. The language setting is saved and will be used the next time you start the software.

The software first starts with a German user interface if the operating system locale is set to German. For all other locale settings, the software first starts with an English user interface.

Theme: user interface color settings

The software comes with the color themes *Blue*, *Light* and *Dark*. You can switch themes at any time. The theme setting is saved and will be used the next time you start the software.

Help (F1)


Opens the software help for GENIUS TOOLS Starter. The help corresponds to this document.

Info (F12)

Shows the current GENIUS TOOLS Starter version.

Step-by-step workflow


When you select a function on the GENIUS TOOLS Environment Administrator start page, a wizard with one or more dialog pages is displayed. The inline help in the rightmost panel supports each step of the workflow.

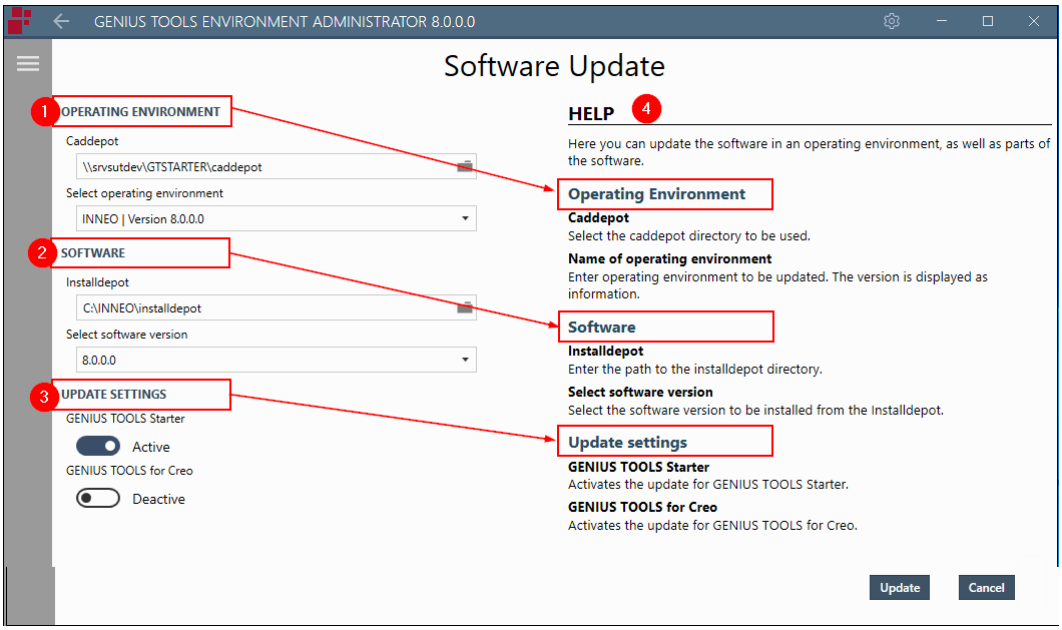

© 2021 INNEO Solutions GmbH

4.2 Creating an operating environment

GENIUS TOOLS Environment Administrator lets you create different operating environments with only a few mouse clicks. Each operating environment consists of GENIUS TOOLS Starter App and its accompanying directory structure. You can add new components at any time, for example, UI and functional configurations for Creo (*config.pro, config.sup config.ui*), start object templates, project-specific libraries, drawing frames, ModelCheck configurations or additional applications (toolkit).

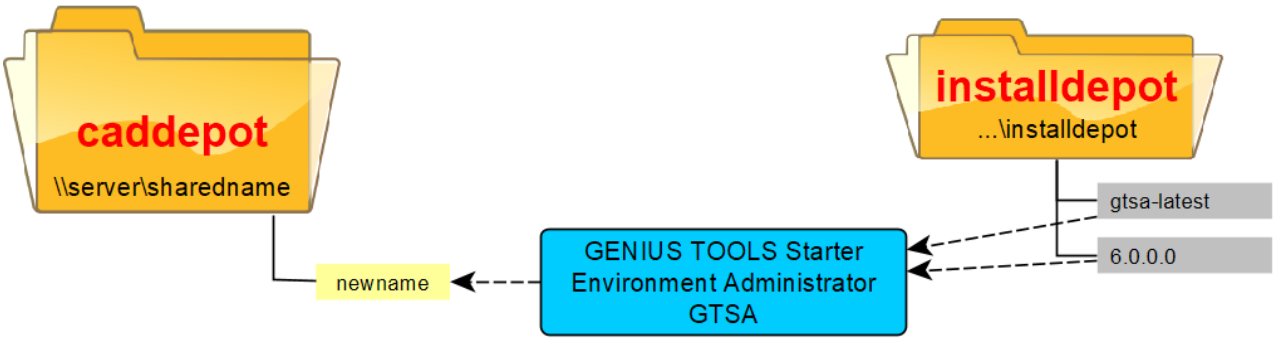

Creating a new operating environment

The *Create* wizard lets you start a new, empty operating environment. The new operating environment consists of the directory structure, the GENIUS TOOLS Starter software, and an empty *sut.db* database. Use the *Add Components* wizard to add toolkit applications, data packages or standard projects later on.

Creating a new operating environment with GENIUS TOOLS Environment Administrator




Step 1: Define operating environment

Click the *Create* symbol on the start page to start the *Create* wizard. GENIUS TOOLS Environment Administrator will find the Caddepot and Installdepot directories automatically if the software is started from a default installation setup. Verify the paths for the Caddepot and Installdepot directories and enter a name for the operating environment (1). The name is used to create a directory of the same name in the Caddepot and setting up the directory structure there.

Click *Next* to go on to the next page of the *Create* wizard.

© 2021 INNEO Solutions GmbH

Please note: You can change the name of an operating environment at any time by just renaming its directory.

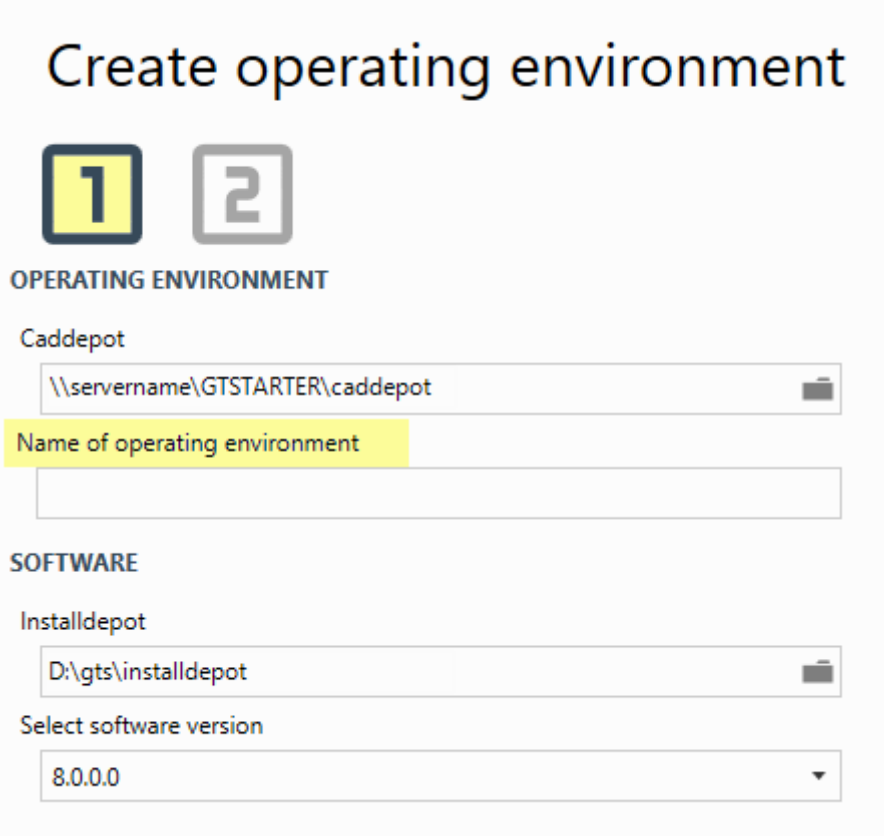

Creating an operating environment: Step 1

Step 2: Configuring license and synchronization server

The users need to connect to GENIUS TOOLS License Manager in order to use a full version of GENIUS TOOLS Starter App.

Under *Source* (1), enter the name of the server that GENIUS TOOLS Starter App should access to get licenses.


Under *Synchronization server settings*, define the synchronization to keep data current on the local application computers and give the users fast access to any changes.

The synchronization will not update any toolkit applications as long as Creo is running. For this to work, the toolkit applications have to be located in the *apps* directory of GENIUS TOOLS Starter.

Enter the synchronization server path (2) down to the Caddepot directory. GENIUS TOOLS Starter App will add the name of the current operating environment automatically. This makes it possible to copy operating environments, for example to create test environments quickly without having to change the settings. Also, operating environments can be renamed without having to change the settings.

© 2021 INNEO Solutions GmbH

Under *Target directory* (3) enter the location where the Cadpool directory should be located on the application computers. If the Cadpool directory is not present yet, GENIUS TOOLS Starter will try to create it. It will also create a subdirectory named for the operating environment. You can use absolute paths or environment variables that are available on the application computers.

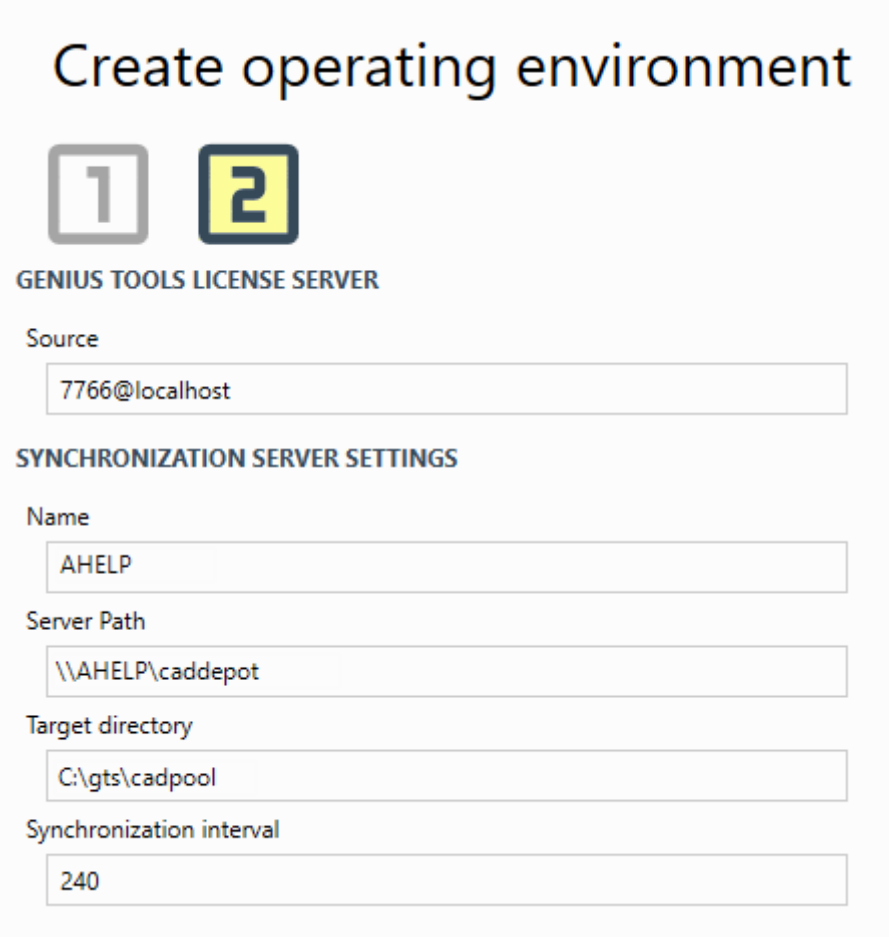

Arbeitsumgebung erstellen: Schritt 2

Enter the synchronization interval (4) in minutes. The synchronization interval defines how often GENIUS TOOLS Starter App should synchronize the data from the central Caddepot. A synchronization is also run automatically when GENIUS TOOLS Starter App is started.

The best setting for the synchronization interval depends on how often the data is changed and on how many GENIUS TOOLS Starter Apps are running at the same time. If there are many changes to the data, the interval should be shorter. If many users are accessing the Caddepot, the interval could be longer to avoid too much network load due to frequent synchronizations.

Please note: If you do not configure the synchronization settings, Environment Administrator will create a local operating environment without synchronization.

© 2021 INNEO Solutions GmbH

4.3 Adding components to an operating environment

GENIUS TOOLS Starter App can provide the users with data and toolkit applications in addition to the configuration for the desktop application. The Startup TOOLS product package contains operating environments with stardardized templates and add-on applications for Creo (GENIUS TOOLS for Creo). When you create a new operating environment, an empty directory structure is created and the GENIUS TOOLS Starter software is copied. Use the *Add Components* functionality to add components from the Installdepot directory to an operating environment.


Examples for operating environment components:

– GENIUS TOOLS for Creo

– project configuration directory for Creo applications


– project data directory for Creo applications

Please note: In order to add components, you first have to install them into the Installdepot directory from the data setups.

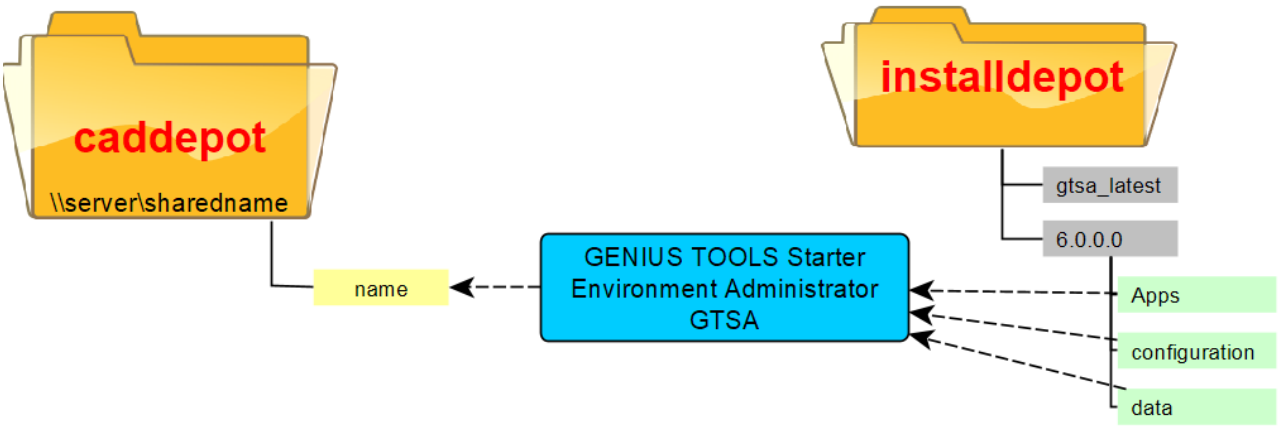

Adding components to an operating environment

Adding components to an operating environment

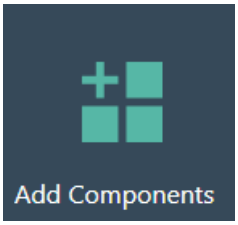

Step 1: Select operating environment


On the first page of the *Add components* wizard, first select the operating environment (2) you want to configure from the Caddepot (1).

© 2021 INNEO Solutions GmbH

Then select the software version (4) to use from the Installdepot (3). Select a software version that has the required components installed.

Select the CAD application (5) that you want to use the new components with.

Please note: You can add components to the *apps* directory. GENIUS TOOLS Starter App will synchronize additional applications from this directory. Additional apps are only synchronized when Creo is not running. For example, you can add toolkit applications to the *apps* directory. However, there is no way to automatically check which Creo versions the applications are valid for.

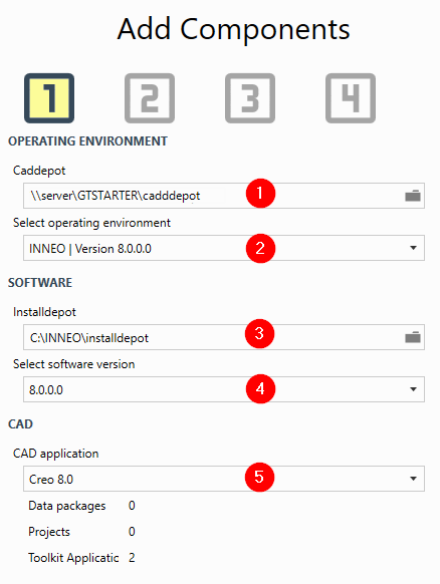

Step 2: create projects

You can create standard projects that you can later modify using GENIUS TOOLS Project Configurator.

Set or unset the check boxes (1) to define which standard projects should be created. You will be unable to check the box of a project, if the project already exists in the directory *configuration* > *projects*. It cannot be created twice.

Double-click on the project name (2) or display name (3) if you like to edit it.


© 2021 INNEO Solutions GmbH



Step 3: add data packages

Set or unset the check boxes (1) to define which data packages should be added to the operating environment. You will be unable to check the box of a data package, if the the package already exists in the directory *data*. It cannot be created twice.

Double-click on the display name (2) to change it. The display name is used as the name of the subdirectory under *data*. If a subdirectory with this name already exists, the data package cannot be copied to the operating environment.

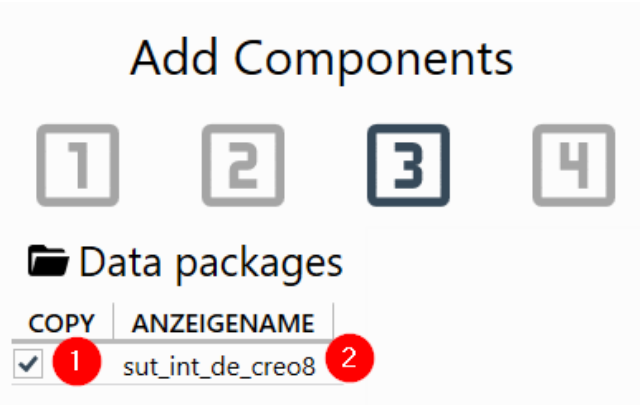


Step 4: add toolkit applications

Set or unset the check boxes to define which toolkit application should be added to the operating environment. You will be unable to check the box of an application, if the it already exists in the directory *apps*. IThe application cannot be created twice.

GENIUS TOOLS Environment Administrator tries to read the name of the toolkit applications from a *protk.dat* file. If Environment Administrator finds the name in this file, it is displayed in the *Add components* wizard. You cannot edit the target directory. The target directory will have the same name as the source directory under *apps* in the Installdepot. If a directory with this name already exists in the operating environment, the toolkit application cannot be copied.

© 2021 INNEO Solutions GmbH

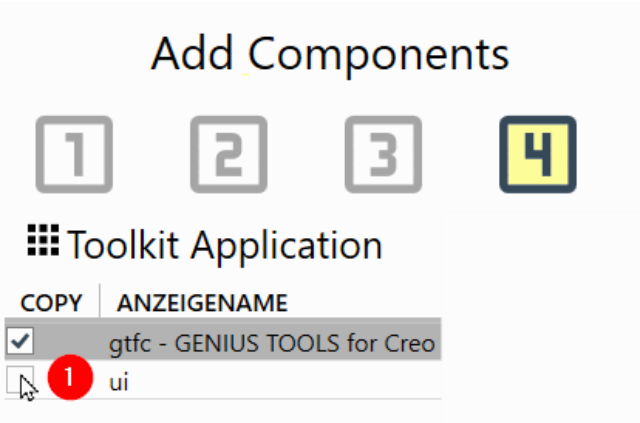

To finish the *Add components* wizard, click *Add*. All components that you have specified are added to the operating environment.


4.4 Updating software

All software setups in GENIUS TOOLS Starter unpack their data to the Installdepot directory. You can use the *Update* function of GENIUS TOOLS Environment Administrator to update the software for GENIUS TOOLS for Creo and GENIUS TOOLS Starter App in the operating environments. This two-step process allows you to make targeted adjustments to individual operating environments. You can upgrade or downgrade to any version that is available in the Installdepot.

If you have configured synchronization, the configuration for the software update will be made in the background without the users having to stop Creo or GENIUS TOOLS Starter App. The new software version will then be used on the application computer after the next synchronization.

If you update GENIUS TOOLS for Creo, the synchronization on the application computers will only be run after Creo has been closed.

Warning: If you are using network mode, make sure that all users have closed GENIUS TOOLS Starter App and Creo, as the software cannot be updated otherwise.

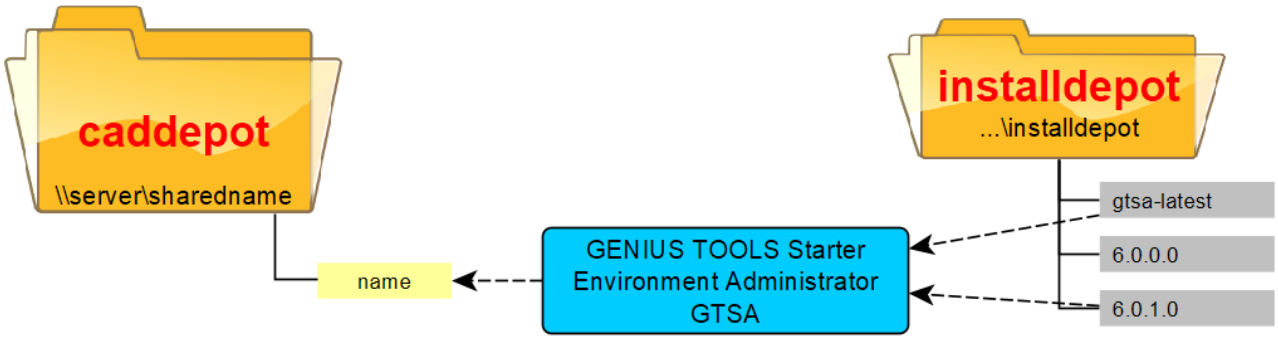

Updating an operating environment

© 2021 INNEO Solutions GmbH


Updating software in an operating environment

In GENIUS TOOLS Environment Administrator click the *Update* button.



On the first page of the *Update* wizard, first select the operating environment you want to configure (1). Then select the new software version (2). Under *Update settings* (3) you can select the components to update: GENIUS TOOLS Starter, GENIUS TOOLS for Creo, or both. Click *Update* to start the update process.

The update process writes a new software directory for GENIUS TOOLS Starter and updates the database. For GENIUS TOOLS for Creo, the *gtfc* directory under *apps* is re-written. The *main.cfg* file remains untouched.

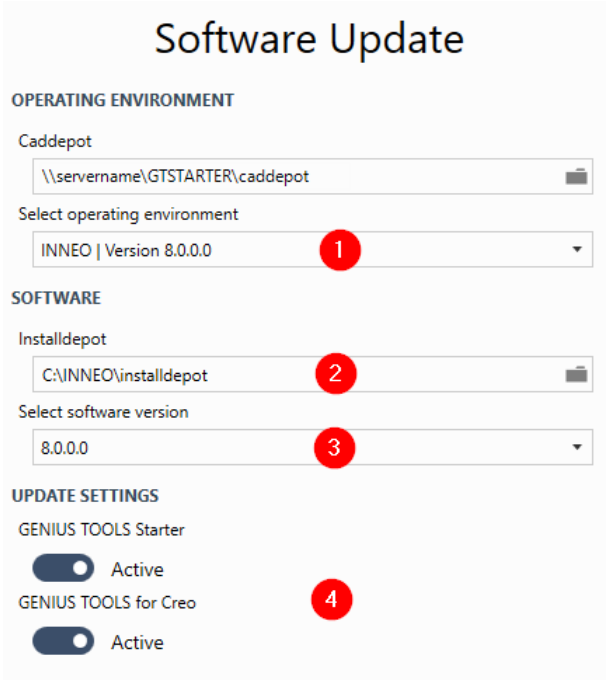

4.5 Modifying settings

Some settings for operating environments can only be changed using the *Modify* wizard in GENIUS TOOLS Environment Administrator. The most important one of these setting is the Caddepot path. You can also edit synchronization and licensing settings.

© 2021 INNEO Solutions GmbH


Please note: GENIUS TOOLS Environment Administrator only changes the standard settings, that is, the settings for the group *Standard*. If you have made individual settings for a user group or computer group, you have to change these settings using GENIUS TOOLS Project Configurator (*Configuration* > *(select group)* > *Synchronization*)

Modify settings for an operating environment



Step 1: Change license server

On the first page of the *Modify* wizard, you can change the license server settings. First, select from the Caddepot (1) the operating environment (2) you want to modify. Then enter the license server settings (3). You can also deactivate the license server (4). An inactive license server will not be used by GENIUS TOOLS Starter App. This means that you can only use home-use or educational Creo licenses.

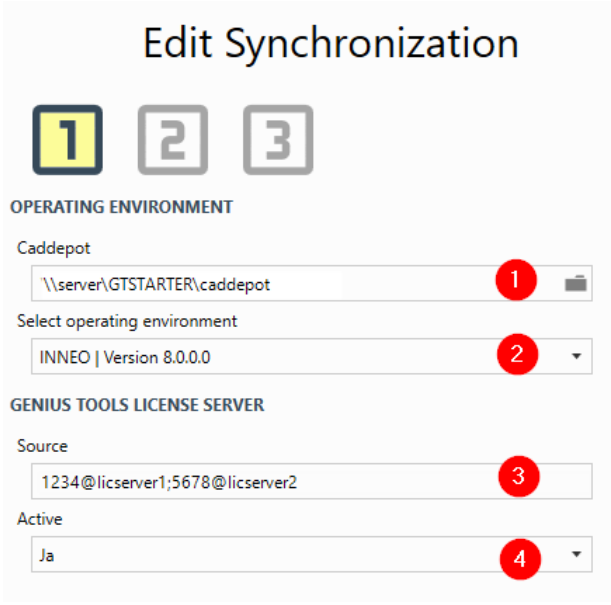


Step 2: Change synchronization settings

The server path is always given down to the Caddepot directory (1).

When *Checksum verification* (2) is active, a checksum for each copied file is calculated and compared to the checksum of the file on the server. If the checksum differs, the server is queried for the file again. If checksum verification is not active, the files will just be copied.

Warning: Activating checksum verification often allows significantly shorter synchronization times.

© 2021 INNEO Solutions GmbH

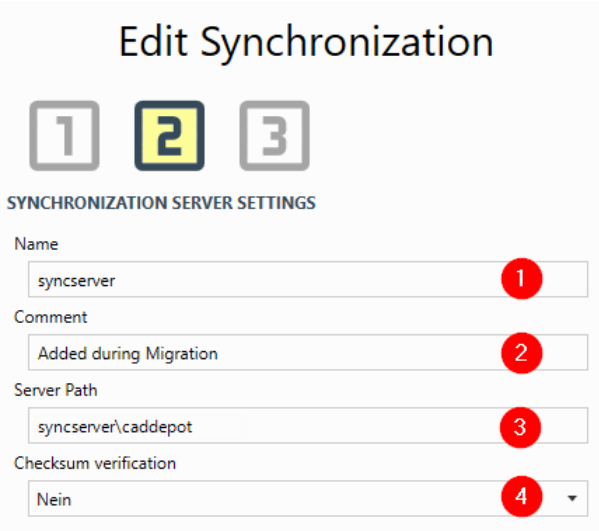

If you have moved your synchronization server, proceed as follows:

1. Create a new Caddepot and adapt the synchronization server settings in the *new* operating environment there.
2. Test the new operating environment to make sure that the configuration settings are correct and the synchronization works.
3. In the *old* operating environment, switch the synchronization server to the new Caddepot
   When GENIUS TOOLS Starter App is restarted, it switches to the new Caddepot and synchronizes the data from there.

Warning: Please be extremely careful when changing the Caddepot directory in an operating environment that is already in use on multiple application computers. Wrong settings can lead to the application computers not synchronizing. However, it is still possible to change the Caddepot directory when you move a server. Create a new Caddepot, then set the synchronization path in the old operating environment to the new Caddepot. The application computers will switch over accordingly.

Step 3: Edit settings for the application computers

You can activate or deactivate synchronization between the central Caddepot and the application computer Cadpool directories (1).

Warning: If you deactivate synchronization, you permanently separate the application computers from the Caddepot. Any changes you make to the central synchronization settings or the operating environment will not be transferred to the application computers!

Under Target directory (2), specify the location of the Cadpool directories on the application computers, where the local copy of the operating environment is stored. If the Cadpool directory cannot be found, GENIUS TOOLS Starter will try to create it. A


© 2021 INNEO Solutions GmbH

subdirectory named after the operating environment will also be created. You can use absolute paths such as *C:\Cadpool*, or environment variables that are available on the application computers, e.g., *%GTS_SYNC_DESTINATION%*.

Under Synchronization interval (3), specify an interval in minutes. The synchronization interval determines how often GENIUS TOOLS Starter App will synchronize the data. A synchronization is also run automatically when GENIUS TOOLS Starter App is started.

The best setting for the synchronization interval depends on how often the data is changed and on how many GENIUS TOOLS Starter Apps are running at the same time. If there are many changes to the data, the interval should be shorter. If many users are accessing the Caddepot, the interval could be longer to avoid too much network load due to frequent synchronizations.

If Start client with Windows (4) is activated, GENIUS TOOLS Starter App will be started automatically when the operating system is started on the application computers.

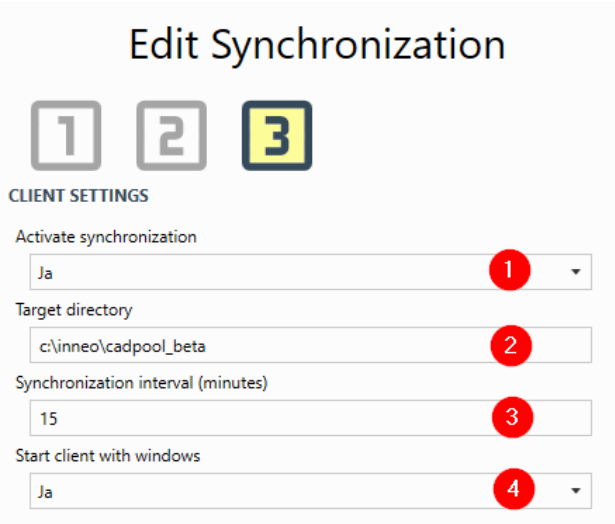

4.6 Migrating a Startup TOOLS environment

Startup TOOLS 2018 and earlier (20xx) are based on a different technology than GENIUS TOOLS Starter. When you migrate a Startup TOOLS environment, the data from the specified Startup TOOLS directory are copied to the Caddepot. The database also has to be migrated and the directory cleaned up. Cleaning up the directory during migration will never lead to any data loss, as you make any changes to the copied data only, while the original data remain untouched. This also means that you can work in parallel on GENIUS TOOLS Starter and on your previous Startup TOOLS 20xx environment.

The migration workflow helps you to use your current configuration setup as a base for the GENIUS TOOLS Starter configuration. However, manual adaptations may be necessary.

Please note: GENIUS TOOLS Starter does not contain web server functionality. If you require a web server in your new setup, please install and maintain it separately.

© 2021 INNEO Solutions GmbH

Migration from Startup TOOLS 20xx to GENIUS TOOLS Starter 6.0.


For a thorough description of the migration process, please refer to the separate document *Startup TOOLS-Migration to version 6*. The following section gives an overview of the steps that you have to take in the GENIUS TOOLS Environment Administrator software. We recommend working on a copy of the Startup TOOLS directory.

Preparations

1. Copy the Startup TOOLS directory. Stop the Startup TOOLS service while you copy.

Please note: If you cannot stop the Startup TOOLS service for copying the directory, the ABS databases cannot be copied. Starting with version 6, only one configuration database is supported. Rename one of the **abs.bak* files in the copied data to *sut.abs*.


2. We recommend cleaning up the copied Startup TOOLS directory and deleting any data that is not required anymore, such as setups, backup copies etc. This reduces the amount of data that will have to be synchronized with the application computers.

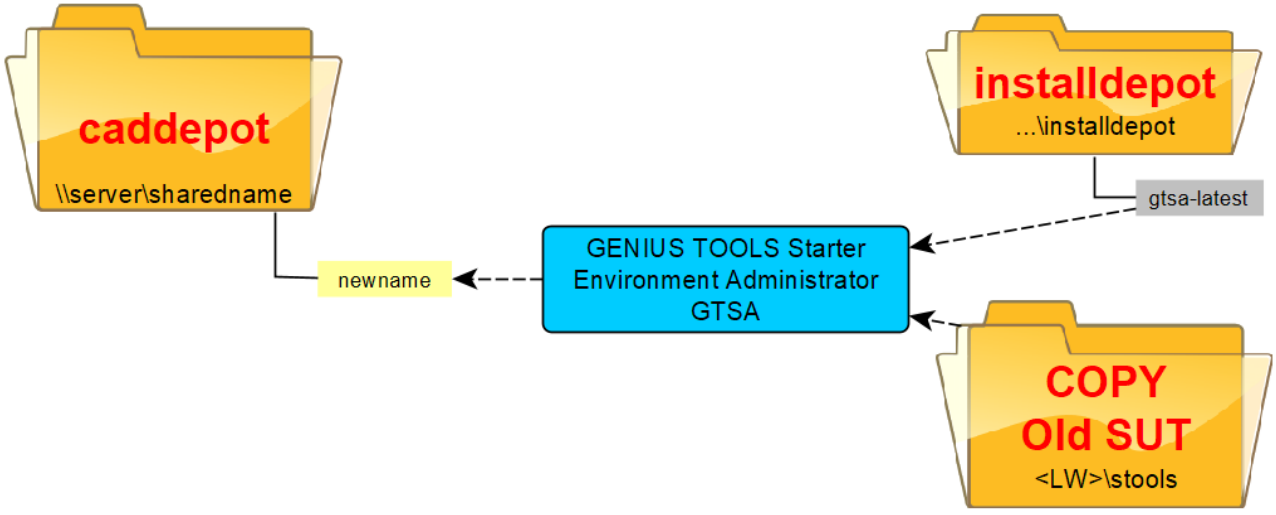

Migrating a Startup TOOLS 20xx environment

3. Run the software setup for Startup TOOLS 6.x on the administration computer (example installation path *C:\gtstarter*). This step creates the directories *caddepot*, *installdepot* and *mediadepot*.
4. Open GENIUS TOOLS Environment Administrator and run the function *Startup TOOLS Migration*.


© 2021 INNEO Solutions GmbH

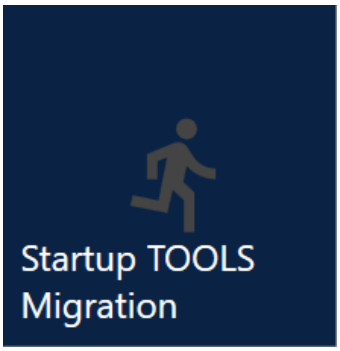

Step 1: Select database

Under Installation directory (1), enter the path to your copy of the old Startup TOOLS installation (stools). The migration wizard will automatically find the Startup TOOLS installation if it is on the same computer, but you can correct the directory or select another one.

Under Select database (2), select the database *sut.abs*. If there is no database with this name, select a database that should be converted.

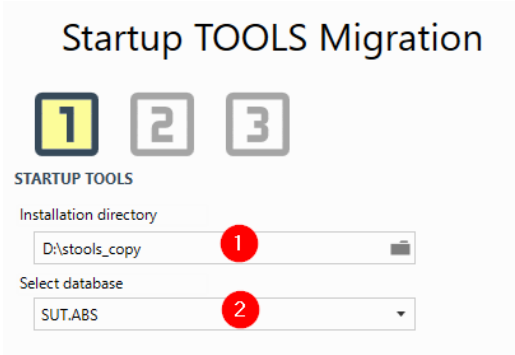


Step 2: Target of migration

On the second dialog page, specify the Caddepot directory (1) and the operating environment name (2), e.g., *company-name*. The migration will be done in the operating environment defined here. First, the old Startup TOOLS data will be copied to the operating environment, then the migration proper will be run. In this way, any changes are made to the copied data in the new operating environment, and the original data remains untouched.

Under Software, select the Installdepot directory (3) from which to get the GENIUS TOOLS software. Then select the GENIUS TOOLS Starter version (4) to be used.

© 2021 INNEO Solutions GmbH

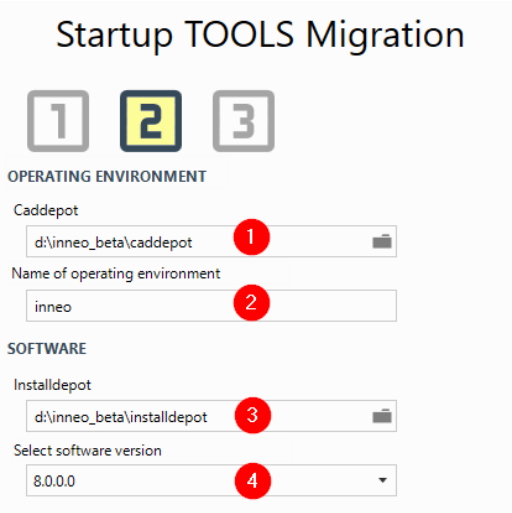

Step 3: Configuring license and synchronization server

Under Source (1), enter the license server that GENIUS TOOLS Starter App should use to get licenses. Enter the license server in the format *Port@ServerName*, e.g., *7766@<license_server_name>*.

Configure the synchronization between the administration computer (Caddepot) and the operating environment on the local computer (Cadpool). Synchronization to the local Cadpool allows fast access to the local files. Note that toolkit applications will not be synchronized while Creo is running. For this to work, the toolkit applications have to be located in the *apps* directory of GENIUS TOOLS Starter.


Enter a descriptive server name (2), then enter the path to the Caddepot on the administration computer (3).

Specify the synchronization interval (4) in minutes. The synchronization interval defines how often GENIUS TOOLS Starter App runs the data synchronization. Additionally, the synchronization is run automatically when GENIUS TOOLS Starter App is started.

The best setting for the synchronization interval depends on how often the data is changed and on how many GENIUS TOOLS Starter Apps are running at the same time. If there are many changes to the data, the interval should be shorter. If many users are accessing the Caddepot, the interval could be longer to avoid too much network load due to frequent synchronizations.

Under Target directory (5), enter the location where the Cadpool directory should be located on the application computers. If the Cadpool directory is not present yet, GENIUS TOOLS Starter will try to create it. It will also create a subdirectory named for the operating environment. You can use absolute paths or environment variables that are available on the application computers.

© 2021 INNEO Solutions GmbH

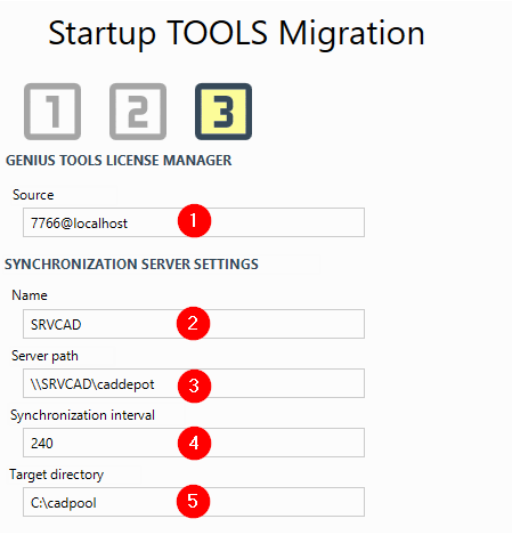

Click *Migrate* to run the migration process. Afterwards, the Caddepot will contain a migrated operating environment that contains all previously present project configurations.

Please note: The time required for the migration process depends on the amount of data and on the network connection speed.

4.7 Converting a Startup TOOLS database

In GENIUS TOOLS Environment Administrator use the function *Convert Startup TOOLS Database* if you are using a GENIUS TOOLS Starter or Startup TOOLS version 6.0.0.0 or later and want to convert a database from a previous Startup TOOLS version (up to 2018). If you are not using a ≥ 6 version of GENIUS TOOLS Starter or Startup TOOLS yet, use the function *Startup TOOLS-Migration* instead.



When you convert a Startup TOOLS database, a single ABS database is converted into the new SQLite format without copying the directory structure.


The *Convert* wizard corresponds to steps 1 and 3 of the *Startup TOOLS Migration* wizard.

Step 1: Select database

Under Database directory (1), enter the path to your copy of the old Startup TOOLS installation (stools). The convert wizard will automatically find the Startup TOOLS installation if it is on the same computer, but you can correct the directory or select another one.

© 2021 INNEO Solutions GmbH


Under Select database (2), select the database *sut.abs*. If there is no database with this name, select the database you wish to convert.

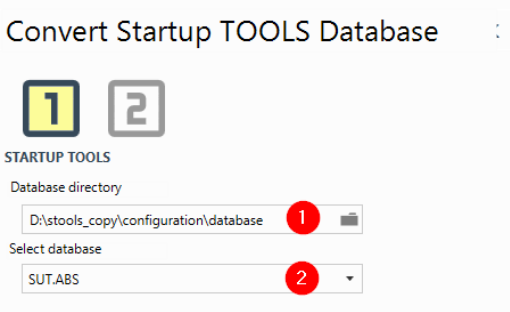

Step 2: Configuring license and synchronization server

Under Source (1), enter the license server that GENIUS TOOLS Starter App should use to get licenses. Enter the license server in the format *Port@ServerName*, e.g., *7766@<license_server_name>*.

Configure the synchronization between the operating environment of the Caddepot and that of the local computer (Cadpool). Enter a descriptive server name (2), then enter the path to the Caddepot on the administration computer (3).

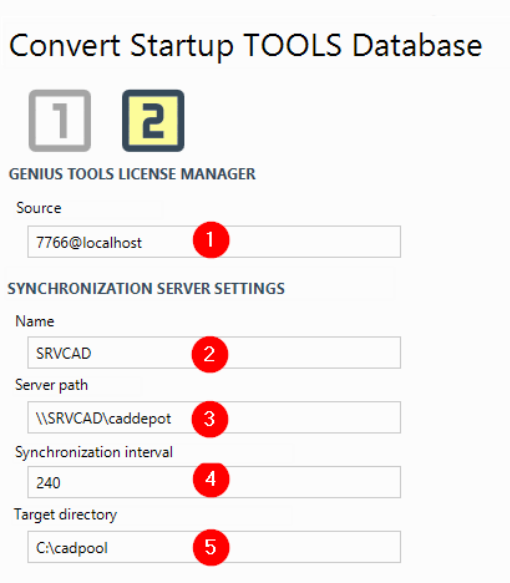

Specify the synchronization interval (4) in minutes. The synchronization interval defines how often GENIUS TOOLS Starter App runs the data synchronization. Additionally, the synchronization is run automatically when GENIUS TOOLS Starter App is started.

The best setting for the synchronization interval depends on how often the data is changed and on how many GENIUS TOOLS Starter Apps are running at the same time. If there are many changes to the data, the interval should be shorter. If many users are accessing the Caddepot, the interval could be longer to avoid too much network load due to frequent synchronizations.

© 2021 INNEO Solutions GmbH

Under Target directory (5), enter the location where the Cadpool directory should be located on the application computers. If the Cadpool directory is not present yet, GENIUS TOOLS Starter will try to create it. It will also create a subdirectory named for the operating environment. You can use absolute paths or environment variables that are available on the application computers.

Click *Convert* to start the database conversion.

© 2021 INNEO Solutions GmbH

5 GENIUS TOOLS Project Configurator

GENIUS TOOLS Project Configurator is the central application for configuring operating environments. Use GENIUS TOOLS Project Configurator for managing all project and operating environment settings.

A **project** is a collection of application properties such as project directory, data directory and license. Projects allow users to start an application with a specific set of configuration settings. A project combines locally available data with a centrally managed configuration settings.

Projects are opened by the users via GENIUS TOOLS Starter App, and edited by the administrator using GENIUS TOOLS Project Configurator. Each project is saved in a work environment under *cadpool* > *configuration* > *projects*, e.g., *project_creo6p_en*.

When a project is started, the configuration settings in the standard directory as well as in the directories for the unit and for the user are considered.

Project Configurator manages project information by modifying the central *sut.db* database. The project configuration for each operating environment can be synchronized to the Creo application computers.

Please note: Make sure that Project Configurator has write access to the central database in the Caddepot so that it can store configuration settings.

Project Configurator is not synchronized immediately. When you make changes in Project Configurator, you have to save them to the database before they become available to GENIUS TOOLS Starter App. After you have saved your changes, the configuration can be updated in GENIUS TOOLS Starter App by manually refreshing the available projects or by running the synchronization process.

5.1 Starting GENIUS TOOLS Project Configurator


GENIUS TOOLS Project Configurator can be started from the installation computer as well as from any synchronized application computer. On the installation computer, Project Configurator is located in the Caddepot directory, on the application computers it is located in the Cadpool directory. In both cases, Project Configurator accesses the same central database in the Caddepot.

Starting Project Configurator on the installation computer

There are two ways to start Project Configurator:

© 2021 INNEO Solutions GmbH

1. Open GENIUS TOOLS Starter app via *<caddepot>\<environment>\software\GTS.exe*. In the user menu, select *Project Configurator (F8)* or press *F8*.

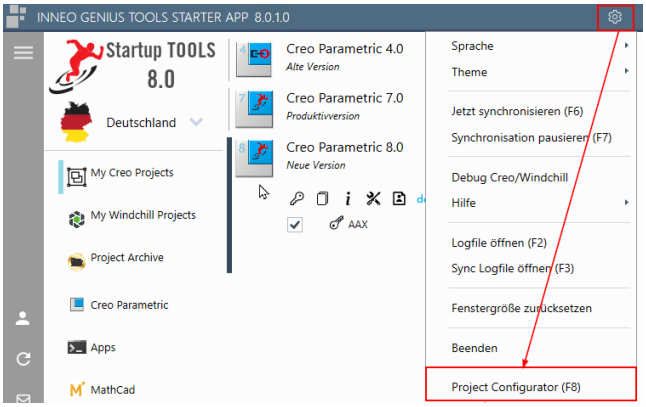

User menu in GENIUS TOOLS Starter App

1. Start Project Configurator directly using a start parameter:
   `<cadpool>\<environment>\software\GTS.exe -gts:admin`

Starting Project Configurator on an application computer

There are two ways to start Project Configurator:

1. Open GENIUS TOOLS Starter app via *<caddepot>\<environment>\software\GTS.exe*. In the user menu, select *Project Configurator (F8)* or press *F8*.
2. Start Project Configurator directly using a start parameter:
   `<cadpool>\<environment>\software\GTS.exe -gts:admin`

The item *Project Configurator* in the user menu can be hidden for the users (see Assigning access rights 154) so they cannot access Project Configurator from the user interface.

The start parameter `-gts:admin` cannot override any access restriction for the Project Configurator.

5.2 User interface and navigation

GENIUS TOOLS Project Configurator opens on the *Configuration* page of the main menu (1) with the *Groups* and *Settings* lists. Use the *Configuration* page to manage global settings or settings specific to units (with subscription license), computer groups and user groups.

The main menu is located on the left side of the Project Configurator window and lets you access the pages *Configuration*, *Projects*, *Resources* and *Access rights*. You can show or hide descriptions for the menu items by clicking the menu symbol. For more information on the main menu pages, please refer to Main menu 54.


Note that GENIUS TOOLS Project Configurator, in contrast to previous Startup TOOLS versions, does not save changes immediately. To save any changes, click *Save* in the

© 2021 INNEO Solutions GmbH

sidebar. Until you save, any changes can be undone by selecting *Revert changes* in the user menu (2).

The Project Configurator window also has a sidebar (3) and footer (4).

The following sections contain information on the main menu pages and the other control elements.

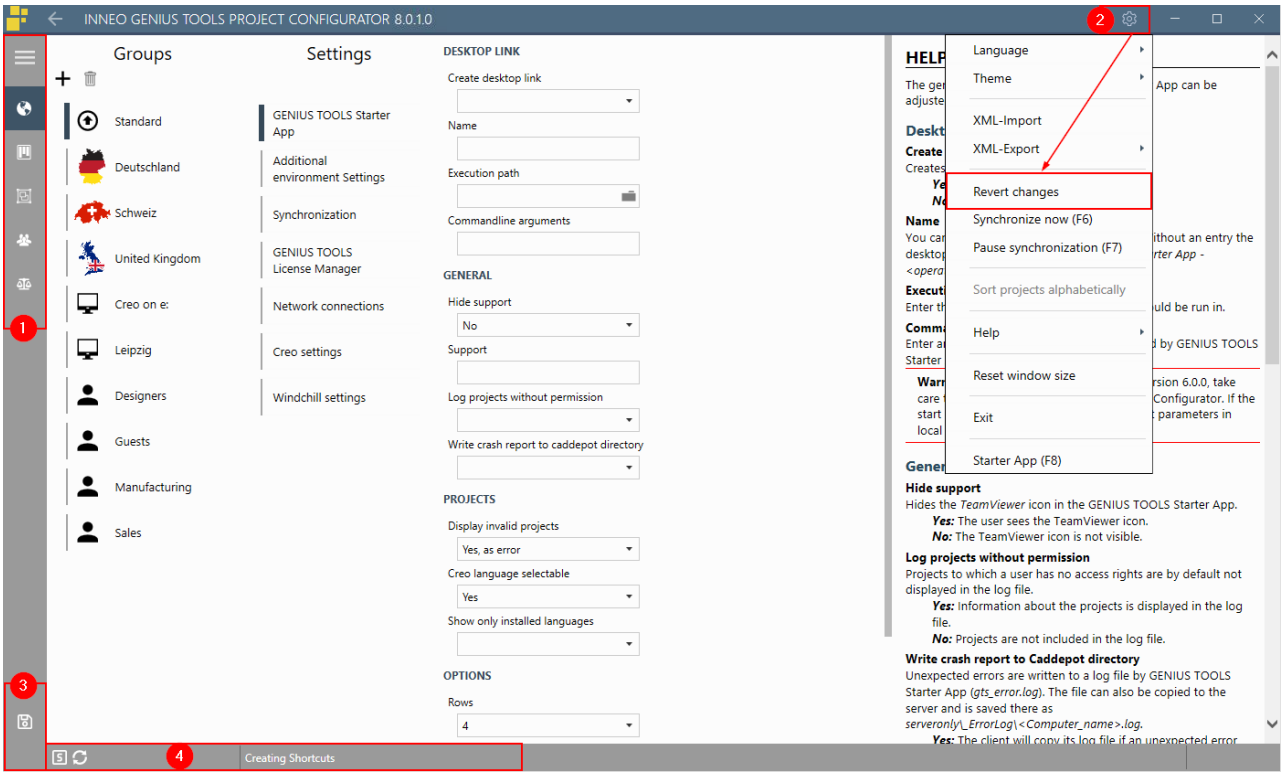

5.2.1 Main menu


The main menu is located on the left side of the Project Configurator window and lets you access the pages *Configuration*, *Projects*, *Project collections*, *Resources* and *Access rights*.

5.2.1.1 Configuration page

Use the *Configuration* page (1) to manage global settings or settings specific to units (with subscription license), computer groups and user groups.

Select a group (2) to show the settings list (3) applicable to this type of group. There are three types of groups: computer groups, user groups and units. Units can be presented by a customized symbol.

© 2021 INNEO Solutions GmbH

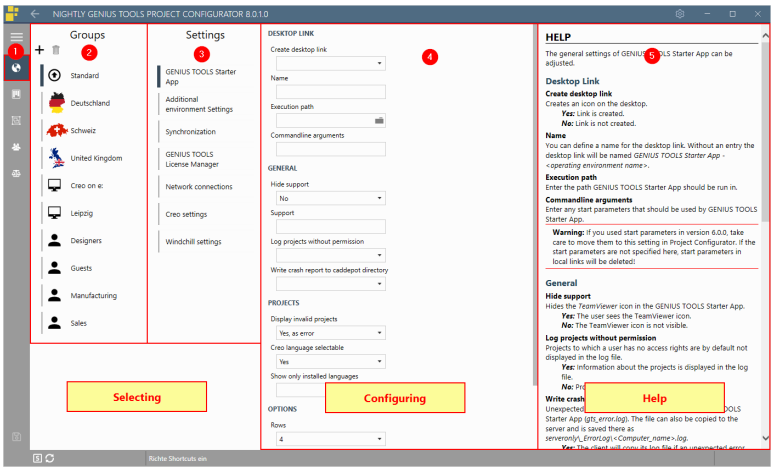

Project Configurator user interface

The *Standard* group is used for managing global settings. In a newly created database, only the Standard group will be available.

The *Settings* list (3) contains the following items. Click one of the list items to open the corresponding settings pane (4) and help (5).

– GENIUS TOOLS Starter App 157

– Additional Environmental Settings 78

– Synchronization 78

– GENIUS TOOLS License Manager 79

– Network Connections 80

– Creo Settings 81

– Windchill Settings 88

To create a new group, click *Create*. For more information, please refer to User and computer groups, units 102.

For more information on the individual settings, please refer to Configuring global environments 77 and Configuring heterogeneous environments 90.

5.2.1.2 Projects page

In the Projects page you can create and configure projects. The list of Application types (1) contains configurable Creo applications, e. g. Creo Parametric, Creo Direct.

In the project area (2) you can view and create projects. Click on a project to open the settings pane for this project with the tabs *Creo, Start, Windchill* and *Environment*. For information on how to create projects and define their settings, please refer to Creating projects 109.

© 2021 INNEO Solutions GmbH




Projects page

Projects can either be made accessible to all users of the operating environment or be managed by using project groups, see Working with project groups 142.

Projects without an available license can either be hidden from the user's view in GENIUS TOOLS Starter App or can be marked with a warning color, see chapter GENIUS TOOLS Starter App. 77

5.2.1.3 Projects collections page

In the main menu item *Project Collections*  you can organize individual projects into project collections, which are displayed to users in GENIUS TOOLS Starter App.

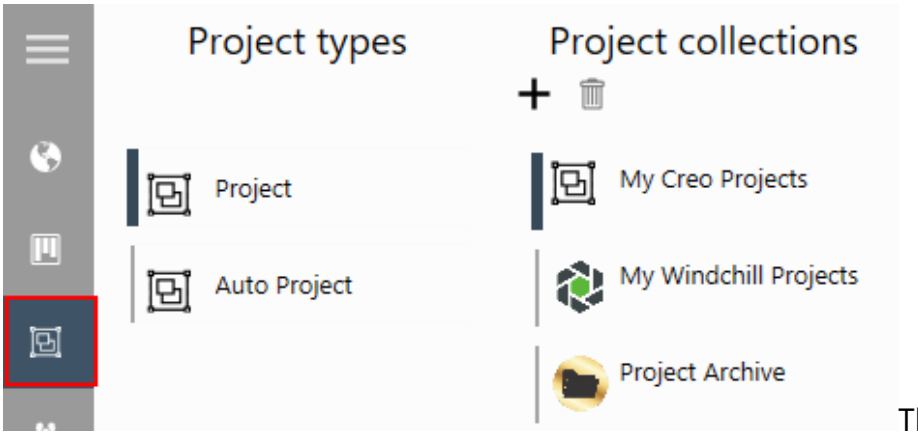

There are company-specific project collections, which can contain any projects, as well as application-specific project collections, which contain all projects of an application. Consult the chapter Project collections. 139

In addition, the display of Auto projects 141 can be modified here.

Auto projects are automatically generated projects which cannot be configured. They can be started from GENIUS TOOLS Starter App. Auto projects are generated from the following applications: MathCad, Illustrate, Creo Elements/ Direct Modeling, Creo Elements/ Direct Drafting, Schematics, Keyshot and GeomagicDesignX.

© 2021 INNEO Solutions GmbH

5.2.1.4 Resources page

Use the *Resources* page  to manage the following resource types:

- Roles 69
- Users 63
- Computers 66
- Creo startkeys 73
- Creo license servers 74
- Synchronization servers (satellites) 75

See the chapter Creating Resources 62 for more information.

5.2.1.5 Access rights page

In the *Access rights* page two types of groups are managed:

Access groups

Access groups are used for giving access rights to a defined group of users, which are grouped together in a role.

Function access groups are located under *User rights* on the *Function access* page, see the chapter on Access rights 152.

Project groups

Project groups are used to manage the access to a defined number of projects. The members are also grouped together in a role.

Manage access to projects by configuring project access groups under *User rights* (2) on the *Project access* (4) page. For more information on project access groups, please refer to Working with project access groups 142.

5.2.2 User menu

To access the user menu, click on the gear symbol in the header.



Language: user interface language

You can switch the user interface language between English, German and French at any time. The language setting is saved and will be used the next time you start the software.

© 2021 INNEO Solutions GmbH

The software first starts with a German user interface if the operating system locale is set to German. For all other locale settings, the software first starts with an English user interface.

Theme: user interface color settings

The software comes with the color themes *Blue*, *Light* and *Dark*. You can switch themes at any time. The theme setting is saved and will be used the next time you start the software.

XML Import

You can import users and computers from an XML file. If the users or computers are assigned to a group that has not yet be configured, the group will also be created during the XML import. When you click XML Import in the user menu, a dialog for selecting the XML file is displayed.

XML Export

You can export users and computers into an XML file, for example in order to make batch changes quickly, then re-import the file.

Revert changes

Project Configurator does not save changes immediately, so you can revert any unsaved changes. If you do so, Project Configurator reloads the database and re-initializes all input fields.

To revert changes, select *Revert changes*. A warning dialog is displayed. Confirm the warning (*Reload database. Changes will be deleted.*) with *Yes*.

To save changes, click *Save* in the sidebar.

Synchronize now (F8)

GENIUS TOOLS Starter immediately synchronizes from the central Caddepot, regardless of the specified synchronization interval, and loads any updated files into the Cadpool.

Pause synchronization (F7)

GENIUS TOOLS Starter stops synchronization until it is re-started by the user. The setting *Pause synchronization* is saved for the next start and marked by a yellow bar below the header. When the user resumes synchronization, they are asked whether they want to resume and overwrite local changes.

Pause synchronization if you want to prevent local changes from being overwritten until they have been added to the Caddepot by your administrator.

© 2021 INNEO Solutions GmbH

Please note: Your administrator defines whether you can pause the synchronization. If you are not allowed to pause the synchronization, the item *Pause synchronization* is not displayed in the menu.

Help

– **Help (F1):** Opens the software help for GENIUS TOOLS Starter. The help corresponds to this document.

– **Support:** Opens contact details for the technical support of INNEO or a company-specific link which can be set up in GENIUS TOOLS Project Configurator. Inneo's support can be reached by email, telephone and with Teamviewer.

– **Info (F12):**. Shows the current GENIUS TOOLS Starter version.

Reset window size

Restores the default size of the dialog window of GENIUS TOOLS Starter. The window can be adjusted to all sizes.

Exit

Closes the software. Clicking on the *Close* button (X) in the header will minimize the program window.

Starter App

Switch to the GENIUS TOOLS Starter App.

5.2.3 Sidebar

The sidebar contains the function *Save Database* .

Save database


Any settings you make in GENIUS TOOLS Project Configurator will only become active after you save them. Any changes are saved to the database *sut.db* on the installation computer (path: *\caddepot\<arbeitsumgebungsname>\configuration\database)*

As long as you have not saved your changes to the database, you can revert them by selecting *Revert changes* in the user menu .

5.2.4 Footer

The footer in Project Configurator contains the following information.

© 2021 INNEO Solutions GmbH

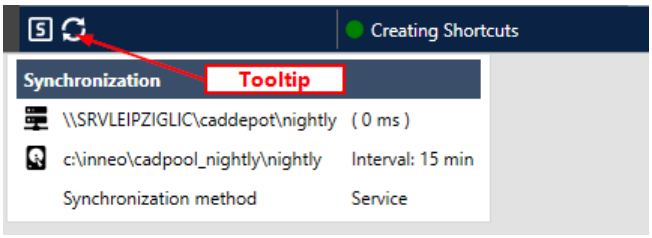

Data base mode

The state of the database is displayed in the footer:

– Database requires a subscription license. Projects cannot be started when working with a permanent license.

– Database has been created with a permanent license. It can be accessed by both permanent and subscription license.

Synchronization mode and synchronization status

To the right of the icon for the license mode, information on the synchronization mode is displayed. For more information, please refer to Procedures and synchronization 13.

– Synchronization is active
Hover the mouse on the synchronization symbol to see the paths to the Caddepot and to the local operating environment as a tooltip.

– Synchronization inactive
The synchronization of toolkit applications is paused as long as Creo is running

– Local operating environment
There is no synchronization; you work on a local directory

Running applications

If a supported desktop application is running, the application icon will be displayed in the footer.

– Creo Parametric

Messages

– Red = Error message. Please troubleshoot.

– Yellow = Warning message. Please decide whether you want to keep on working regardless.

– Green = Last synchronization run was completed without errors.

– Green / Creating shortcuts: This message shows that the desktop link for GENIUS TOOLS Starter App has been updated.

© 2021 INNEO Solutions GmbH

5.3 Role-based permission concept

Starting with version 6.0.1, GENIUS TOOLS Starter comes with a role-based permission concept. A role is a group of users and/or computers that can be assigned project access and access to functionality of GENIUS Starter App in one step.

First, you have to configure roles by defining role membership on the *Configuration* page under *Roles*. Then you can use the role in the following ways.

1. Control project access

Assign the role to a project access group, see Working with project access groups 142.

2. Control access to functionality of the GENIUS TOOLS Starter App

Assign the role to a function access group, see Access rights 152.

3. Defining assignment to a unit

Assign the role to a unit. You can then define unit-specific settings for the Creo applications.

You can use roles to the best effect when you are also using LDAP queries to define assigned users instead of creating all users individually. This functionality is only available with subscription licenses. With an LDAP query, you can assign users dynamically. You can also still assign users and computers statically, meaning that user and computer entries need to be updated individually. Computers can only be assigned statically, not via LDAP queries. For more information on using LDAP user management, please refer to Accessing Windows user management 71.

You find a graphic on the use of roles in the next chapter (Graphical overview: groups in Project Configurator) 61.


5.4 Graphical overview: groups in Project Configurator

The graphic gives an overview of the relationships between different types of resources and groups and also shows where the corresponding configuration is located in Project Configurator: *Configuration*, *Projects*, *Resources* and *Access rights* pages.

1. Individual computers and users can be assigned to a role as well as to a computer group or user group.
2. A role is a group of computers and users that are either assigned individually and statically via Project Configurator, or, in the case of users, dynamically via an LDAP query.

© 2021 INNEO Solutions GmbH

3. A unit always has an assigned role.
4. An access group always has an assigned role.
5. A project access group has an assigned role and one or more assigned projects.
6. Groups and units can be configured with specific settings.

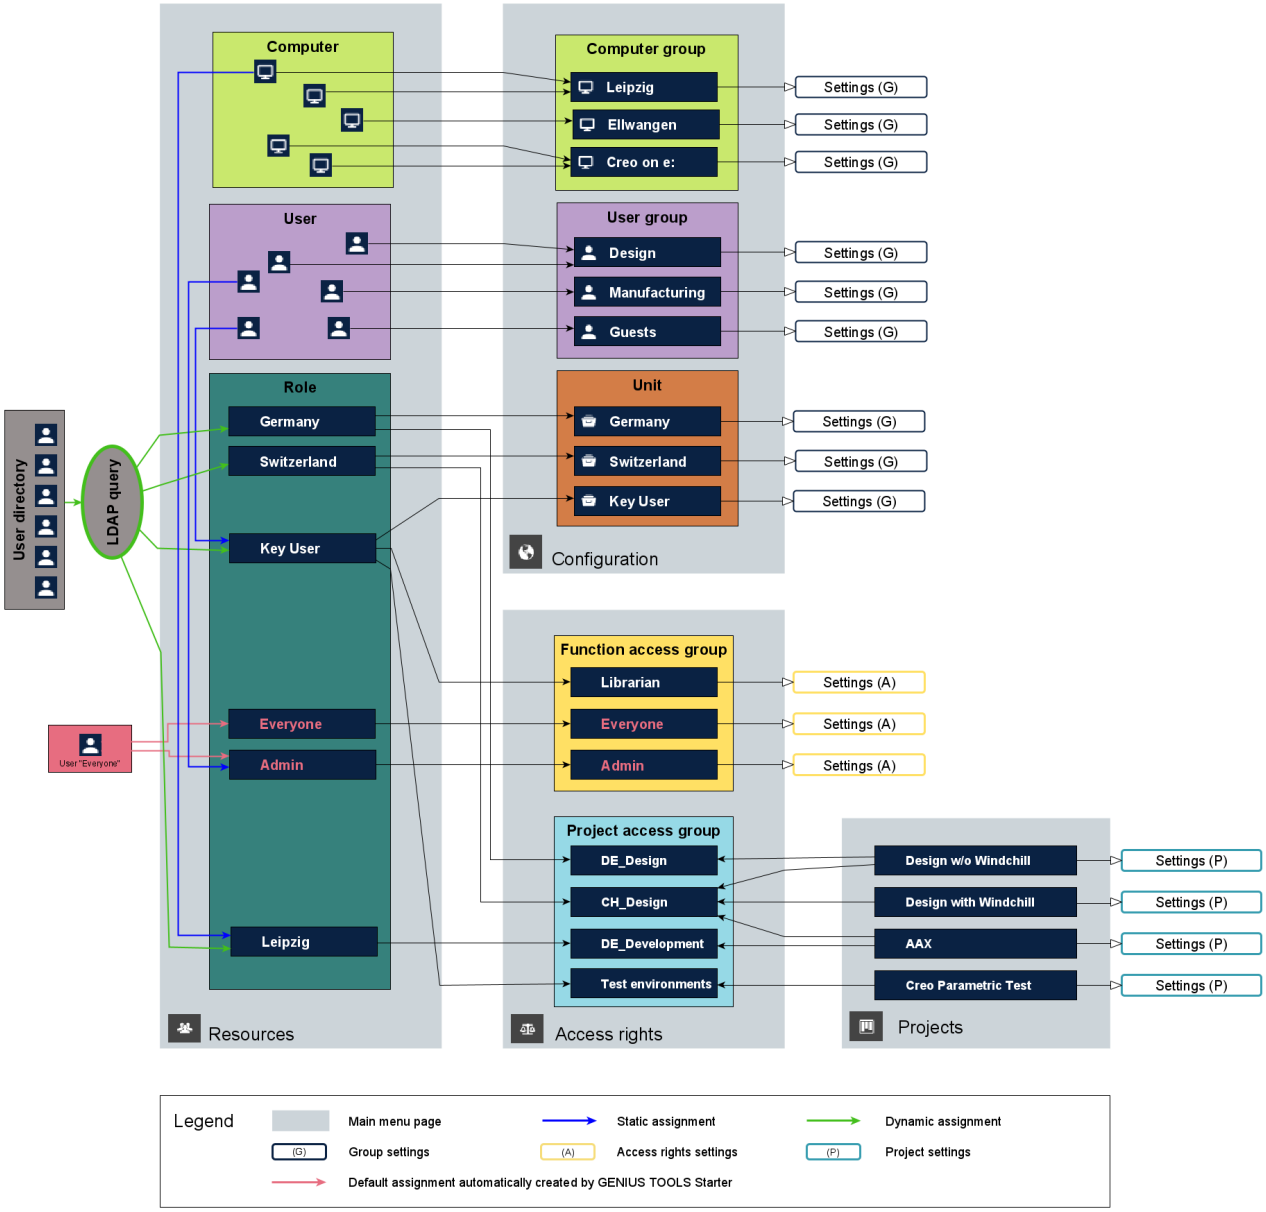

5.5 Creating resources

Use the *Resources* page to manage users, computers, roles, Creo startkeys, as well as license and synchronization servers.

Roles are a new concept in GENIUS TOOLS Starter version 6.0.1. A role is a group of users, computers, and (with a subscription license) LDAP queries 71 that can be assigned project

© 2021 INNEO Solutions GmbH

access and access to functionality of GENIUS Starter App in one step. To assign a user or a computer to a role, the user or computer already has to be present in Project Configurator.

To create new users or computers, use the sections *Users* and *Computers* on the *Resources* page. You can create users and computers manually or import a list, see Importing from Excel 67.

A unit is not considered a resource but a group. 102

To assign users or computers to groups or units, use the *Configuration* page, see Assigning elements to groups or units 104.


5.5.1 Creating users

To manage users, go to the *Resources* page and select *Users*. Each user is identified by their Windows user name.

You can switch between the card view (default) (1) and the list view (2), using the list symbols to the right of the search input box.
Project Configurator saves the active view. User images and assignment to a user group can only be edited in the list view.

▶ Card view

The color codes (3) let you check which access groups each user is assigned to. Click on the project symbol (4) to see a list of the projects visible for the user. Click on the access rights symbol (5) to see the function access rights assigned to the user.

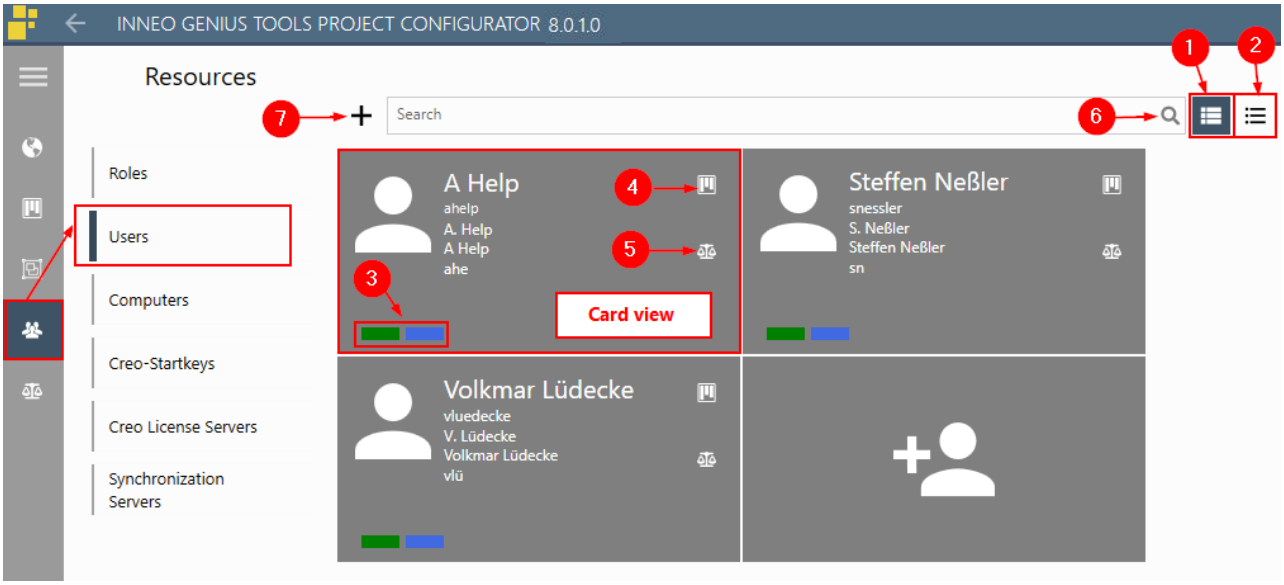

▶ Creating users

To create a user click the *Add* symbol (7) or click on the blank card (+).


© 2021 INNEO Solutions GmbH

▶ Searching for users


To find existing users, enter a search term in the search input field (6). A search term has to be at least three characters long.

▶ Editing users

To edit a user, double-click on a visiting card or use the list view if you wish to make several changes. You need to use the list view for defining a user image and for displaying and editing user group assignment.

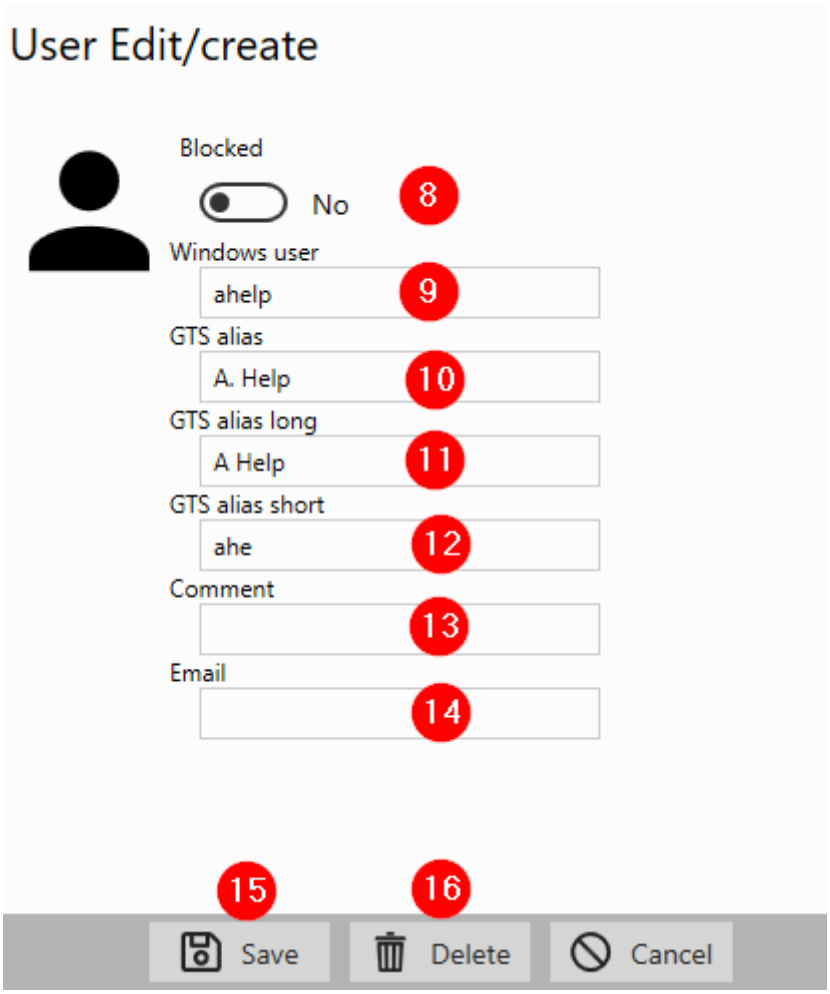

Card view > edit user

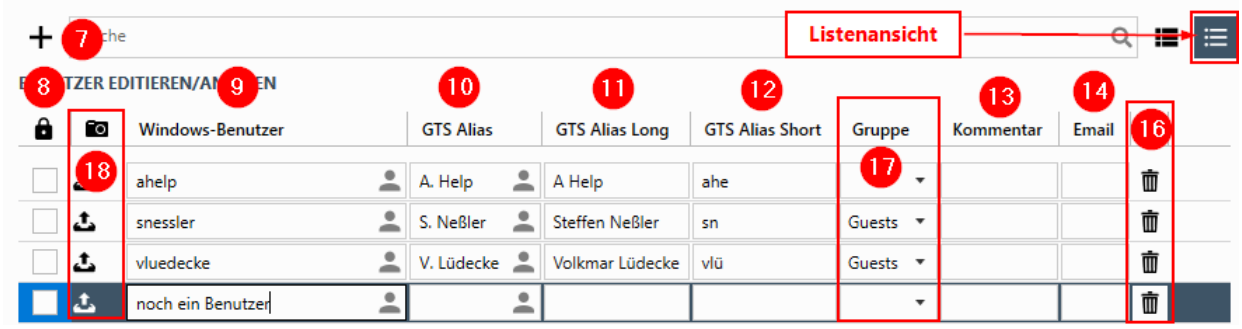

List view

© 2021 INNEO Solutions GmbH

Blocked (8)
You can block a user, which means that user group settings or role assignment will not be used.

Yes/set: User group settings or role assignment for this user will not be considered.
No/not set: User group settings and role assignment will be used.

Windows user (9)
Enter the Windows user name. If you are in the list view, you can get the Windows user name for the currently logged-in user by clicking on the person icon in the *Windows user* column.

GTS Alias (10)
Enter a GENIUS TOOLS Starter alias for the user, for use in additional applications. For example, the GTS alias is used in GENIUS TOOLS Parameter. If you do not specify an alias, the Windows user name will be set. If you are in the list view, you can get the Windows user name for the currently logged-in user by clicking on the person icon in the *Windows user* column. The GTS alias is available as an environment variable (`%GTS_USER%`) in Creo.

GTS Alias Long (11)
Long user alias. The long alias is available in Creo via the environment variable `%GTS_USERLONG%`.

GTS Alias Short (12)
Short user alias. The short alias is available in Creo via the environment variable `%GTS_USERSHORT%`.

Comment (13)
Enter an optional comment.

Email (14)
Enter the user e-mail address.

Save (15)
Click *Save* to save your changes to the user data.

Delete (16)
Click *Delete* in the card view or the recycle bin icon in the list view to delete the user data.

Group column (17)
The group column is only available in list view. It shows the user group the user is assigned to. You can edit the user group assignment. Alternatively, to assign a user to a user group, go to *Configuration* > *(Select group)* > *Name / members*. (See also Assigning users to user groups 104.)


Hint: You can change the configuration for a user by assigning them to a user group.

Camera column (18)
The camera column is only available in list view. Double-click on the upload symbol in the camera column to add a user image.

© 2021 INNEO Solutions GmbH

5.5.2 Creating computers

To manage users, go to the *Resources* page and select *Computers*. Each computer is identified by its Windows computer name.

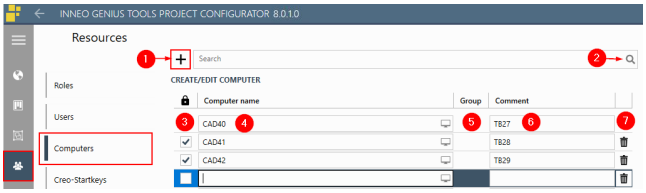

▶ Adding computers

To add new computers, click on the Add symbol (1) or write in the last input field of the list.

▶ Searching computers

To find existing computers, enter a search term in the search input field (2).

▶ Editing computers

Blocked (3)
You can block a computer, which means that computer group settings or role assignment will not be used.

Yes/set: Computer group settings or role assignment for this computer will not be considered.

No/not set: Computer group settings and role assignment will be used.

Computer name (4)
Enter the Windows computer name. You can get the Windows user name for the current computer by clicking on the computer icon in the *Computer name* column.

Group (5)
The group column shows the computer group the computer is assigned to. To assign a computer to a computer group, go to *Configuration* > *(Select group)* > *Name / members*. (See also Assigning computers to computer groups 105.)

Hint: You can change the configuration for a computer by assigning it to a computer group.

Comment (6)
Enter an optional comment on the computer.

Delete (7)
Click the recycle bin icon to the right of the *Comment* column to delete a computer.

© 2021 INNEO Solutions GmbH

5.5.3 Importing from Excel

GENIUS TOOLS Starter comes with an XML interface to import a large number of users into the GENIUS TOOLS Starter database in one step. If you want to import users or computers, please follow the procedure described below.

Format of the Excel table for importing users or computer

The directory *caddepot\serveronly\tools\XML-Import* contains two Excel tables – *computer.xls* and *user.xls* – that serve as templates for creating XML files for import into the GENIUS TOOLS Starter database.

Please note: The first line in the Excel table is the header line. The header line must not be removed and has to be formatted in all capital letters.

	A	B	C
1	COMPUTERNAME	DESCRIPTION	COMPUTERGROUP
2	CAD12	TB1	PROE on C:
3	CAD13	TB1	PROE on C:
4	CAD14	TB1	PROE on C:
5	CAD15	TB2	PROE on E:
6			
7			
8			

Example Excel table for importing computers

	A	B	C	D
1	USERNAME	ALIAS	USERGROUP	DESCRIPTION
2	meier	Meier	SUT	Bielefeld
3	mueller	Mueller	SUT	Ellwangen
4	schulze	Schultze	SUT	Leipzig
5				
6				

Example Excel table for importing users

Enter the name of the computer or user in the first column.

You can use the following columns.

For computers:

– COMPUTERNAME (mandatory)

– DESCRIPTION

– COMPUTERGROUP

For users:

– USERNAME (mandatory)

– ALIAS

© 2021 INNEO Solutions GmbH

– ALIASLONG

– ALIASSHORT

– USERGROUP

– DESCRIPTION

– EMAIL

Please note: A USERGROUP or COMPUTERGROUP that does not yet exist will be created on import.

Creating an XML file from the Excel table

After filling in the Excel table, export it from Excel as CSV (comma-separated value) file.

Beispiel: Content of a CSV file with a computer list:

COMPUTERNAME;DESCRIPTION;COMPUTERGROUP
CAD12;TB1;CREO on C:
CAD13;TB1;CREO on C:
CAD14;TB1;CREO on C:
CAD15;TB2;CREO on E:

Please note: The separator character used by Excel depends on your locale. GENIUS TOOLS Starter supports comma or semicolon as the separator character. You cannot use either commas or semicolons in the contents of the columns! Please also refer to Changing the separator for XML conversion 69.

The directory *caddepot\serveronly\tools\XML-Import* contains two batch scripts for converting the CSV files into the XML import format. Use *computer.bat* for converting computer lists and *user.bat* for converting user lists. The CSV file has to be called *computer.csv* or *user.csv* and be located in the same directory as the batch script. When you run the batch script, the XML import file will be written out as *computer.xml* or *user.xml* in the same directory.

The XML files created by the batch scripts can now be imported into GENIUS TOOLS Project Configurator. Open Project Configurator, go to the user menu and select *XML import*. Select an XML import file. You will be asked whether you want to delete existing users or computers. Make your decision. Confirm the import with *Yes*.

The imported users and computers are now available on the *Resources* page under *Users* or *Computers*. If the import has created one or more user or computer groups, the groups are available on the *Configuration* page in the groups list.

© 2021 INNEO Solutions GmbH

Changing the separator for XML conversion

The separator character used by Excel for CSV export depends on your locale. You can define the separator character in the batch scripts for CSV-to-XML conversion (*computer.bat* or *user.bat*) as follows. Comma and semicolon are supported as separator characters (sep) by default.

```
csv2xml -v -s:computer.csv -t:computer.xml -sep:;,
-m:1 -xsl:./extend/mode1-stylesheet.xsl
-alias:eRoot=ROOT,eRecord=RECORD >>result.log
```

5.5.4 Default roles

To create roles, use the *Resources* page. There are two pre-configured roles *Everyone* and *Administrator* that you cannot delete.

The role *Everyone* contains all Windows user names known to the system. You can use the role *Everyone* to avoid having to manage all users manually in GENIUS TOOLS Project Configurator.

The role *Administrator* also contains all Windows user names known to the system in its default setting. This means that by default, every user is a member of the role *Administrator*. When you first use GENIUS TOOLS Project Configurator, assign some individual users to the role *Administrator* and remove the user entry *Everyone* for this role.

5.5.5 Creating roles

To manage roles, go to the *Resources* page  and select *Roles*.

In a next step, a role can be assigned to a unit, a project group or an access group, where configurations settings take place. (See also role-based permission concept 61.)

Click *Create (1)* to create a role. The roles *Everyone* and *Administrator* are pre-configured and cannot be deleted, see Default roles 69.

Hint: You can use the role *Everyone* in order to avoid configuring each individual user. By default, this role includes all users.

▶ Role

Role name
Enter a name for the role.

Comment
Enter an optional comment for the role.

© 2021 INNEO Solutions GmbH


5.5.6 Add users and computers to a role

You can add users and computers statically, i. e. the entries you assign to a role do not change automatically as is the case with an LDAP query 71.


Please note: To assign a user or computer to a role, you have to first create an entry in *Resource* > *Users/Computers*.
A user/ computer can be assigned to several roles.

Follow these steps, using the example of user entries.

Step 1: Select the role (2) you wish to add users to in *Resources* > *Resource* > *Role*.

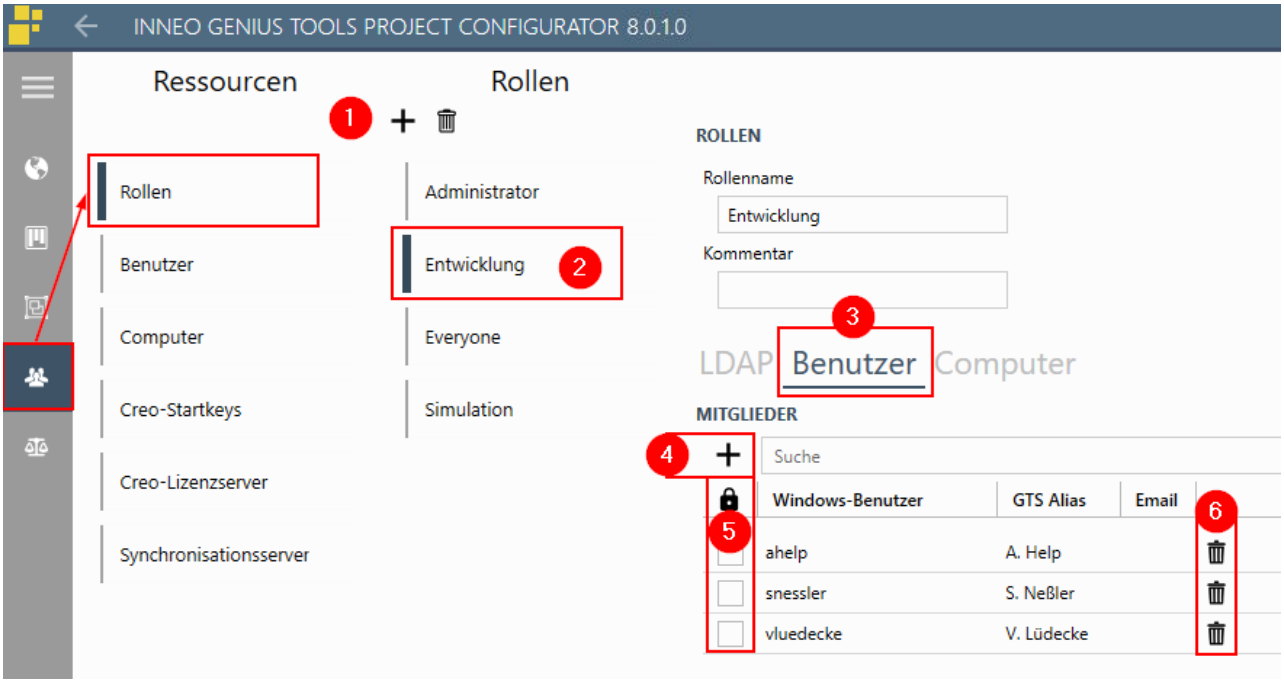

Step 2: In the *User* tab (3), click *add user (4)*. A new dialog box opens.

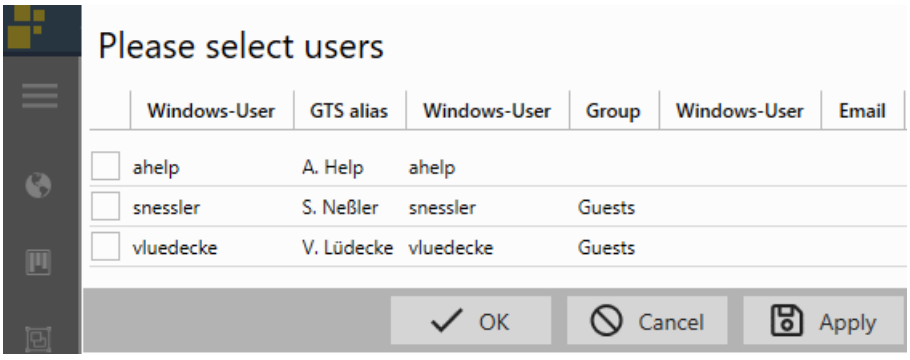

Step 3: Select the users you wish to add to the role. If the user you are looking for is not listed, it has not yet been created under *Resources* > *Users* > *Edit user*. (See also Creating users 63.)

You can select the entry *Everyone* that contains all users.

© 2021 INNEO Solutions GmbH

Step 4: Finish the dialog box by clicking on either:

– *Ok*: Add selected users and close dialog box,

– *Cancel*: Close dialog box without adding selected users,

– *Apply:* Add selected users without closing dialog box.

Blocked users (5)
A checked box means that a user is blocked, i. e. for this user neither any role nor any group configuration is applied. To change the blocked status, go to *Resources* > *Users* > *Edit user*. (See also Block users or computers 107.)

Delete user (6)
Click the recycle bin icon to the right of the user name.

5.5.7 Accessing Windows user management

If you are using a subscription license, you can access the Windows user management. This means that you can assign permissions to users and user groups that have been defined by your company's central IT management. GENIUS TOOLS Starter App uses live queries to make sure that user assignment is up-to-date. Thus, you do not have to create users locally.


Windows user management is accessed using LDAP queries. LDAP (lightweight directory access protocol) is a standard network protocol for accessing a distributed directory service.

Defining an LDAP query

To define an LDAP query, go to the *Resources* page, select the role that you want to assign a query to, and go to the *LDAP* tab.

Please note: An LDAP query is only available with a subscriptions license. When using a permanent license, the *LDAP* tab is not visible.

© 2021 INNEO Solutions GmbH

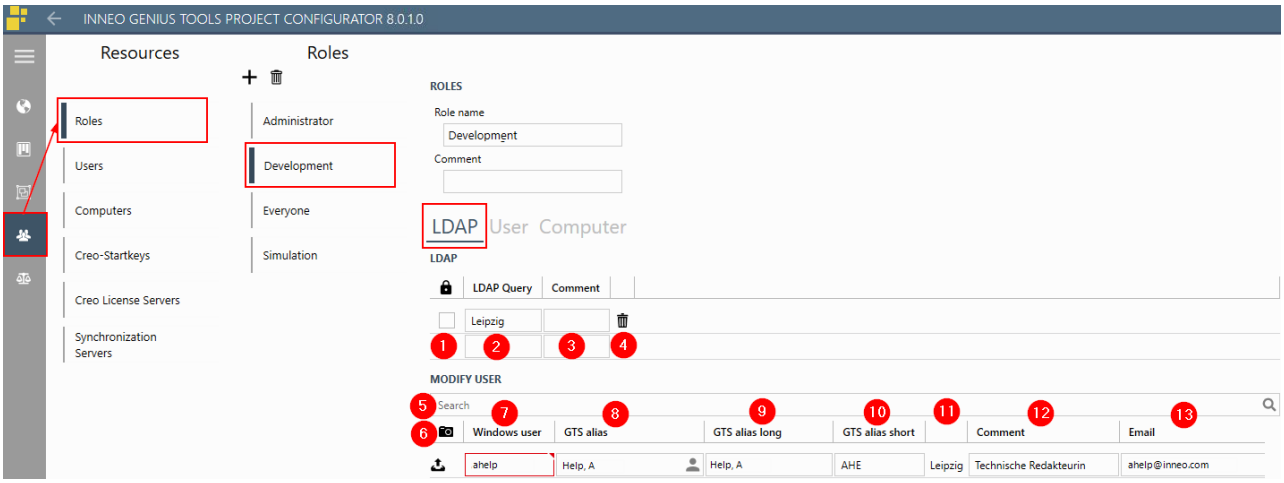

Defining an LDAP query

▶ LDAP

Blocked (1)
Use this to block the LDAP query.

LDAP query (2)
Enter the name of the LDAP group you want to use.

Comment (3)
Enter an optional comment for the LDAP query.

Delete (recycle bin icon,4)
Deletes the LDAP query from the configuration.

▶ Modify user

Please note: Changes you make here will not be written back to LDAP.

Search (5)

Camera column (6)
Double-click the upload icon in the camera column to add a user image.

Windows user (7)
Displays the Windows user name.

GTS Alias (8)
Enter a GENIUS TOOLS Starter alias for use in additonal applications. The alias is available in Creo via the environment variable `%GTS_USER%`. If you do not specify an alias, the Windows user name will be set

GTS Alias Long (9)
Long user alias. The long alias is available in Creo via the environment variable `%GTS_USERLONG%`.

© 2021 INNEO Solutions GmbH

GTS Alias Short
Short user alias. The short alias is available in Creo via the environment variable `%GTS_USERSHORT%`.

LDAP query
Displays the LDAP group.

Comment
Displays the staff position.


Email
Displays the e-mail address.

5.5.8 Creating Creo startkeys

A startkey is a configured start command that opens Creo with one or several defined licenses or license extensions. Startkeys are created in PTC's installation assistant when setting up or reconfiguring Creo, see Creo startkeys (PSF keys) 27.

An administrator can provide user with a choice of several Creo startkeys per project so that the quantity of projects can be minimized.

In the main menu item *Resources* enter a display name and a comment for a Creo startkey which users view in GENIUS TOOLS Starter App.

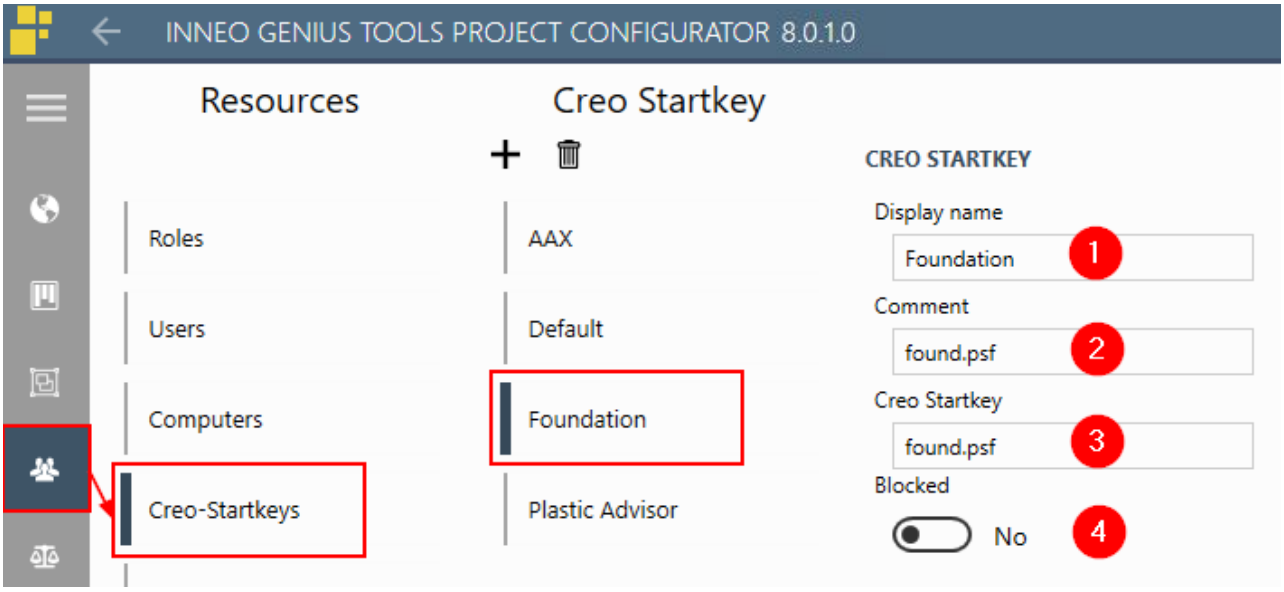

Managing Creo startkeys in main menu Resources

If several start keys have been created, users can select a key when starting a project in GENIUS TOOLS Starter App. The order of the start keys in the user selection field is that of the order in the dialog window and can be changed by using drag-and-drop.

Display name (1)
Enter a name for the license key for display in GENIUS TOOLS Starter App.

© 2021 INNEO Solutions GmbH

Comment (2)
Enter a comment for the license key for display in GENIUS TOOLS Starter App.

Creo startkey (3)
Enter the name of the license key. This is the name of the PSF file in the bin directory of PTC (e. g. *parametric.psf*).

Blocked (4)
Yes: The Startkey can neither be used nor selected by users.
No: The Startkey can be either directly used or selected by users in GENIUS TOOLS Starter App.

Startkeys can now be


– directly assigned to a project (see chapter Assigning Creo licenses to projects 120),

– assigned to groups or units which have access rights to particular projects (see chapter <%TARGETTITLE%>) and/or

– entered as a global standard (see Configuring global environments > Creo settings 83).

5.5.9 Creating Creo license servers

In the main menu *Resources* you can group one or several Creo license servers into one resource and then assign this resource *Creo License Server* to a project, unit or group.

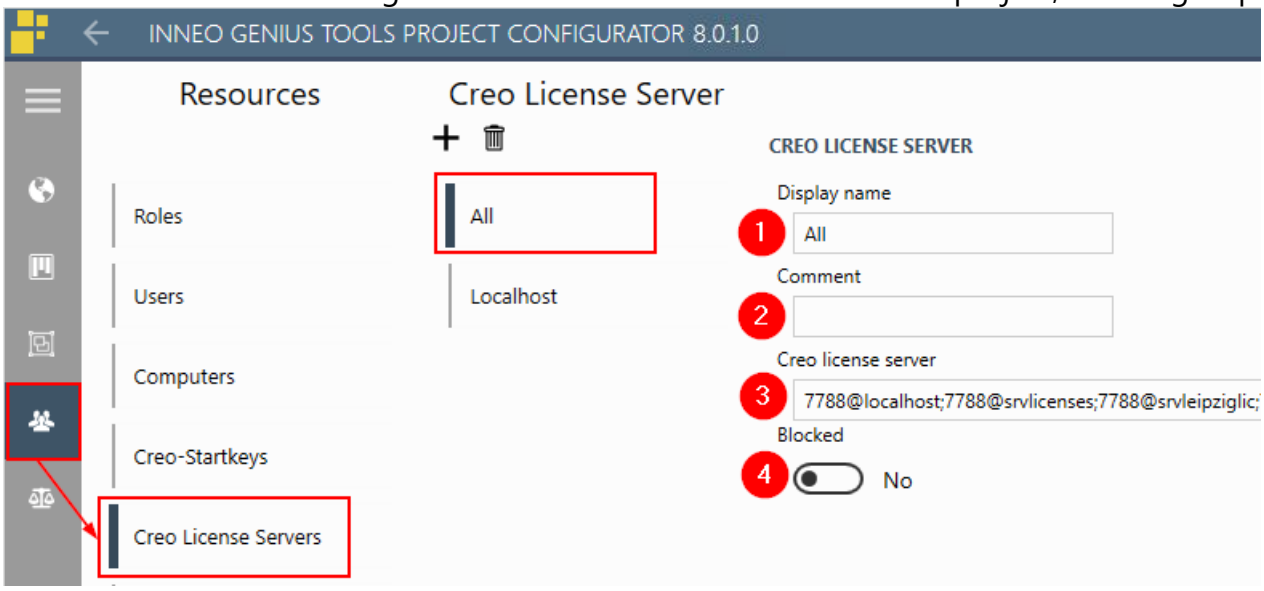

Managing Creo license servers in Resources

▶ Creo license Server

Display name (1)
Enter the name for display of the Creo license server(s).

Comment (2)
Enter an optional comment for the Creo license server.

© 2021 INNEO Solutions GmbH

Creo license server (3)
Enter one or more license servers in the notation `Port@Servername` (e.g. `7788@<licenseservername>`). Separate a series of license servers with semicolons.

Blocked (4)
Yes: The Creo license server cannot be accessed.

Warning: If you block the Creo license server here, the information from the Creo startkey (PSF file) will be used. Check whether these information are correct.

No: The Creo license server can be used.

The Creo license server(s) can now be assigned:

– directly to a project in *Projects* > *Tab: Creo* > *Section: Creo license server* (See chapter Settings for Creo projects 116)

– to groups or units, which in turn can be granted access to specific projects (See chapter Settings for Creo projects 116)


– to the global settings or a group or a unit in *Configuration* > *Creo settings* > *Tab: Application* > *Section: Creo license server* (See chapter Application 81)

5.5.10 Creating synchronization servers (satellites)

A **satellite** (also: synchronization or mirror server) is a computer or a sector of a computer onto which the state of one or more operating environments of a central main server is mirrored by data synchronization.

In the *Resources* page  you can add satellite servers that have been installed by using GENIUS TOOL Starter Service. (For information on how to set up satellites consult the document *GENIUS TOOLS Starter Installation.pdf* > chapter GENIUS TOOLS Starter Service.) The action *Create (6)* links GENIUS TOOLS Starter to GENIUS TOOL Starter Service and displays all satellites.

© 2021 INNEO Solutions GmbH

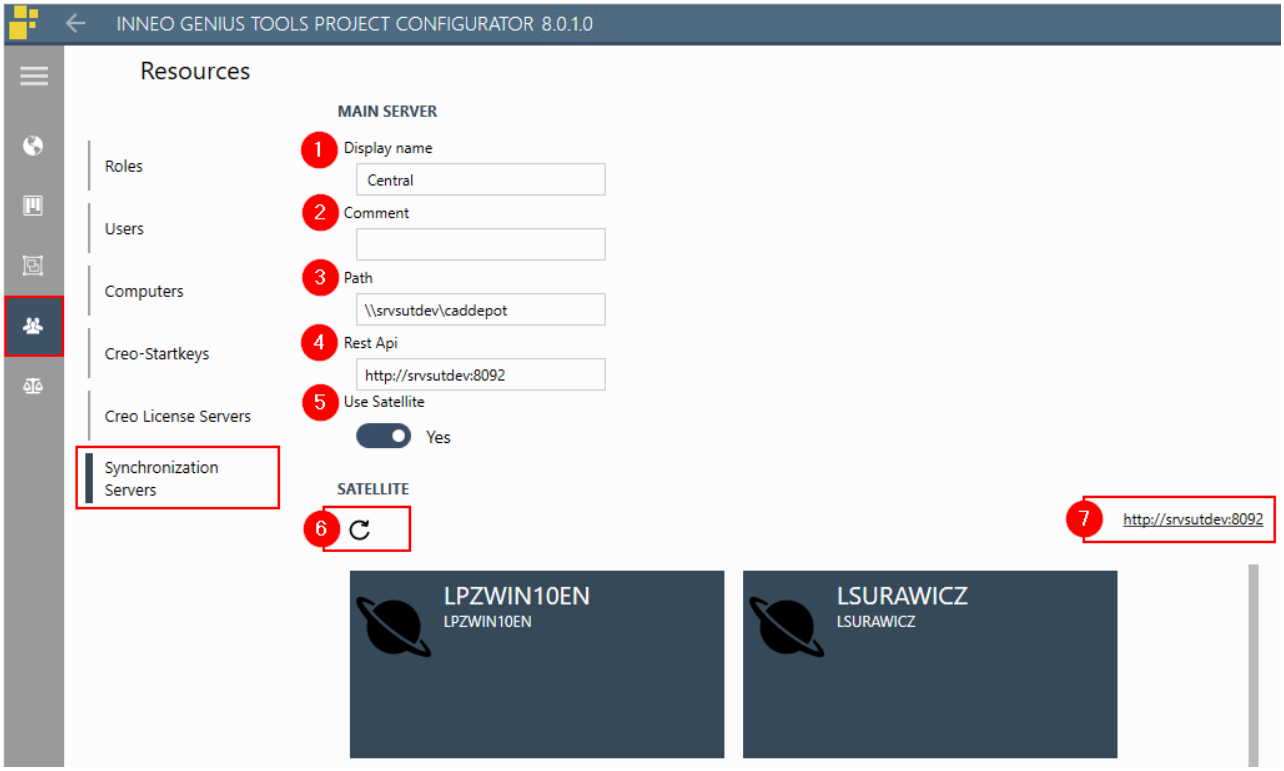

Linking satellites to GENIUS TOOLS Starter

▶ Main Server

Display name (1), **comment (2)** and **path (3)** to the caddepot of the main server (i. e. the source of synchronization) are taken from the settings entered in GENIUS TOOLS Environment Administrator. You can change the entries there with the *Modify* module.

Web URL (4)

Enter the URL in the notation `http://<mainservername>:<portnummer>`. The entries are defined in the configuration file of GENIUS TOOLS Starter Service. Path: *<mainserver>*\gtstarter\installdepot\gts-service-latest\conf\gt_service_*<mainservername>*.cfg

Use satellites (5)

Yes: The satellites listed below are used.

No: The satellites listed below are deactivated.

▶ Satellite Server

Satellite servers are servers that have been defined by the separate program GENIUS TOOLS Starter Service.

Click *Create (6)* to be able to use these satellite servers in GENIUS TOOLS Starter. An up-to-date list will be opened in a separate browser window if you click on the link (7).

© 2021 INNEO Solutions GmbH


5.6 Configuring global environments

The next sections explain the potential of the GENIUS TOOLS Starter configuration option. This section describes the basic general configuration that is required for each system. This general configuration is represented by the standard group in the *Configuration* page.

The *Standard* group for global settings is always present on the *Configuration* page.

Please note: The group *Standard* contains global, system-wide configuration settings. This group does not have any members, you cannot assign users or computers to it.

Settings that deviate from the global configuration can be defined for computer groups, user groups and units. For information on how to configure such groups, please refer to Configuring heterogeneous environments 90. Additionally, you can define specific settings for projects, see Creating projects 109.

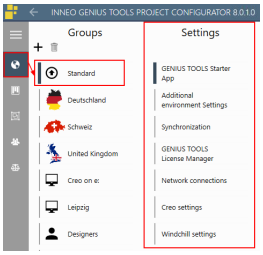

The *Standard* group contains the following settings:

– Network connections

– GENIUS TOOLS Starter App

– Additional environment settings (environment variables)

– Creo settings

– Windchill setttings

– Synchronization settings

– GENIUS TOOLS License Manager

– GENIUS TOOLS Starter App

For more information on how to configure deviations from this global configuration, please refer to Deviations from the default configuration 108.

5.6.1 GENIUS TOOLS Starter App

For information on settings for GENIUS TOOLS Starter App, please refer to Settings for GENIUS TOOLS Starter App 157.

© 2021 INNEO Solutions GmbH

5.6.2 Additional environment variables

You can define environment variables that are assigned to the client workstation in a Creo session under *Additional Environment Settings*. This allows you to define additional, company-specific variables that are available after starting Creo without having to use batch files. For a list of the environment variables created or modified, please refer to the installation document (*GENIUS TOOLS Starter Installation.pdf*). The table in the installation document also lists the corresponding deprecated environment variables, which are still being generated for compatibility purposes.

Name
Enter the name of the environment variable here.

Value
Enter the value of the environment variable here.

Delete
Click the recycle bin icon to the right of the value input field to delete the line.

5.6.3 Synchronization

Synchronization allows for having all important files available locally on the local workstation. This ensures the fastest possible access to these files.
No toolkit applications will be synchronized while Creo is running.

Please note: Options that cannot be selected in this dialog box can be changed in GENIUS TOOLS Environment Administrator.

▶ General

Activate synchronization
Shows whether synchronization from the Caddepot to the Cadpool directory is active. If synchronization is deactivated, all computers will only operate locally. Synchronization is activated/deactivated with the *Modify* function of GENIUS TOOLS Environment Administrator (Step 3 > Client settings).

Target directory
Defines the Cadpool directory on the client workstation.

Please note: Changing this entry leads to an initial installation of GENIUS TOOLS Starter App on the client.

Synchronization interval (minutes)
Specifies the interval at which synchronization is performed in minutes.

© 2021 INNEO Solutions GmbH

Please note: For modifications of the synchronization interval to take effect, GENIUS TOOLS Starter App has to be restarted.

Start client with windows
Determines whether GENIUS TOOLS Starter App should be started automatically with Windows.

Save result to Caddepot directory
Determines whether the result of the synchronization should be transferred to the server. This includes the end time of the last synchronization, the number of copied files, warnings and errors. The user needs write access in the *Serveronly* folder.

Yes: The result of the synchronization is saved as *<hostname>.log* in *caddepot\serveronly_SyncResults*.

No: The result is not transferred to the server.

▶ Server

Checksum validation
Shows whether the checksum of a synchronized file is matched with that of the file on the server. The settings for validating checksums are entered in GENIUS TOOLS Environment Administrator with the *Modify* function (Step 2 > Synchronization server settings).

Yes: A checksum is determined for each transferred file and matched with the checksum from the server. If these differ, the file will be requested again.

No: Files are only copied.

Warning: Activating *checksum verification* can significantly slow data transfer.

Server name
Displays the name of the synchronization server.

Comment
Displays the description for the server.

Synchronization type

File system: Each file is copied when synchronized.

Service: GENIUS TOOLS Starter Service checks all files for changes and updates only these changes during synchronization.

Server path
The UNC path to the synchronization server.

5.6.4 GENIUS TOOLS License Manager

In order to use the full version of GENIUS TOOLS Starter, you will need a connection to GENIUS TOOLS License Manager. You can define the server from which GENIUS TOOLS Starter App should obtain licenses.

© 2021 INNEO Solutions GmbH

Please note: If no license server is registered or if it is deactivated, only Creo projects that have an academic or home-use license can be started.

▶ GENIUS TOOLS License Manager

Active
Activate/deactivate the license server(s).

License server(s)
Enter one or more license servers in the notation `Port@Servername` (e.g. `7766@<licenseservername>`). Separate a series of license servers with semicolons.

Comment
An optional comment on the license server(s).

Hint: The used license server can be found in *GT_LIC_SERVER* in Creo. You can use this variable, for example, in GENIUS TOOLS for Creo.

5.6.5 Network connections

▶ Network drive

Here you can connect a shared network folder that will not be synchronized.

Connect
Specify whether to map the network drive.

Yes: The network drive is mapped when GENIUS TOOLS Starter App is started. If a drive with the specified drive letter already exists, this drive will be disconnected and then re-connected according to the configuration, but only if it is not already the drive to be mapped. This connection will remain active after you stop Creo.

No: Network drive is not mapped. Use this option if the drive mapping is already established by other means, such as a Windows login script.

UNC path
Specifies the path to any folder on the server.
Usually given as a UNC path: *COMPUTER**CreoData*.

Drive letter
Assigns a drive letter that the drive is mapped to.

Remap drive
Comparable to the Windows function map network drive.

Yes: After restarting the computer the drive will connect automatically.

No: The drive will not be remapped after a restart.

▶ User drive


Here you can map an additional user-defined drive.

© 2021 INNEO Solutions GmbH

5.6.6 Creo settings

In Creo settings you can define the behavior of Creo. Click on *Application, Start, Cleanup* or *Write* to switch between tabs.

You can set the behavior here as a default for all settings (standard) as well as for groups and units. You can also specify settings directly for individual projects under *Projects* > *Select project* > *Creo/Start tabs*.

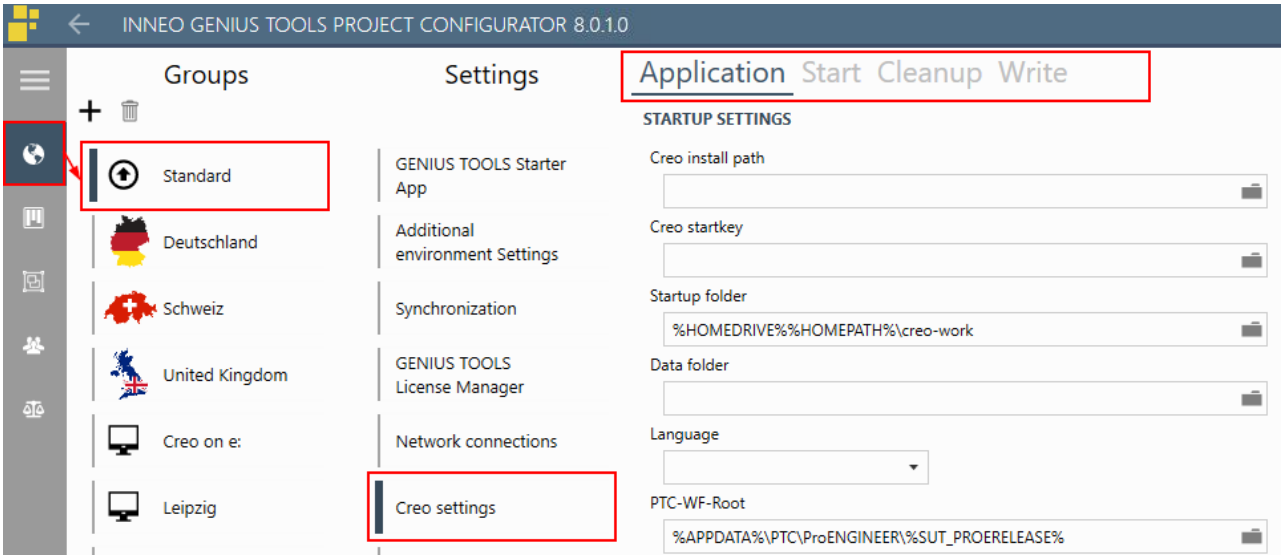

The tabs Application, Start, Cleanup and Write in the Creo settings dialog.

5.6.6.1 Application

▶ Startup settings

Creo install path
Enter a directory on the workstation that has Creo installed, e.g. *D:\PTC\Creo6.0*.

Creo startkey
Specify the startkey (PSF file) of the respective Creo installation in the directory defined above. You can either give a file name (*parametric.psf*) or a complete path (*D:\PTC\Creo 6.0.2.0\Parametric\bin\parametric1.psf*).

Warning: If several keys are permitted for a project (in the *Licences* tab), the startkey will become the default setting for the selection field in GENIUS TOOLS Starter App, i. e. users will be able to choose another startkey.

Startup directory
Enter the working directory of Creo.

Data directory
Enter the data directory to be used. The data directory is the main directory of an

© 2021 INNEO Solutions GmbH

operating environment containing Creo-related data.
The following data is stored in the data directory:

- ***Libraries:*** all library parts and their directories with MNU file
- ***Configuration:*** bend table, search.pro, hole chart, DTL file for drawing representation, DMT file for colors in Creo, FMT file for displaying parts lists in the browser
- ***Materials:*** material files for Creo in the MAT format
- ***ModelCheck:*** configuration files for ModelCheck
- ***NC:*** templates and configurations for NC machining.
- ***Drawings:*** files for drawing frames, notes and symbols

Please note: The files *config_*.pro*, *config_*.sup* and *customization.ui* can be stored separately from the data structure due to their potential multiple use. If you want to use project-specific configuration files, set the folder for them as the project folder in *GENIUS TOOLS Project Configurator > Projects > Creo*.

Language
The language in which Creo should run can be specified. If no setting is selected, Creo Parametric will select the operating system language automatically.

<not specified / empty>: GENIUS TOOLS Starter does not create a language variable (`LANG`) on the application computer (recommended).
System: The country-specific settings of the operating system are adopted.
<language>: This language is used, and the language variable `LANG`, if defined on the application computer, will be set to that language.

Windchill user root folder
Specify a directory in which user-specific Windchill data is stored. The directory corresponds to the Creo favorites folder.

Windchill cache directory
Cache directory for caching of Windchill data.

Please note: Try not to modify this option. To change the storage location of the cache, rather change the setting Windchill user root directory.

Creo Agent home directory
Directory in which data relevant for Creo Agent, such as server information, is saved. We recommend setting Creo Agent Home to %PTC_WF_ROOT%.

Enable stop batches

Ja: Additional batch files can be executed after Creo has been stopped.
Nein: No stop batch files can be executed after Creo has been stopped.

Synchronize with project start
Defines whether project data is to be synchronized before a project opens.

No (default): No data is synchronized before opening a project.

© 2021 INNEO Solutions GmbH

Yes: Data is synchronized, i. e. the following directories in the *configuration* directory: *plot, standard, units, projects* and *users*.

▶ Plot configuration

Trail folder
Creo trail files, recording all production steps, are written to this directory, e.g. *%TEMP%\Proe*.

Plot configuration folder
This directory contains the configuration files (PCF and PNT) for the plotters, e.g. *%GTS_ROOT_DIR%\configuration\plot*.

Plot file folder
Directory on the workstation in which Creo stores the plot files. e.g: *C:\Temp*.

▶ User settings

Configuration folder
The configuration files of each user can be stored in the directory *userdata*.

User config.pro
Name of a user-defined *config.pro* file. It is appended to the *config_*.pro* files in the *users, projects, units* and/or *standard* directories.

User customization.ui
Name of a user-defined *customization.ui* file. It replaces any *customization.ui* file in the *users, projects, units* and/or *standard* directories.

5.6.6.2 Start

In this tab you can define the start behavior of all projects that are assigned to the selected group or unit.

For managing the behavior of a single project, go to the *Start* 117 tab in *Projects* main menu.

▶ License borrowing

Maximum duration
Specify for how many days licenses may be borrowed at most. Please note that in Creo, the maximum borrow duration is determined by the environment variable `LM_BORROW_DURATION`. Project Configurator does not check whether the value you enter is valid for Creo.

Default duration
Specify the borrow duration in days that is set as the default when a user borrows licenses.

© 2021 INNEO Solutions GmbH

▶ Creo startkey

Synchronize Creo startkey
You can add Creo startkeys (PSF files) for each project in the project directory under *configuration*. For each PSF file, a matching BAT file will be created automatically. If you only want to copy startkeys required for a specific project to the application computers, set *Copy project-related startkey only* to *Yes*.

Yes: Creo startkeys and any startkeys stored in the project directory are copied to the BIN directory of the Creo installation *before* project selection.
Yes, cleanup before: All startkeys in the *bin* directory of the specified Creo version are deleted before synchronization, except *cocreatesim.psf* und *gts.psf*. This option can only be set for groups and units, not for projects.

Warning: Setting this option may lead to invalid projects, if no other Creo startkey(s) are synchronized.

No: Creo startkeys will not be synchronized to application computers.

Please note: The key synchronization setting is a general settings which will only be used for a project if the project does not have its own specific key synchronization setting.

Copy project-related startkey only
Only the startkey required for a project is copied. This option can only be used if the above option *Synchronize Creo startkey* is set to *Yes*.

Yes: Only the startkey relevant to a project is copied.
No: All PSF files stored in the project folder will be copied as startkeys.

▶ Creo License Server

Creo license server
Select the Creo license servers to be used for the group, unit or standard. The list is created in *Resources > Creo license servers* 74.

No selection (default): The license server, which is specified in the Creo startkey (PSF file), is used.
All: The corresponding license server is used.

▶ Licenses

Show licenses
Specifies whether the licenses specified in a project are displayed in the licenses tab of GENIUS TOOLS Starter App.

Yes: Creo licenses are listed. The license status is not obtained; validation is possible by using the Analyze Licenses function.

© 2021 INNEO Solutions GmbH

No: Creo licenses are displayed. The settings *Get extensions*, *Calculate licenses by extension* and *Identify license users* can not be utilized.

PTC license reusable per host

State whether your PTC licenses can be used several times.

Yes: Use this option if you have DUP_GROUP in your PTC license file. The license validation will calculate the free PTC licenses in a way that PTC licenses that are already in use by another session on the same application computer will show an amount of at least one, making the project valid.

No: Use this option if you are unsure or cannot find DUP_GROUP in your PTC license file.

Please note: For this option to produce the correct result, the PTC license must contain the keyword DUP_GROUP according to CS234779. This information cannot be determined by GENIUS TOOLS Starter App.

Get extensions

Define whether extensions should be queried. To use this setting, *Show licenses* has to be set to *Yes*.

Yes: In addition to the basic license, extensions are also queried on the license server.

No: Only the basic license is queried.

Calculate licenses by extensions

Define whether a free license is calculated based on the basic license or on extensions. To use this setting, *Get extensions* has to be set to *Yes*.

Yes: Extensions are also used for license calculation.

No: Licenses are calculated on the basic license.

Identify license users

Define whether users of a license are identified.

Yes: User names are displayed on the client as a tooltip of the corresponding license name. The Windows user name is replaced by the GENIUS TOOLS Starter alias.

No: No user names are obtained or displayed.

Please note: If the alias should be displayed, the users have to be configured under *Resources* > *Users*. Otherwise, the Windows user name will be displayed.

Timeout for FlexNET server

Enter a maximum duration for the license query in seconds. The license servers are pinged before the license query is started. If the server does not respond to the ping, the query will still be executed.

The duration you enter is also used as a maximum time for the license query.

If you expect licenses to be unavailable form time to time, set the timeout to 0, which means that there is no timeout specified.

© 2021 INNEO Solutions GmbH

Default: 0 (no timeout specified)

▶ Creo Startkey Configuration

The startkeys listed here are those that have been added in *Resources* > *Creo Startkeys*. If multiple startkeys are made available, users can select a startkey at project start in GENIUS TOOLS Starter App. The utilization of startkeys corresponds to the general call hierarchy for configuration settings: Standard > Unit > Computer group > User group > Project. See also chapter Assigning Creo licenses to projects 120.

Use: Define, whether one Creo startkey is used or whether several several startkeys are displayed for selection in GENIUS TOOLS App.
Display name: Displays the name of the startkey as specified in *Resources* > *Creo startkeys*.
Comment: Displays the comment as specified in *Resources* > *Creo startkeys*.

5.6.6.3 Cleanup

Configuration files of Creo are not overwritten by default. If a new file is to be created, a previous deletion of the old configuration file is necessary. Here, you can manage the cleanup settings of GENIUS TOOLS Starter App for Creo projects.

▶ Text directory

Define whether following configuration files are deleted or retained in the text directory of a Creo installation: *config.pro, config.sup, customization.ui*.
Ja: Delete
Nein: Retain

Please note: Make sure the user has access rights to delete files in the text directory of a Creo installation. This will be of special importance if Creo is installed in *Programs*.

▶ Home directory

Config.pro
Determines whether a *config.pro* file in the user's home directory is deleted or retained.
Ja: Delete
Nein: Retain

Customization.ui
Determines whether a *customization.ui* file in the Settings directory in *PTC_WF_ROOT* is deleted or retained.
Ja: Delete
Nein: Retain

© 2021 INNEO Solutions GmbH

▶ Startup directory

Define whether following old configuration files are deleted or retained in the text directory of a Creo installation: *config.pro, customization.ui, config.val*.

Ja: Delete
Nein: Retain

5.6.6.4 Write

Configuration files for Creo can be located in three different places, which can affect the configuration of Creo. Here, you can influence the copy settings of GENIUS TOOLS Starter and define target directories.

Warning: A new configuration file will only be written if no configuration file is yet stored at the location. Use the settings in the *Cleanup* tab to avoid difficulties.

▶ Target directories

Config.pro
Select the directory to which the *config.pro* file will be copied. If no directory is selected, the file will be copied to the home directory.

Text: The *config.pro* file is copied to the text directory of the Creo installation.
Home (Default): The *config.pro* file is copied to the home directory of the user.
Start: The *config.pro* file is copied to the startup directory.

Please note: Make sure the user has access rights to create files in the text directory of a Creo installation. This will be of special importance if Creo is installed in the *Programs* directory.

Customization.ui
Select the directory to which the *customization.ui* file will be copied. If no directory is selected, the file will be copied to *PTC_WF_ROOT*.

PTC_WF_ROOT: When existing, the *creo_parametric__admin_customization.ui* file is copied to the text directory. The *creo_parametric_customization.ui* file is copied to the Settings directory in *PTC_WF_ROOT*.
Start: When existing, the *creo_parametric__admin_customization.ui* file is copied to the text directory. The *creo_parametric_customization.ui* file is copied to the Creo startup directory.

Please note: If Creo is to read the *customization.ui* file from the startup directory, the following option must be set in the *config.pro* file: `load_ui_customization_run_dir yes`.

© 2021 INNEO Solutions GmbH

▶ Config Handling

Specify whether the following configuration files should be written.

Please note: To copy current configuration files, the corresponding files in the target directory have to be deleted first (see *Cleanup* tab). This makes sure that the *config.pro* settings defined by the administrator will always be used.

Config.pro

Yes: A *config.pro* is compiled and copied to the target directory unless a *config.pro* file exists there already.
No: Writing *config.pro* is skipped.

Config.sup

Yes: If a *config.sup is* found in the project folder, it will be copied to the target directory unless a *config.sup* file exists there already.
No: Writing *config.sup* is skipped.

Customization.ui

Yes: If a *customization.ui* is found in the project folder, it will be copied to the target directory unless a *customization.ui* file exists there already.
No: Writing *customization.ui* is skipped.

Config.val

Yes: If a *config.val* is found in the project folder, it will be copied to the target directory unless a *config.val* file exists there already.
No: Writing *config.val* is skipped.

5.6.7 Windchill settings

The Windchill server registration enables the automatic registration of a Windchill server under a given name in PTC Creo.

The concept of automatic server registration is that previously registered servers are retained without changing the entire registration and that a newly registered server is set to *active*. It is also part of the concept that server registration does not result in the registered server reverting to *active* as soon as a project with the corresponding configuration is selected. Usually the user wants Windchill settings of the previous Creo session to be set again after restarting Creo.

Users who are to get access to a Windchill server via automatic server registration need to have a valid Windchill account and have access to the defined workspace in the defined Windchill context. It can be useful to create a context (product, library or project) that is not otherwise used and that these users have access to.

© 2021 INNEO Solutions GmbH

Please note: In order to use automatic server registration, the following requirements must be met:
– *Using Windchill* must be activated.
– The *Windchill Context* must be set and must exist.
– The default workspace must be located in the *Windchill Context* that is given.
– The Windchill cache directory must be a subdirectory of the Windchill user root folder.

Automatic server registration is configured under *configuration* > *(Select group)* > *Windchill settings*. The Windchill settings are expanded once you set *Use Windchill* to *Yes*.

▶ General

Use Windchill
Activate/deactivate the Windchill server.
Yes: Activates Windchill-relevant settings such as automatic server registration.
No: Windchill settings will be disregarded.
No, don't register: The Creo session is started without an active Windchill server. However, the Windchill server remains in the server registry without being selected.

Windchill server name
Specify the name with which the server will be registered in Creo.

Windchill server URL
Specify the URL under which the server can be reached.

▶ Register

Server auto register
Select whether the server should be registered automatically.
Yes: The above mentioned Windchill server is automatically registered and is then available within Creo.
No: The server is not entered automatically.

Server auto rename
If a server already exists at *Windchill server URL* and has a different name than *Windchill server name*, the server will be renamed when starting Creo next.

Set Windchill server online
Select whether the server should be put online.
Yes: A new server that was added by auto-registration will automatically be put online.
No: The server is registered offline.

▶ Windchill context

Default workspace name
Name of the workspace that is active during registration. The default workspace has to be present under the context given.

© 2021 INNEO Solutions GmbH

Windchill context type
Type of context: Product, Library, Project.

Windchill context
Context of the workspace.

5.7 Configuring heterogeneous environments: groups and units


IT landscapes very seldom have a homogeneous structure. There are different hardware setups and different user requirements, so that Creo configuration differences arise automatically and heterogeneous environments are created. GENIUS TOOLS Starter has been designed to meet these requirements and makes it possible, to organize similar configurations into groups or units. In this way, you can define group-specific configurations for Creo and PTC data management software (e.g., PDM Windchill), as well as make settings for GENIUS TOOLS Starter App and for data synchronization. Please refer to Deviations from the default configuration 108 for an example of how to set a different UI language for Creo users.

Differences from the default configuration, that is, from the settings in the *Standard* group, can be defined for these kind of groups in the *Configuration* page:

- units 91
- user groups 102
- computer groups 103

You can configure computer groups or user groups to reflect hardware-specific or user-specific requirements, or use units to manage groups of users.

In contrast to static user groups and computer groups, unit membership can be dynamic, as users can be assigned to a role via an LDAP query.

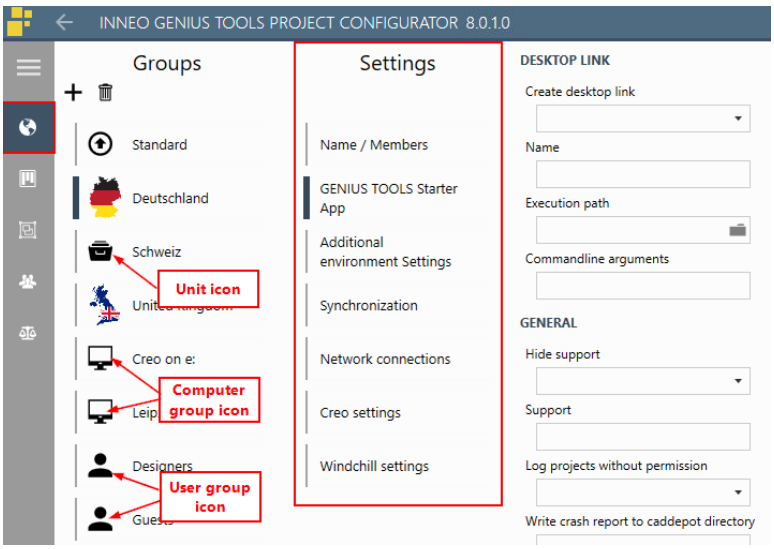

© 2021 INNEO Solutions GmbH

Select a unit or group to view the specific *Settings*.

Groups and units come with a separate settings item *Name/Members*, which is not available in the *Standard* group (for global settings). In contrast, only the *Standard* group has the settings item *GENIUS TOOLS License Manager*.

Please note: If you do not specify a setting for a group or unit, the group or unit will inherit the setting from the *Standard* group. (See also Configuring global environments 77.)

5.7.1 Working with units

With a unit you can group users into one configuration level and assig group-specific configuration settings. Units are typically used to reflect organizational structures such as company departments or sites.

Warning: Using units is a new feature in GENIUS TOOLS Starter from version 6.0.1, which means that you need a subscription license to use it. Once you have configured units, you cannot go back to using perpetual licenses. See also License-dependent features 8.

In contrast to computer groups or user groups, the assignment of users to a unit can be made dynamically via a role. The role in turn accesses the Windows user management functionality using LDAP queries. In this way, units always reflect the current staff list and company organizational structure as configured for Windows user management. If a user quits a company department, their Windows user account is configured accordingly, and the user is automatically removed from the corresponding unit. User assignment does not have to be updated manually. See chapter Accessing Windows user management 71.

Please note: To allow a transition phase between managing users and computers individually and managing them via LDAP queries, users and computers can still be manually assigned to a unit. However, this is not the recommended procedure for using units.

A user can be a member of more than one unit. If a user belongs to multiple units, they can select the unit they want to work with in the user interface of GENIUS TOOLS Starter App, see next chapter.


5.7.1.1 Displaying units in GENIUS TOOLS Starter App

Once a user belongs to multiple units, they have to select a unit in the user interface of GENIUS TOOLS Starter App.

© 2021 INNEO Solutions GmbH

Standard selection

If there are only units in one organization level, the selection field lists all units in alphabetical order.

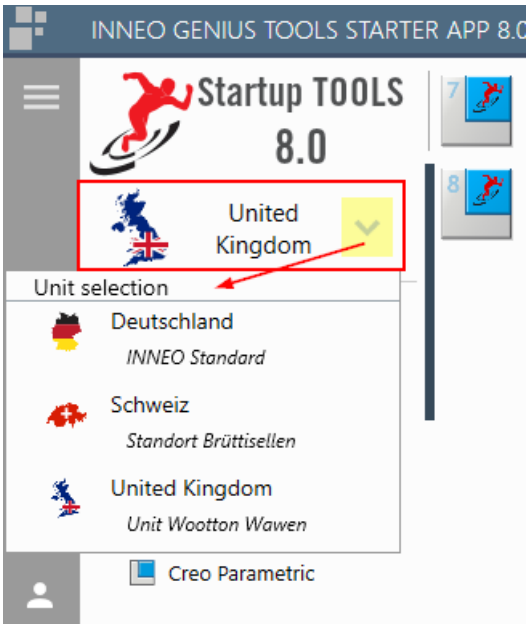



Hint: If you wish to place a unit at the top of the list, put a space character in front of the unit name, e. g. " United Kingdom".

Changes to unit names are adapted after restarting Starter App.

Selection of subunits

If there are subordinated units (subunits 98) to choose from, a separate dialog box opens.

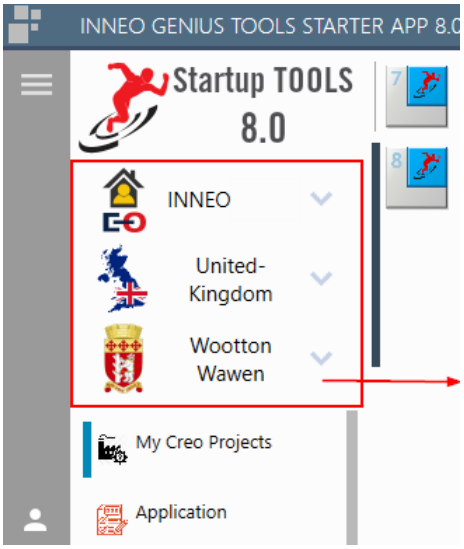


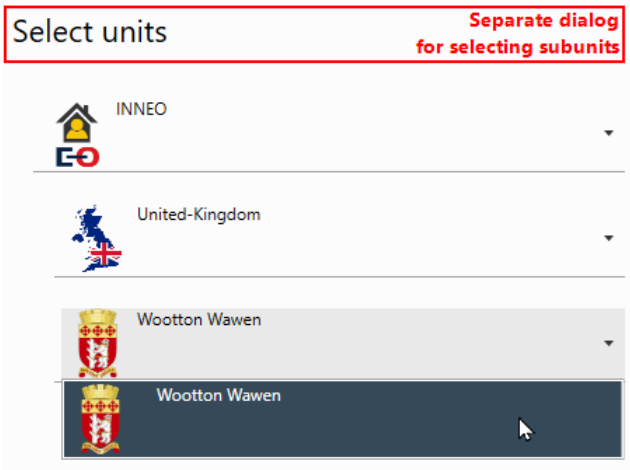

© 2021 INNEO Solutions GmbH

Displaying units with a picture

You can add a picture to the display of a unit by storing a PNG file in the _Images subdirectory of the units directory in the Caddepot. The name of the file has to be identical to that of the unit folder, e.g. *United Kingdom.png*, or – if you are working without a unit folder – to that of the unit tag ID.

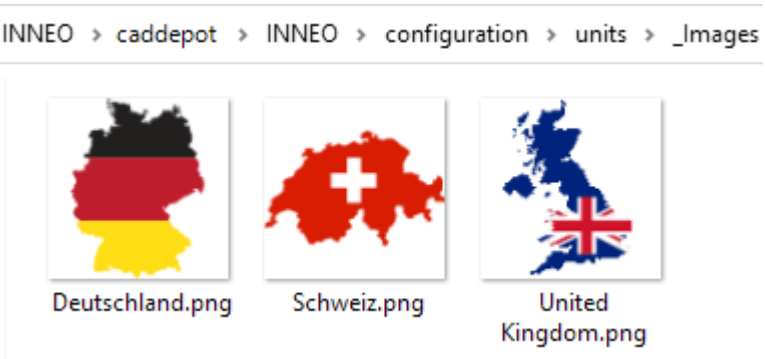

_Images directory


5.7.1.2 Creating units

Units are created in the *Configuration* page. In contrast to user groups and computer groups, a unit always has to have a role assigned.

When creating a unit there will be a warning if this is the first functionality that you are using with a subscription license after a license upgrade.


Warning: The use of units requires a subscription license. Once you have configured a unit, you cannot go back to using perpetual licenses.

1: Click the Create button in the column Groups in the *Configuration* page.

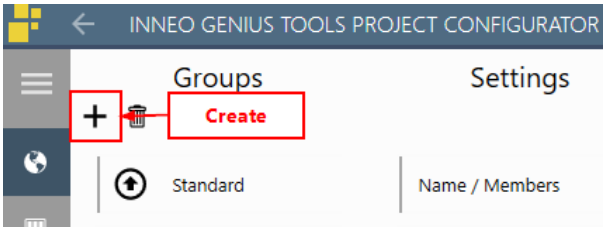

2. Type of group: Select *unit* in the following dialog.

© 2021 INNEO Solutions GmbH

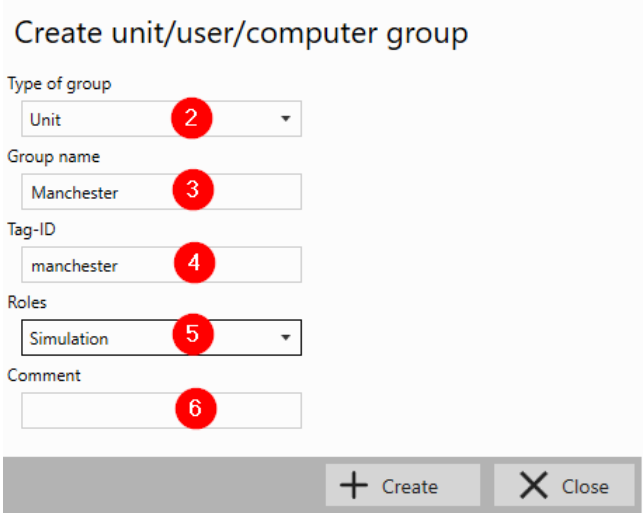

3. Name: Enter a name for the unit. This is the name displayed to users in GENIUS TOOLS Starter App.

Please note: The name of a unit does not have to correspond to the name of the unit folder. Naming a unit folder differently from a unit can be usefu for a better folder structure of files 99.

4. Unit tag ID: Define the tag ID for the unit.

Autofulfillment: The tag ID is identical to the unit name. (Small letters.)
Individually created tag ID: The unit tag ID is freely choosen. Tag IDs must not contain symbols not allowed in file names, such as ~ " # % & * : < > ? / \ { | }.
Empty: The unit does not have a tag ID. This is not recommended, since no Creo configuration options can be set up for units without a tag ID.

5. Role: Select the role that is assigned to the unit. If the role is not listed here, you have to first create it in the Resources 69 page.

A unit is part of the role-based system of granting access rights. This means, to first assign a group of users to a role, and then assign the role to the unit. A user can be assigned to different units by being a member of different roles.

You can edit the role for a unit at a later point in time in the *Name/Members* item. The corresponding LDAP queries are listed for information purposes only.

6. Comment: Entering a comment is optional.

7. Click on **Enter.**

The newly created unit appears as a new item in the Groups column. In the section Organization you can place the unit in several configuration levels, if you wish to work with subunits. See the chapter on gtpc_config_Unitstructure 97.

© 2021 INNEO Solutions GmbH


5.7.1.3 Grouping units

For a better overview in GENIUS TOOLS Project Configurator it is useful to subdivide units. In the group column you create types for units, e. g. Country or City.

Please note: Grouping units into types has no influence on the organizational structure, i. e. the call hierarchy of the Config.pro modules.

Under *Settings* > *Name/Members* in the *Unit* area as follows.

Unit type
Unit types are used for clarity in a complex organizational structure. You can select an existing unit type or create a new one by writing into the field.
The entered name will immediately appear in the left group column and will line up alphabetically in the existing unit type entries.

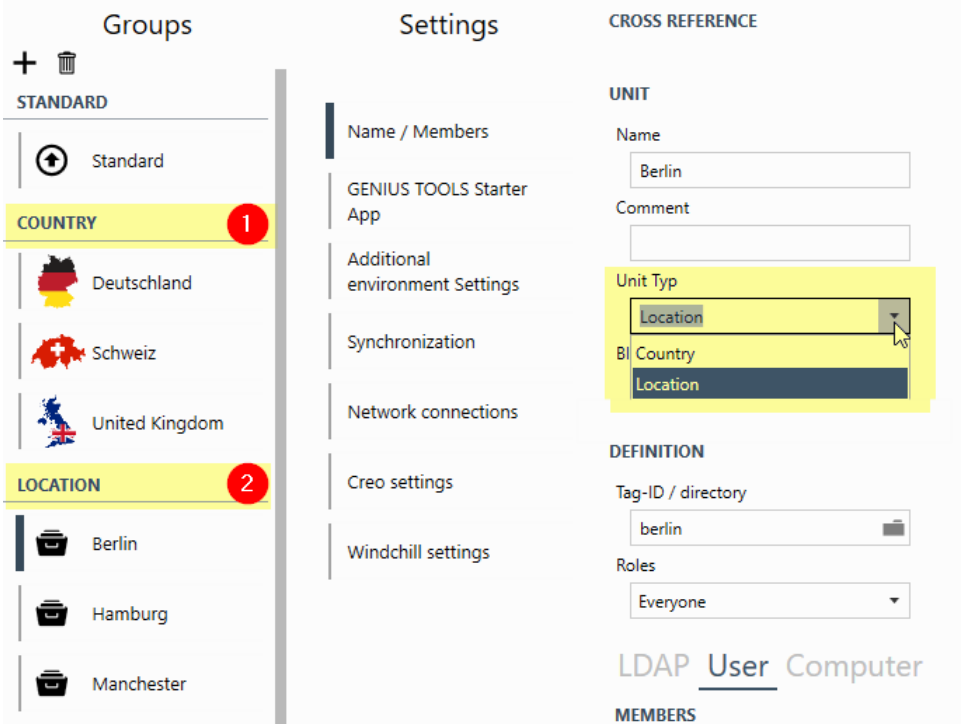


Units grouped into Countries and Locations

Unit images

You can add an image to a unit, which will replace the default unit icon , see Displaying units in GENIUS TOOLS Starter App 91.


© 2021 INNEO Solutions GmbH

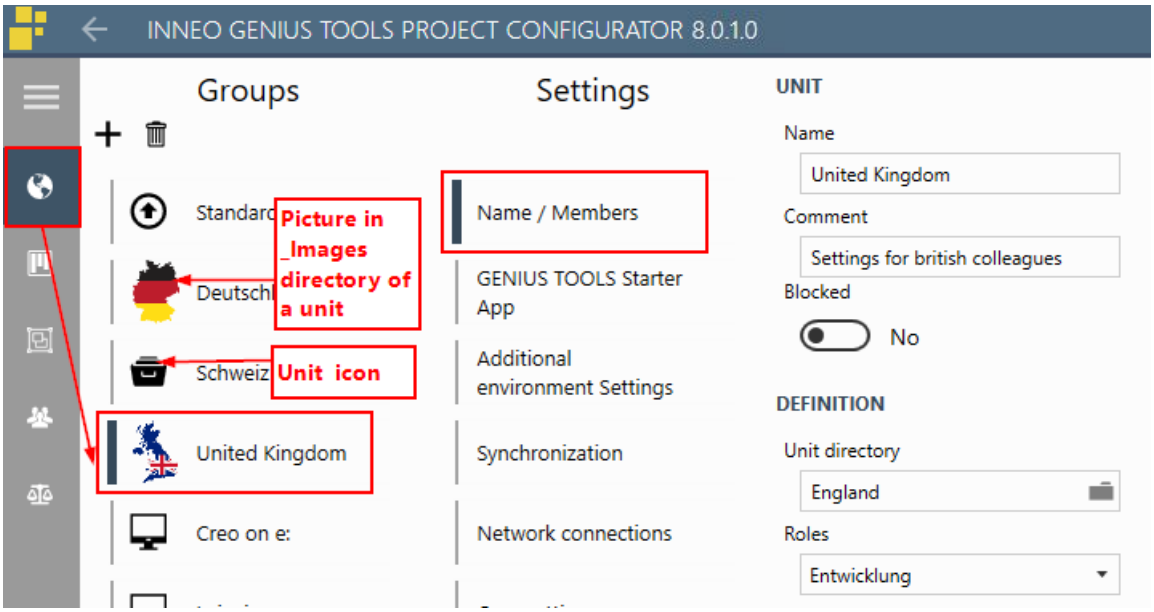

5.7.1.4 Deactivating units

Blocking a unit in the Project Configurator is useful if you wish to disregard the configuration for this unit without deleting the unit, e. g. during tests.

To do this, go to the Name/Members area and activate the radio button Blocked. The name of the unit will be crossed through.



You can also block individual users or computers without locking the entire unit, see the chapter Blocking individual users or computers 107.

5.7.1.5 Assigning unit folders

A unit can be used with or without a unit directory.

Working with unit directories offers extensive possibilities for configuration, as a unit directory can contain the following files:

- config.pro blocks
- PSF files (Creo startkeys)
- batch files

Creating unit directory

A unit directory is created manually as a subdirectory in the system directory *unit*.


The name of the unit directory does not have to correspond with the name of the unit that is created in GENIUS TOOLS Project Configurator. Different names for a unit and a unit

© 2021 INNEO Solutions GmbH

directory can be advantageous when working with subunits, i. e. for a better overview of the call hierarchy of settings 99.

Selecting a unit directory

Specify the unit folder for a unit under *Settings* > *Name/Members* in the segment *Definition* > *Tag ID / directory*.

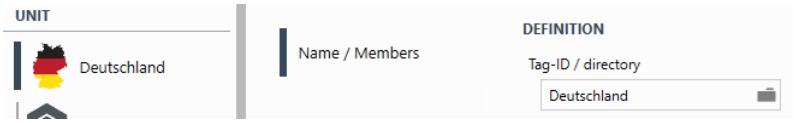

When a directory is selected, its name becomes the unit tag ID.


Please note: When creating a unit in the Create dialog a unit tag ID is assigned, which can also be used without a unit directory, see example in chapter Using unit tag IDs 100.

5.7.1.6 Mapping organization structures with units

Units offer a wide range of options for mapping the structure of a company, since the settings for a unit can be made at any number of configuration levels. The configuration levels for units are created in the standard group in the menu item Organizational Structure.

Basic structure

If all units are organized in one level, no adjustments are needed in the organization tree.

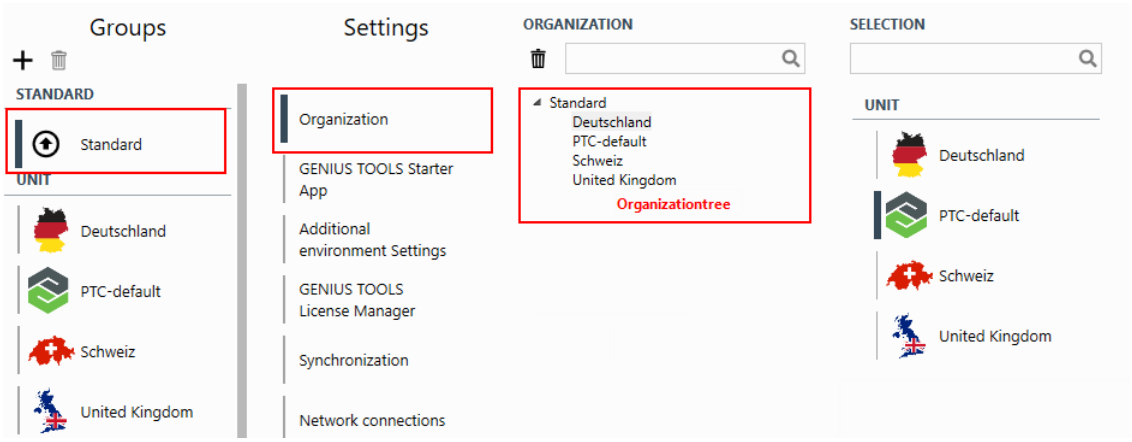


Arranging units

Units are ordered alphabetically. Within a configuration level, you can place a unit in the first position by inserting a space at the beginning of the unit name, e. g. " Switzerland". This will also be applied to the display in the GENIUS TOOLS Starter App selection field.

© 2021 INNEO Solutions GmbH

Subunits for complex organization structures

Units can represent multiple configuration levels, e. g. they can be arranged by region, country, location, city etc. A subordinated unit is called **subunit.**

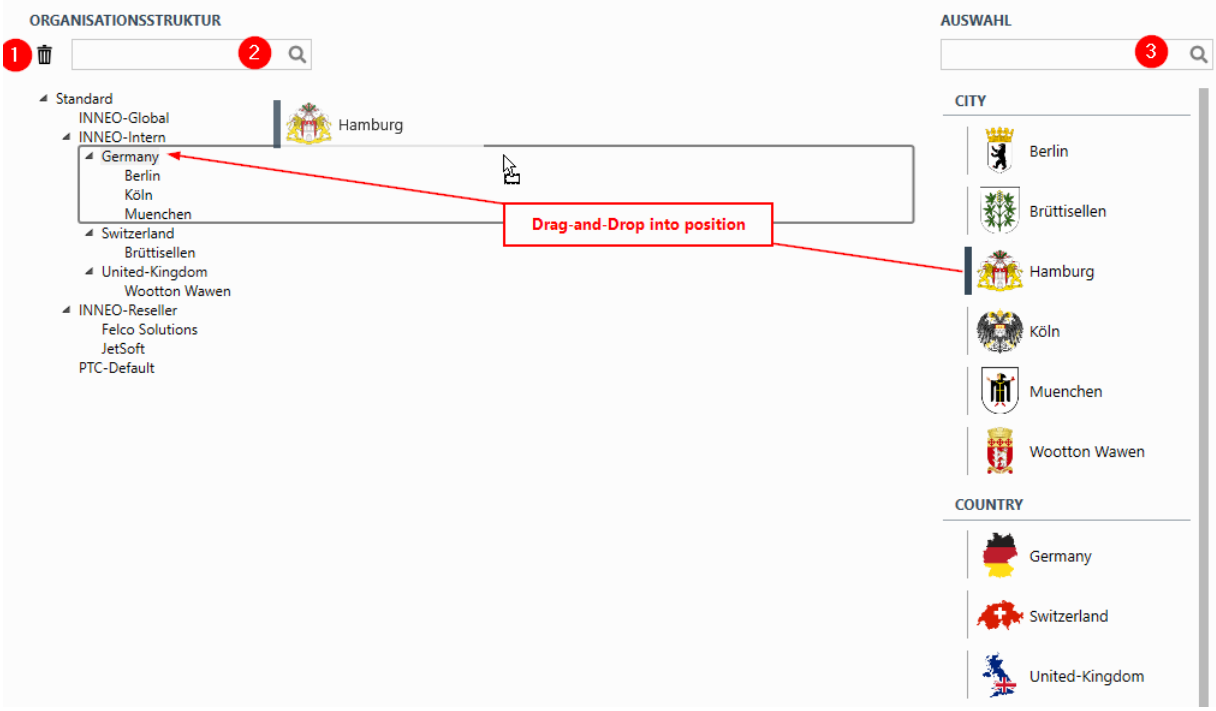

All units are displayed on the right of the dialog *Organization*. You can select a unit there and drag it to the desired position in the organization tree. The following applies:

– Dropping a unit under a unit automatically creates a subunit.

– A unit can be used several times in different levels.

– A unit cannot be subordinated to a unit with an identical name.

Remove units from organization tree (1)
A unit can be deleted in the organization tree by clicking on the paper bin icon or the remove key. This does not delete the unit as a group in GENIUS TOOLS Project Configurator.

Searching for units in the organization tree (2)
The search field (2) can be used to search for a unit or subunit in the tree. The respective paths will open.

Searching for units in the selection area (3)
Use the search field (3) to search for a unit in the selection area.


Unit paths
All parent folders in which a unit is located are listed in *Name / Members > Cross Reference*.

© 2021 INNEO Solutions GmbH



Application example


You want to make settings for the Construction team, which is divided between two locations. The organizational structure could look like this.

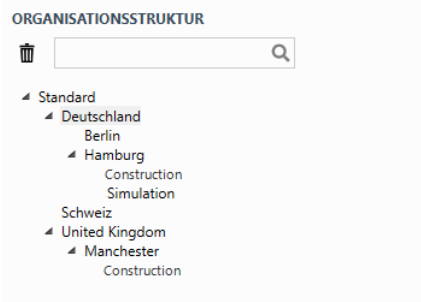

5.7.1.7 Call hierarchy for subunits

The more subunits you have, the more difficult it becomes to track at which configuration levels settings are made and possibly overwritten. You can see this in two locations:

1. in the Config tab of GENIUS TOOLS Starter App: config.pro blocks are listed by directory.
2. in the project report under "config.pro": config.pro blocks are listed with path information.

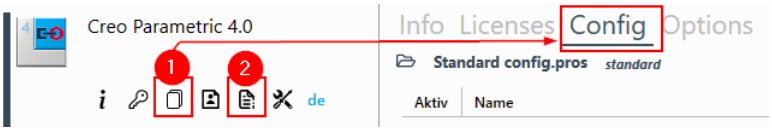


Directory structure for files

In the units system directory all directories are located on one level, i. e. it is not visible whether a directory contains settings for a unit or a subunit. For an easier overview at file level, it may therefore be useful to adjust the unit directory names to reflect the call hierarchy. You can do this by giving the unit directory a different name to the unit you create in GENIUS TOOLS Project Configurator.


Please note: The name of the unit directory becomes the unit tag ID 94 when assigning the directory to a unit.

Examples for an easy overview of call hierarchy:

© 2021 INNEO Solutions GmbH

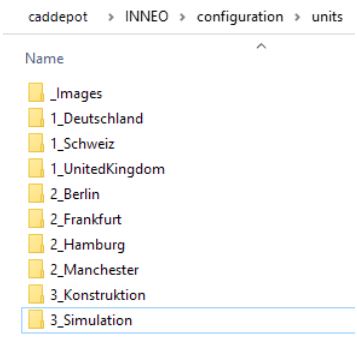

Unit directories by country and city

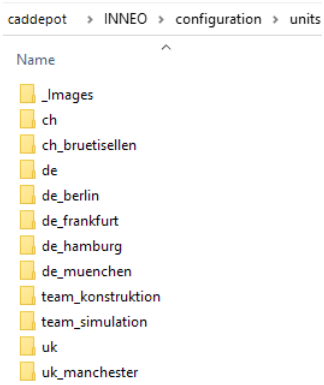

Unit directories by country

5.7.1.8 Using unit tag IDs

A unit tag ID is an additional textual marking in a config.pro block that defines a unit and limits the validity of the block to it. Unlike config.pro blocks that are located in a specific Unit folder, config.pro blocks with a unit tag ID can be stored in all folders. They are activated by the selection of the unit in GENIUS TOOLS Starter App.

This allows settings to be made for a unit even without assigning a unit folder to the unit.

Creating a unit without a unit Folder

When creating a unit 93 in GENIUS TOOLS Project Configurator, a unit tag ID is suggested. You can change the name of the unit tag ID therafter in the *Settings* area under *Name/Members*. Do not select a unit folder.

Unit tag ID / folder name
Defines the tag ID for the unit. If you select a unit folder, its name will also be the name of the unit tag ID. Unit folders are created manually in *configuration\units*.
The tag ID preset in the input field can be:

Retained/ overwritten: Defines the unit tag ID. Tag IDs must not contain characters that are invalid for file names, such as ~ " # % & * : < > ? / \ { | }.

The unit directory preset in the input field can be:

Retained / replaced: Assigns an existing unit folder to the unit; the name of the folder becomes the unit tag ID (case-insensitive).

Please note: The name of the unit which users can choose in GENIUS TOOLS Starter App can be freely set by the administrator and does not necessarily have to correspond to the name of the unit folder.

© 2021 INNEO Solutions GmbH

Use case

In a company two sub-departments (Amsterdam, Berlin) of the Europe division are to work together on five projects. In two projects (C, D) of the five different license extensions should be used: Amsterdam should work with AAX, Berlin with BMX.

Initial situation: A unit folder with the name *Europe* is located in the *units* system folder and contains the Creo configuration options (config.pro blocks) for the unit Europe.

Procedure:

In GENIUS TOOLS Project Configurator

1. In the main page *Configuration* go to the *Groups* section and click the *Create* 93 button.
2. Create a unit with the name “Amsterdam” and the tag ID "amsterdam".
3. Create a unit with the name “Berlin” and the tag ID "berlin".
4. Do not assign any unit folders to these units.
5. Add the two units in the organization tree 98 under the unit Europe.

At file level

6. Create a config.pro block named *config_lic.amsterdam.pro*.
7. Enter the license extensions for AAX.
8. Create a config.pro block named *config_aax.berlin.pro*.
9. Enter the license extensions for BMX.
10. Place the two files in the project folder for project C.
11. Place the two files in the project folder for project D.

Result: The license extensions AAX and BMX can be restricted to units for projects C and D without having to create new projects.

Advantage: Without tag ID four projects would be necessary: Project C with AAX/ with BMX and Project D with AAX / with BMX.

5.7.1.9 Project options with several unit tag IDs

A config.pro block with a unit tag ID can be used as a project option in one or more projects. A project option 124 can be limited to one unit by adding a single unit tag ID, but it can also contain multiple tag IDs.

Validity

When using multiple unit tag IDs, all conditions set by the tag IDs must be met.

© 2021 INNEO Solutions GmbH

Example: Validity of a config.pro block


A company has the units Construction and Hamburg, but no unit MBD. This means the config.pro block *config_lic.hamburg.construction.mbd.pro* is valid if the unit Construction *and* the unit Hamburg *and* the combined project option 131 MBD is selected.

Usage

Using multiple unit tag IDs is useful when you have subunits in different configuration levels.

Example: Config.pro block in multiple levels.

For project A, the team Construction in Manchester, but not in Hamburg, is to be given NC as an option on the project.

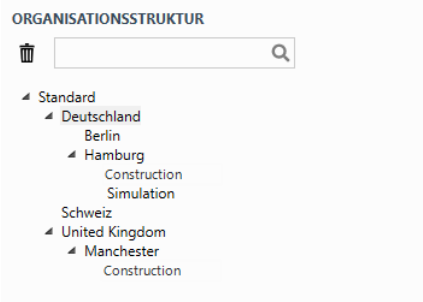

Solution: 1. The units Manchester and Construction are created in GENIUS TOOLS Project Configurator.

2. A config.pro block with the name *config_lic_nc.manchester.construction.nc.pro* is created in the project folder of project A.

3. The project option NC is defined according to requirements (e.g. license extensions), see Single project options 127.

Result: The construction team in Manchester can activate the project option NC on project A.

Advantage: The project option NC is not available to all members of the Construction unit, as would be the case if the Config.pro block were located in the Construction unit directory.

5.7.2 User and computer groups

User groups

In a concept similar to computer groups, users can be organized into user groups. User groups are typically used to define function access in GENIUS TOOLS Starter for a certain number of users, or to define the UI language independently of the hardware used. A user

© 2021 INNEO Solutions GmbH

group should contain all settings for this group that deviate from the general default configuration.

Users are permanently assigned to a user group. If a user has to be added to or removed from a user group, you have to change the assignment manually in the group's settings under *Name/Members*. (See also Assigning users to user groups 104.)

Each user can be assigned to only one user group.

The following sections explain how to work with groups and units and how to add items (users or computers) to them.

Please note: You cannot assign elements to the group *Standard*. This group contains system-wide settings that apply to all users and computers. Therefore, the standard group does not have the settings item *Name/Members*, and you cannot change the group's name.

Computer groups

Computer groups organize similar hardware setups into groups to allow creating general configuration settings for this hardware in GENIUS TOOLS Starter. A computer group should contain all settings for this group that deviate from the general default configuration.


Computers are permanently assigned to a computer group. If a computer has to be added to or removed from a computer group, you have to change the assignment manually in the group's settings under *Name/Members*. (See also Assigning computers to computer groups 105.)

Each computer can be assigned to only one computer group.

5.7.2.1 Creating user and computer groups


To create new user group or computer groups, go to the *Configuration* page.

Step 1: Go to the *Configuration* page and click *Create* under the *Groups* list.

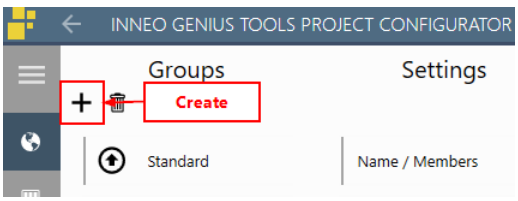

Step 2: Select the type of group you want to create.

© 2021 INNEO Solutions GmbH

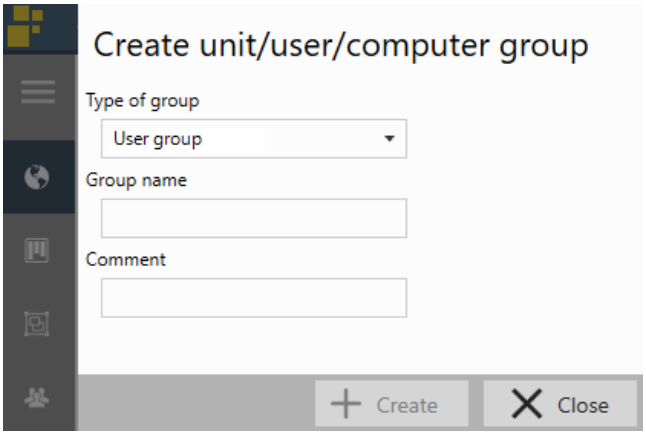

Step 3: Enter a name for the group , as well as an optional comment.

Step 4: Click *Create*.

The new group is displayed in the *Groups* list. Select the new group, go to the settings item *Name/Members*, and assign computers or users to the group, see next chapter.

5.7.2.2 Assigning users to user groups

When you assign a user to a user group, the configuration settings for the user group will apply to that user.


Please note: Each user can only be assigned to one user group.

To create individual users, go to the *Resources* 62 page.

To assign a user to a user group, either use the list view for users under *Resources* > *Users*, or edit the members of the user group under *Configuration* > *Groups*.

Step 1: Go to the *Configuration* page and select the user group that you want to add users to from the *Groups* list.


Step 2: Go to the *Settings* item *Name/Members*.

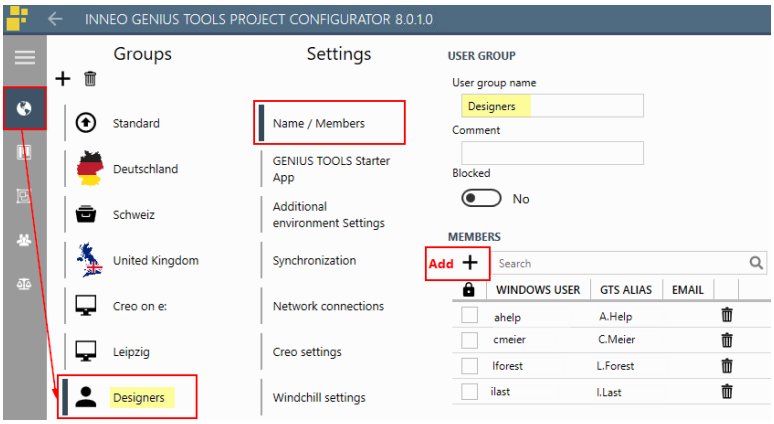

Step 3: Under *Members* click on *Add user*.

© 2021 INNEO Solutions GmbH

Step 4: Select the users you wish to add to the group. If the user you are looking for is not listed, it has not been configured under *Resources* > *Users* > *Edit user*. (See also Creating users 63.)

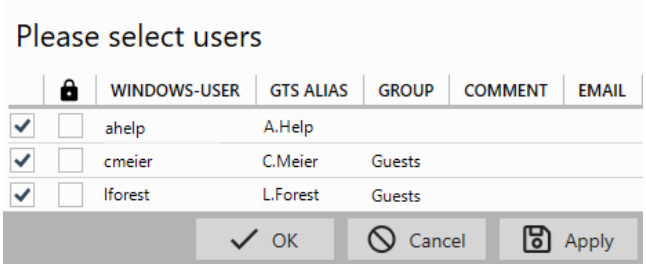

Step 5: Finish the dialog box by clicking on either:

– *Ok*: Add selected users and close dialog box,

– *Cancel*: Close dialog box without adding selected users,

– *Apply:* Add selected users without closing dialog box.

5.7.2.3 Assigning computers to computer groups


Each computer is identified by its Windows computer name. When you assign a computer to a computer group, the configuration settings for the computer group will apply to that computer.

Please note: Each computer can only be assigned to one computer group.

To create individual computers, go to the *Resources* 62 page.

Step 1: Go to the *Configuration* page and select the computer group that you want to add computers to from the *Groups* list.


Step 2: Go to the *Settings* item *Name/Members*.

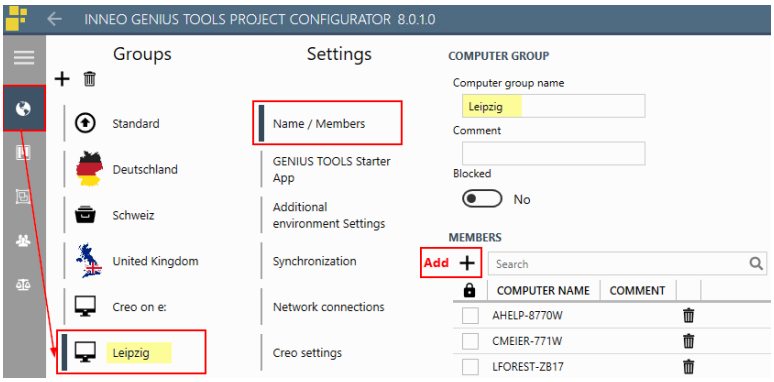

Step 3: Under *Members* click on *Add computer*.

Step 4: Select the computers you wish to add to the group. If the computer you are looking for is not listed, it has not been configured under *Resources* > *Computers* > *Edit computer*. (See also Creating computers 66.)

© 2021 INNEO Solutions GmbH

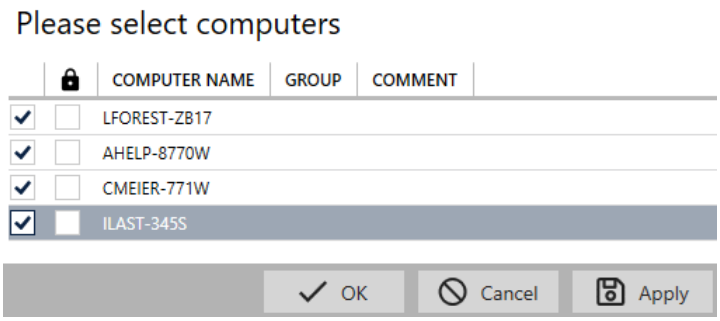

Step 5: Finish the dialog box by clicking on either:


– *Ok*: Add selected computers and close dialog box,

– *Cancel*: Close dialog box without adding selected computers,

– *Apply:* Add selected computers without closing dialog box.

5.7.2.4 Remove users and computers from a group

To remove a computer from a computer group go to the item *Members* in *Configuration* > *(select) Computer group* > *Name/Members* and click the recycle bin icon on the right of the computer name.

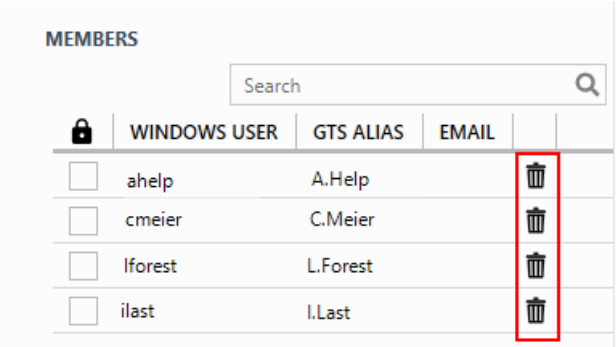

To remove a user from a group, select the respective user group in the *Configuration* page and click the recycle bin icon on the right of the user name.

5.7.2.5 Deactivate user and computer groups


You may want to deactivate a user or computer group if you want to keep the group configuration, but temporarily do not want to apply its settings, e. g. when testing.

To block a group, go to *Configuration* > *(Select group)* > Settings item *Name/Members*

To deactivate a group go to *Configuration* > *Group (select computer group or user group)* > *Name/Member* and select the item *Blocked.*

Yes: The configuration will be disregarded for this user group.
No: The configuration will be applied.

© 2021 INNEO Solutions GmbH

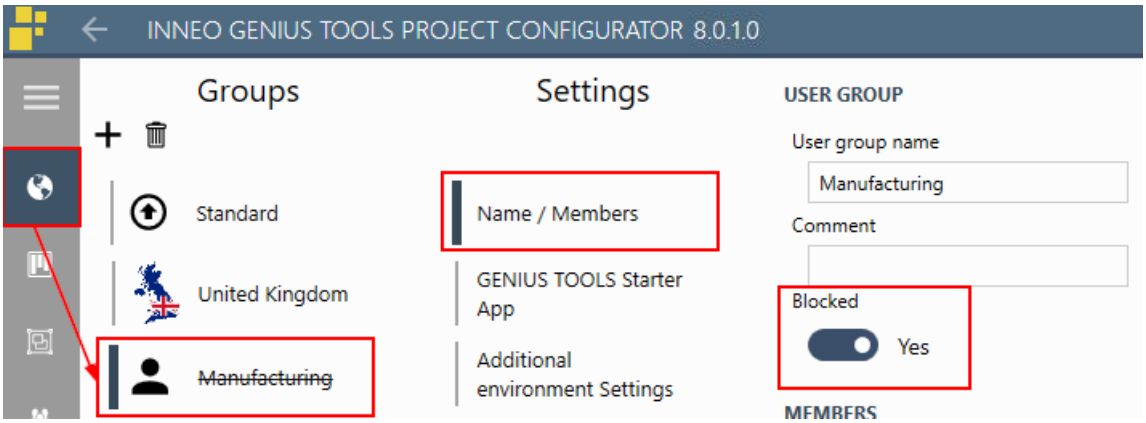

Deactivate user group


5.7.3 Blocking individual users or computers

Individual computers or users can be blocked. Settings made for these computers or users in GENIUS TOOLS Project Configurator will not be applied, that is, the system-wide general settings will be used for blocked computers or users.

Block a computer, for example, if you want to keep it assigned to a group, but temporarily want to disable the group's settings for this computer, e. g. when testing.

Blocking a user or computer lets you test the system-wide general settings defined in the standard group by disabling any overlying user- or computer-specific settings.


To block individual users, go to *Resources* > *Users* > *Edit/create user*. You have to use the list view.

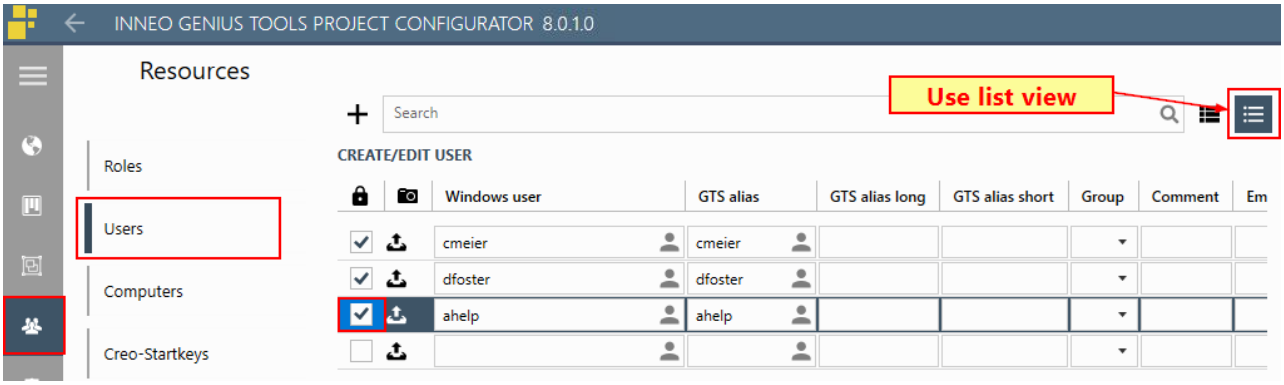

A blocked user

To block individual computers, go to *Resources* > *Computers* > *Create/edit computer*.

© 2021 INNEO Solutions GmbH

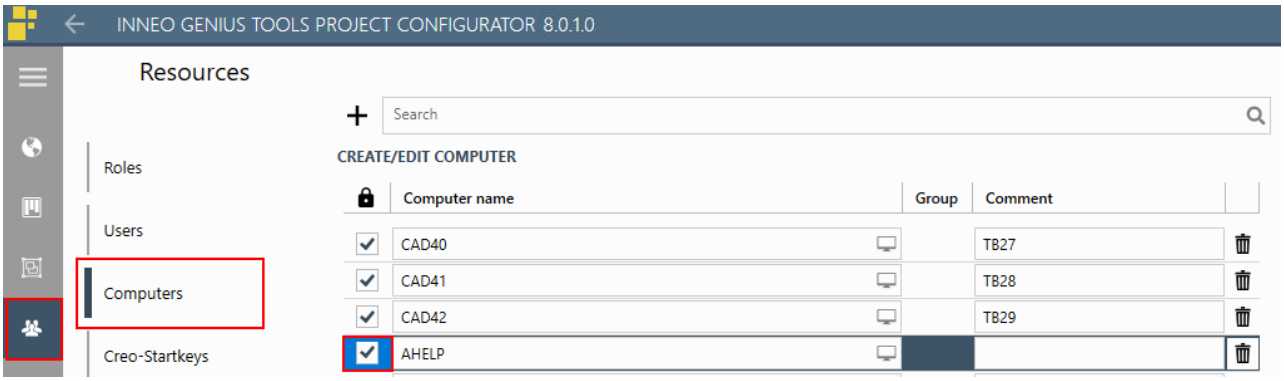

A blocked computer

5.8 Deviations from the default configuration

This sections explains how to define a UI language as a user-defined setting as an example for configuration deviations.

5.8.1 User-defined language

Before Creo starts, the Creo UI language can be set to one of the following: English, German, Italian, French, Spanish, Japanese, Chinese (Simplified), Chinese (Traditional), Korean, Russian, Brazilian Portuguese. The languages are provided for Creo by PTC.

Please note: GENIUS TOOLS Starter does not influence the way different locale settings interact. For information on supported settings, please refer to the PTC website or the product documentation.

The UI language for Creo can be defined on four different levels in GENIUS TOOLS Project Configurator:

– System-wide: *Configuration* > *Group: Standard* > *Creo settings* > *Startup settings* > *Language*

– Unit: *Configuration* > *Select unit* > *Creo settings* > *Startup settings* > *Language*

– Group: *Configuration* > *Select group* > *Creo settings* > *Startup settings* > *Language*

– Project: *Projects* > *Select project* > *Creo tab* > *Startup settings* > *Language*

The following example procedure refers to group settings.

Example: Setting the UI language for a guest via a user group

Starting situation:


– A company is located in Germany.

© 2021 INNEO Solutions GmbH

– A British designer is tasked with working on a project with the company in Germany for several weeks.

Procedure:

1. The system-wide setting for the Creo language is German. This is defined under *Configuration* > *Standard group* > *Creo settings* > *Startup settings* in the *Language* drop-down menu.

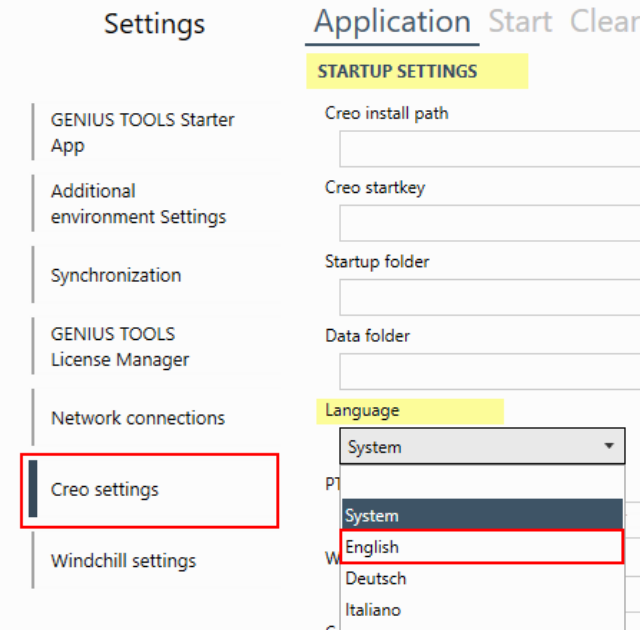

2. Go to the *Resources* page, select *Users* and configure a new user with the Windows user name for the British colleague.
3. Go to the *Configuration* page and create a new user group, calling it, for example, *Guests*.
4. Select the new user group, go to the settings item *Name/Members* > *Add user*. Add the user you have configured to the new user group.
5. Select the new user group, go to the settings item *Creo settings* and, under *Startup settings* > *Language*, select *English*.

5.9 Creating projects

Use GENIUS TOOLS Project Configurator to define configuration settings for Creo projects with only a few clicks. You can distribute a company-specific or commercially available environment to all workstations where it is needed. The projects you define are listed for the Creo users in GENIUS TOOLS Starter app. The user can select and start a project from the list.

A project consists of the following components

– a defined Creo release or weekly version

© 2021 INNEO Solutions GmbH

– interface and functional configuration files for Creo (*config.pro, config.ui*)

– start object templates

– project libraries

– drawing frames

– ModelCheck configurations

– additional applications (Toolkit)

– and many other settings relevant to working with Creo

Projects can also be used to assign Creo licenses to defined application computers or users, see Assigning Creo licenses to projects 120.

Each project can have an individually defined directory structure to house its component files. Additional applications or scripts can also be integrated into a project.

5.9.1 Defining Creo project configurations

A **project environment** consists of the following information:

– Creo Parameteric release and version to be used
– licenses to be used (startkeys, PSF files)
– configuration settings in configuration files
– user interface settings in UI files
– additional applications
– settings and link-ups for additional applications (batch files)
– Windchill availability in the Creo Parametric session
– plot settings
– additional required data:
– data referenced in the configuration files (colors, materials, templates etc. in the data directory)
– data for other tasks (information documents, additional tools)

A project configuration consists of Creo object data – filed in the data directoy – and Creo configuration files, which can be filed in any of the project-relevant directories *standard, unit, project* and *user*. Separating the Creo object data from the Creo configuration data and the additional applications ensures that Creo objects in an operating environment can be used in multiple projects.

Settings for a project environment come from the following directories *standard, unit, project* and *user*. (See also chapter on the call hierarchy. 19)

1. Data directory:
   <GTS-operatingenvironment>\data
2. Project directory:
   <GTS-operatingenvironment>\configuration\projects\%GTS_PROJECT_DIR%


© 2021 INNEO Solutions GmbH

3. Unit directory:
   <GTS-operatingenvironment>\configuration\units\%GTS_UNIT_DIR_NAME%
4. User directory:
   <GTS-operatingenvironment>\configuration\user\%USERNAME%

Data directory

The data directory is the main directory for data specific to an operating environment. All Creo object data is stored in subdirectories for each operating environment, for example *<GTS_ROOT_DIR>\data\sut_int_de_creo6*.

The Creo data is stored in the following directory structure within the data directory:

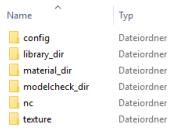

Data directory

- ***config:*** bend table, search.pro, hole chart, DTL file for drawing representation, DMT file for colors in Creo, FMT file for displaying parts lists in the browser
- ***library_dir:*** all library parts and their directories with MNU file.
- ***material_dir:*** material files for Creo in the MAT format
- ***modelcheck_dir:*** configuration files for ModelCheck
- ***nc_dir:*** templates and configurations for NC machining
- ***Drawings (texture):*** files for drawing frames, notes and symbols

All references to data in the data directory are defined in project configuration files, i.e., in a *config_*.pro* file in the projects directory. If there are no project-specific references, the general configuration files in the *standard* directory will be used, i. e., the *config_*.pro* files under *<GTS-OperatingEnv>\standard*.

Warning: Starting with GENIUS TOOLS Starter 6.0.1, a new configuration mechanism is in use. When you update from version 6.0.0.0 or migrate from Startup TOOLS 20xx, the files in the *projects* directory, that is, the general configuration files, will be moved to a new directory named *standard*. Project-specific configuration files located in subdirectories under *projects* will not be moved.

It is recommended to consistently use variables in your references. For example, a reference to a data directory from a *config_*.pro* uses the variable `$GTS_DATA`.

Example: A reference in the configuration file *config_sut_de_c6p_dir_file.pro* in the project directory *project_creo6p_de* reads

```
pro_library_dir $GTS_DATA\library_dir
```


© 2021 INNEO Solutions GmbH

This reference points to the directory *library_dir* within the data directory.

Hint: It is recommended to use variables where possible.

Please note: Many configuration options can be set only once in Creo. In this case, the value of the latest entry is used, that is, the value from the file that is copied last. There is a defined call hierarchy for the files, see Call hierarchy 19.

Project directory

The project directory defines which Creo operating environment is loaded. The project directory houses all relevant Creo configuration files, i.e., *config_*.pro, config_*.sup, customization_*_.ui* and *config_*.val*.

The configuration files can be placed in the standard directory for all projects (<*GTS-OperatingEnv*>*configuration**standard*), or in the project-specific directories that are created automatically with each new project, e.g., <*GTS-OperatingEnv*>*configuration**projects**project_creo5p_en*. When you configure a project, you can point to a project-specific directory for the configuration files. If you do not configure a project-specific directory, the global configuration settings from the standard directory will be used.

You can also place batch files both in the standard directory and in the project-specific directory. The batch files will be run before starting the software. For more information on batch files, please refer to Configuring an operating environment with batch files 22.

Warning: Starting with GENIUS TOOLS Starter 6.0.1, a new configuration mechanism is in use. When you update from version 6.0.0.0 or migrate from Startup TOOLS 20xx, verify references to configuration files in your batch files. References to ..*configuration**projects*\ have to be changed to ..*configuration**standard*.
Batch files in the project-specific subdirectories under *projects* do not have to be changed.

Unit directory

The unit directory defines which Creo operating environment is loaded. The unit directory houses all relevant Creo configuration files, i.e., *config_*.pro, config_*.sup, customization_*_.ui* and *config_*.val*.

You can place batch files in the unit-specific directory. The batch files will be run before starting the software. For more information on batch files, please refer to Configuring an operating environment with batch files 22.

© 2021 INNEO Solutions GmbH

Specifying the Creo installation directory

There are three different ways of configuring the Creo installation directory and start command:

1. On the Project Configurator *Configuration* page for the standard group or another group or unit: *Configuration* > *Select group* > *Creo settings* > *Creo install path*
2. In the GENIUS TOOLS Starter project: *Projects* > *Select project* > *Creo* > *Release* > *Given path*
3. Via the local Windows registry on the application computer: *Projects* > *Select project* > *Creo* > *Release* > *Select Creo version*

Depending on your requirements, each way of defining the installation directory can make sense.

Please note: In general, it is recommenden to determine the installation path via the local Windows registry.

Consider the following criteria:

1. If you want to make sure that each application computer throughout your company uses the same Creo version, configure the Creo installation directory via the *Configuration* page. In this way, you will not have to specify it for each project.
2. If a variety of versions or weekly versions is in use, for example because you are providing services for different customers, configure the Creo installation directory in each project.
3. If local installations are inconsistent or not known in detail, fall back on the local Windows registry to determine the Creo installation directory. You can specify which Creo version to look for, the highest weekly version for which will be used.


5.9.2 Creating a new project

To create a new project, go to the *Projects* page and click *Create* (1). A new project (3) is shown in the list with the name *New Project* and a number if there already is a project of the same name. The new project becomes visible to the users as soon as you save your changes to the database.

You can create projects for all applications listed under *Application type*. Applications are: *Creo Parametric, Creo Direct, Creo Simulate, Creo Layout* and *Creo Options Modeler*. In *Apps* you can create projects that run with other programs. (See chapter App-Projects: Creating projects of other applications.) 136

© 2021 INNEO Solutions GmbH

Click on a project in the projects list to edit the project details in the right pane. Note that there are three tabs with project details: *Creo* (4), *Windchill* (5), *Licences* 120 *(6)* and *Environment* (7).

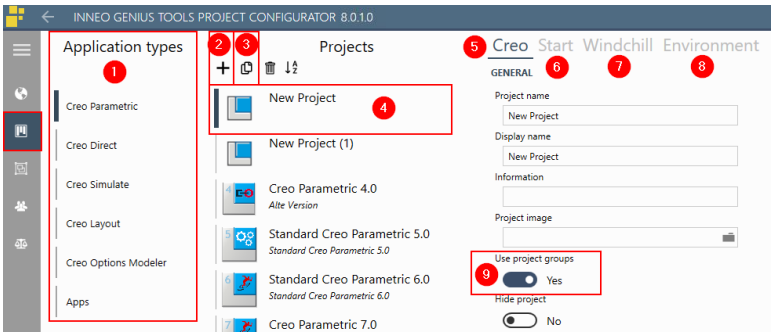


Some input fields are preset, others come with a browse button to define directory paths. Optional fields are given in brackets in the following description. If you do not specify the optional settings, the general settings for the standard group or the settings you may have made for the unit, computer group, or user group, will be inherited by the project.

5.9.3 Copying a project

You can copy existing projects with the Copy button (9). Enter a new name and the remaining settings as in the previous chapter.

If you also want to copy the project groups of the existing project, set the *Use project groups* switch (10) to *Yes* before copying. In the following dialog box answer the question on transferring the memberships with *Yes*.

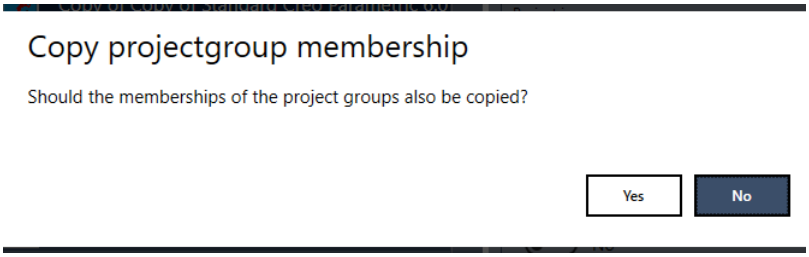


For detailed information on the use of project groups, please refer to the Working with project access groups 142 chapter.

5.9.4 Displaying projects to users

Projects are displayed to users in GENIUS TOOLS Starter App as follow:

© 2021 INNEO Solutions GmbH

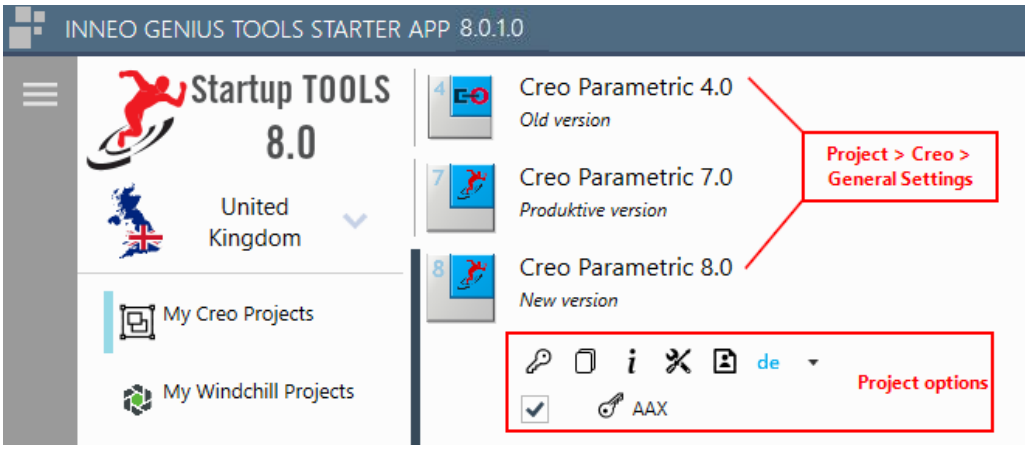

Display of projects in GENIUS TOOLS Starter App

Settings for project display, such as the project image and info text, are entered in *Projects > Application types > Tab: Creo > General*.

For the display of project options, see Defining project options 158.

▶ General

Project name
A unique name without space characters that identifies a project, e.g. project_creo6p_en. The default setting *New Project* can be overwritten. The project name can be changed at any time.

Display name
A unique name that is displayed for the users in GENIUS TOOLS Starter App. In GENIUS TOOLS Starter App, the projects will be listed alphabetically according to their *display name*.

Information (optional)
Short text describing the project. The information text will be shown below the *display name*.

Project image (optional)
A picture that is displayed for the project in GENIUS TOOLS Starter App. Use PNG or JPEG files.

Sort projects

The order of projects displayed in GENIUS TOOLS Starter App can be changed here by dragging and dropping projects in the *Projects* list. You can also sort the projects alphabetically by clicking the *Change sorting* button in the *projects* column.


© 2021 INNEO Solutions GmbH

Use project access groups

Projects can be restricted to users who belong to a defined project access group with specific access rights. Members of a project group can only view in GENIUS TOOLS Starter App the projects they have access to. See chapter Using project access groups. 143

5.9.5 Hiding and blocking projects

Projects that shall not be displayed to the user in GENIUS TOOLS Starter App can be hidden in *Projects* > *Application Type* > *Projects* > *Tab: Creo* > *Block: General*.

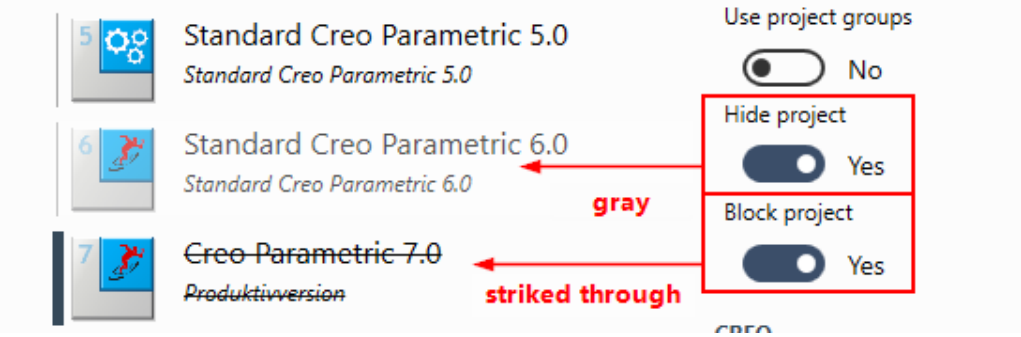

Blocked projects are displayed in gray in GENIUS TOOLS Project Configurator. Hidden projects are stroked through.

When you set *Hide project* to *Yes*, the project is not listed in GENIUS TOOLS Starter App, but can still be started using a start parameter. This can be a useful option for Windchill projects, for example.

Hide project

No (default): The project is listed in the UI.

Yes: The project is not displayed on the user interface in GENIUS TOOLS Starter App, but can be selected using the `-gts:p:<project name>` start parameter.

A blocked project, by contrast, cannot be started using a start parameter.

Block project

No (default): The project can be accessed.

Yes: The project is not displayed and cannot be accessed on the application computer.

5.9.6 Settings for Creo projects

After you have created a new project, specify the following settings in the *Creo* tab.

Note on Creo APP: Starting with Creo 1, different applications in the Creo family access the same information, which is placed in a common directory structure on installation. The basic libraries for Creo Parametric and Creo Direct are identical. This also holds for other

© 2021 INNEO Solutions GmbH

applications, called APPs for short. When you configure a new Creo project, set the Creo APP option to determine which application to start.

▶ Creo

Release
Defines the Creo version to be used. A Creo path can be configured, or determined automatically from the registry of the application computer.

Fixed path: Enter the Creo directory, which may differ from the Creo directory for the standard group as defined on the *Configuration* page. If you do not specify a Creo directory, the settings for the standard group will be used (see *Configuration* > *Standard* > *Creo settings* > *Startup settings)*.

Creo versions: Select a Creo version. If you select Creo 6, for example, the installation directory for the latest Creo 6 release on the application computer will be determined from the registry.

Please note: Creo has to be installed locally on the application computer in order to have registry entries available. The user has to have read permission in HKLM.

Lowest shipcode (optional)
Lowest usable weekly version. There is a dropdown list for versions up to Creo 4. Starting with Creo 5, enter the required version manually in a four-digit format like *6.0.1.0*.

Highest shipcode (optional)
Highest usable weekly version. There is a dropdown list for versions up to Creo 4. Starting with Creo 5, enter the required version manually in a four-digit format like *6.0.1.0*.

Project folder (optional)
Folder in *configuration\projects*. The files *config.pro, config.sup, customization.ui* and *config.val* are copied as templates from this directory to the application computer.

Data folder (optional)
Main directory of an operating environment to which Creo-related data is saved.

Please note: The files *config.pro*, *config.sup* and *customization.ui* should be stored separately from the data structure due to their potential multiple use. These configuration files should be managed in the specific subdirectories of the configuration directories *Units*, *Projects*, or *Users*, or in the *Standard* directory for global settings.

The section *Creo Folders* is explained in the chapter Workspace for Windchill 123.

5.9.7 Defining start behavior for a project

In the *Start* tab specify the start behavior of an individual project. These specifications overwrite the specifications for the start behavior set for groups or the default settings

© 2021 INNEO Solutions GmbH

(main menu item *Configuration* > *Group (select)* > *Creo Settings* > *Tab: Application* > *Area: Startup behavior*). For more information consult Configuration concept. 16

▶ Startup settings

Starting behaviour
Select the application which will open the project.

Creo (default): The project is started with Creo.

External: The project is started with another application (e.g. SAP). For more information got to chapter Linking projects with SAP 135.

If *External* is selected two additional fields open:

External start command: Enter the path to the executable file that is to start the project.

Command arguments for external start: Enter commands that specify how the executable file is started. Set the commands in quotation marks.

Creo startkey
The start command (PSF file) of the respective Creo installation. The directory of the Creo installation is defined above under *Release*. You can also overwrite the default setting (e.g. parametric.psf) and specify a path here, such as `D:\PTC\Creo6\bin\proel.psf`

Warning: If several keys are permitted for a project (in the *Licences* tab), the startkey will become the default setting for the selection field in GENIUS TOOLS Starter App, i. e. users will be able to choose another startkey.

Please note: If a defined startkey is not available on the client computer, you can choose to display the project in GENIUS TOOLS Starter App as follow (Go to *Configuration* > *Groups* > *GENIUS TOOLS Starter App* > *Projects* > *Display invalid projects*):

– Display with error warning: Project without a valid license is displayed with a red background and cannot be started. (Select *Yes, as error*)
– Project is not displayed. (Select *No*)

Synchronize Creo startkey

Yes: The start key (PSF file) is copied from the project folder to the Creo BIN directory.

No: The start key is not copied, even if system-wide synchronization has been set up.

© 2021 INNEO Solutions GmbH

Please note: For this option, write permissions are required on the application computer in the Creo BIN directory.

Please note: Take care when synchronizing startkeys. A configuration error may lead to erroneous distribution of startkeys to application computers that should not have defined licenses available.

Language (See chapter Language of a Creo project. 119)

Synchronize with project start
Defines whether project data is to be synchronized before a project opens. This guarantees that all configuration and batch files are up to date when starting a project.

No (default): No data is synchronized before opening a project.

Yes: Data is synchronized, i. e. the following directories in the *configuration* directory: *plot, standard, units, projects* and *users*.

5.9.8 Language of a Creo project

The language of the user interface of Creo can be set in the *Projects* main page under *Application type* > *Projects* > *Tab: Start* > *Startup settings*.

The following languages are available: English, German, Italian, French, Spanish, Japanese, Chinese (simplified), Chinese (traditional), Korean, Russian, Brazilian Portuguese. Choose one of the following setting:

Language
The language in which Creo should run can be specified. If no setting is selected, Creo Parametric will select the language of the operating system automatically.

<not specified / empty>: GENIUS TOOLS Starter does not create a language variable (`LANG`) on the application computer (recommended).

System: The country-specific settings of the operating system are adopted.

<language>: This language is used, and the language variable `LANG`, if defined on the application computer, will be set to that language.

Creo language as project option

Administrators can also grant users the possibility to select a language, see language selection field.

5.9.9 Default settings for license borrowing

You can define the maximum duration of borrowing PTC and GENIUS TOOLS licences in *Projects* > *Application types* > *Tab: Start*.

© 2021 INNEO Solutions GmbH

▶ License borrowing

Maximum duration
Specify for how many days licenses may be borrowed at most. Please note that in Creo, the maximum borrow duration is determined by the environment variable `LM_BORROW_DURATION`. Project Configurator does not check whether the value you enter is valid for Creo.

Default duration
Specify the borrow duration in days that is set as the default when a user borrows licenses.

▶ Creo license servers

Creo license server
Select the license server to be used for this project. The list of choices correspond to the entries created in Resources. 74
No selection (default): The license server(s) specified in the Creo startkey are used.

5.9.10 Assigning Creo licenses to projects

A project can be started with a Creo license packages by assigning one or several Creo startkey to it. A startkey is a configured start command that opens Creo with one or several defined licenses or license extensions. Startkeys are PSF files located in PTC's bin directory.

In *Projects* > *Application* > *Select project* > *Tab: Licences* all startkeys that have been created as a resource are listed. (See chapter Creating Creo startkeys 73.) Startkeys checked in this dialog will be those that users can select in GENIUS TOOLS Starter App. If users are provided with several keys to choose from, the number of projects can be minimized.

Administrators can create projects that either have

1. one startkey or
2. several startkeys that users can choose from in GENIUS TOOLS Starter App.

Projects with several startkeys can either


2.1. have a startkey set as default or

2.2. use the startkey last selected by the user.

1. Projects with one startkey

In the *Start* tab select a startkey from the list in *Creo Startkey Configuration*.


© 2021 INNEO Solutions GmbH

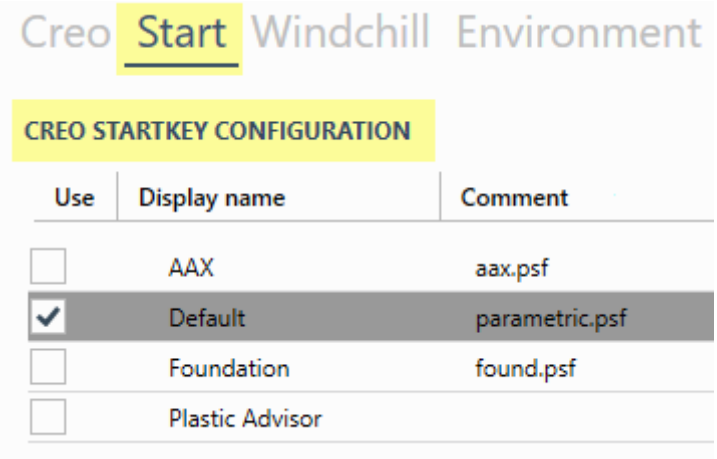

Projects > Start tab

You can specifically enter a startkey for a project in the above section *Startup Settings*, but it is not necessary. (*Tab: Start > Section: Startup Settings)*


If you do, take care to enter the same PSF file. If the two entries are not identical, users have to first chose one startkey in the selection dialog before being able to start a project.

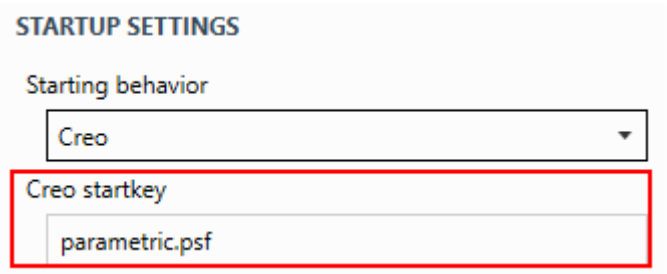


Licenses tab > Startup Settings

2. Projects with several startkeys to choose from

If several startkeys are permitted for a project in the *Licenses* tab, users can select one of them in GENIUS TOOLS Starter App:

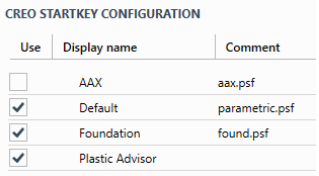

Mehrere Startkeys in der Registerkarte Lizenzen

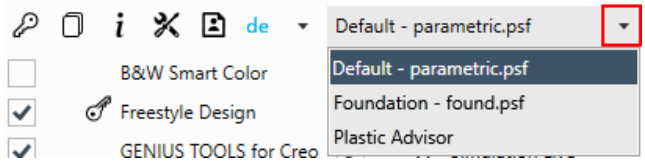

Auswahl eines Startkeys im Info-Bereich von GENIUS TOOLS Starter App

1. Tick the Creo startkeys that are to be permitted for the project in *Tab: Start> Section: Creo-Startkey Konfiguration.*
2. Decide whether or not to fill in the field *Creo startkey* in the section *Startup Settings* (see Figure 1). This gives you the following possibilities:

© 2021 INNEO Solutions GmbH

2.1. Projects with several startkeys and a default startkey

In the *Startup Settings* enter the Creo startkey that should be the standard in the selection field in GENIUS TOOLS Starter App. Users then do not have to select a startkey before being able to start a project. If users need another startkey, they have to activate it in t he selection dialog.


If this field is left empty and there are multiple startkeys permitted for a project, there is no default startkey set for selection.

2.2. Projects with several startkeys and without a default startkey

If there is no startkey inputted in the section *Startup Settings,* GENIUS TOOLS Starter App will start Creo with the startkey that was last selected by the user for this project.

5.9.11 Assigning Creo license extensions to projects

In addition to selectable Creo start keys, you can create the option for license extensions to be selected individually, i.e. independently of the start key for a project. Users see this as a checkbox in a project.

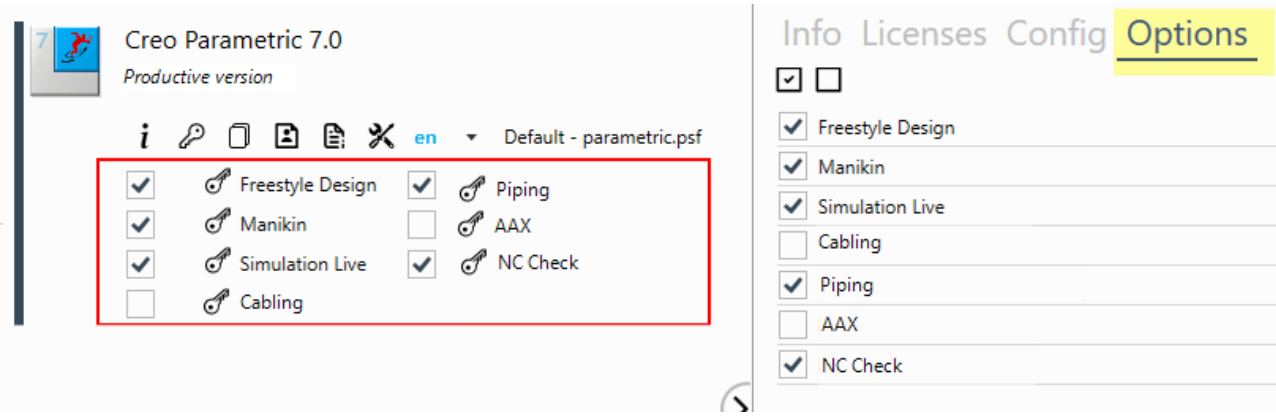

Project options in GENIUS TOOLS Starter App: checkboxes for license extensions

Advantages:
Assigning selectable license extensions to a project can reduce the number of Creo startkeys created, and therefore reduce the number of projects available to users in GENIUS TOOLS Starter App. If the license conditions allow it, you can, for example, dispense with the selection of a Creo start key altogether by creating all license extensions as project options

These project options are not created in GENIUS TOOLS Project Configurator, but with config.pro blocks. The procedure is explained in the chapter Using project options 124.

© 2021 INNEO Solutions GmbH

5.9.12 Workspace for Windchill

Set workspace directories for Windchill and Creo in the dialog *Creo folders* in the *Creo* tab.

▶ Creo folders

Windchill user root directory
Enter the PTC_WF_ROOT directory to which the workspace and user-defined settings can be saved.

Please note: If you want to specify separate Windchill directories for various Creo versions you can use variables like `%GTS_PROERELEASE%`, which will resolve to the Creo version, e.g., Creo6, or `%GTS_PROJECT_NAME%` in building your path.

Windchill cache directory
Cache directory for caching of Windchill data. To use automated server registration, the Windchill cache directory has to be under the Windchill user root directory, see Automatic Windchill server registration 149.

Please note: Try not to modify this option. To change the storage location of the cache, rather change the setting *Windchill user root directory*.

Creo Agent home directory
Directory in which data relevant for Creo Agent, such as server information, is saved. We recommend setting Creo Agent Home to `%PTC_WF_ROOT%`.

Please note: If you want to specify separate Windchill directories for various Creo versions you can use variables like `%GTS_PROERELEASE%`, which will resolve to the Creo version, e.g., Creo6, or `%GTS_PROJECT_NAME%` in building your path.

Dynamic server settings for different Creo versions

When you change the Creo version, the local cache directories should be deleted from the disk and re-created with the current Creo version. This means that when you use different Creo versions, you also need to create different cache directories. Also, the storage location for Windchill server registration information should be different.

There are two ways to ensure separate cache and server registration storage for different projects:

1. Configure independent Windchill user root directories for different projects.
2. Use variables in configuring the Windchill user root directory.

The following variables can typically be used:

© 2021 INNEO Solutions GmbH

Variable	Description
%GTS_PROERELEASE%	Returns the Creo version as Creo3, Creo4 etc.
%GTS_PROJECT_NAME%	Returns the project name
%username%	Returns the name of the Windows user
%computername%	Returns the computer name

These variables can be used in the setting the path for the Windchill user root directory.

Example: *D:\ptc\workspaces\%username%\ %GTS_PROERELEASE%\%GTS_PROJECT_NAME%*

The Creo Agent home directory, where server registration information is saved, schould also depend on the Windchill user root directory. To set this up, you can define a variable for the Windchill user root directory under *Configuration* > *Standard* > *Additional Environment Settings*.

Name	Value
Creo Agent Home	%PTC_WF_ROOT%

Making the Windchill user root directory dependent on the Creo version by using %GTS_PROERELEASE% and making the Creo Agent home directory dependent on that via %PTC_WF_ROOT% will lead to all server information and data being stored separately per version.

If you also make the Windchill user root directory dependent on the project name using %GTS_PROJECT_NAME%, the storage location will be project-dependent and will change with a new Creo version.

Do not use %GTS_PROJECT_NAME% if you use GENIUS TOOLS Starter projects to manage different Creo license packages, because you cannot use local workspaces for multiple projects in this way.

5.10 Making use of project options

Administrators can grant users the ability to select the following project options before starting a project:

– Creo language (1)

– Creo startkey (2)


– company-specific project options for:

  – license extensions, such as Simulation Live or Manikin,

© 2021 INNEO Solutions GmbH

– additional programs, such as Keyshot or Model Processor User,

– any configuration option defined in a Config.pro block.

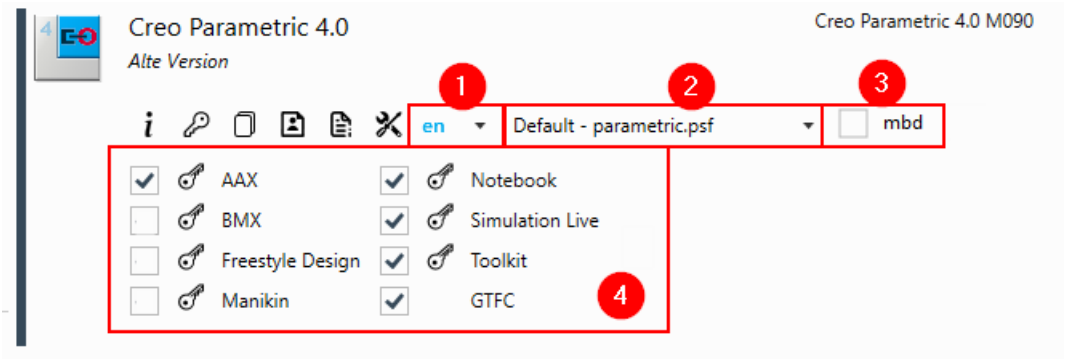

The drop-down menus for languages and startkeys are defined in GENIUS TOOLS Project Configurator, see chapter Defining project options 158.

This chapter explains how to create the checkboxes for project options. There are two types of project options: single (3) and combined (4).

Single project options

– available for selection in one or more projects

– created with basic config.pro blocks 17 and are valid according to the call hierarchy for config.pro blocks


Combined project options

– available for selection in one or more projects

– combine configuration options from different directories and configuration levels

– useful for companies with complex organization structure

– created with conditional config.pro blocks 18 and valid according to call hierarchy for config.pro blocks if condition(s) are met.

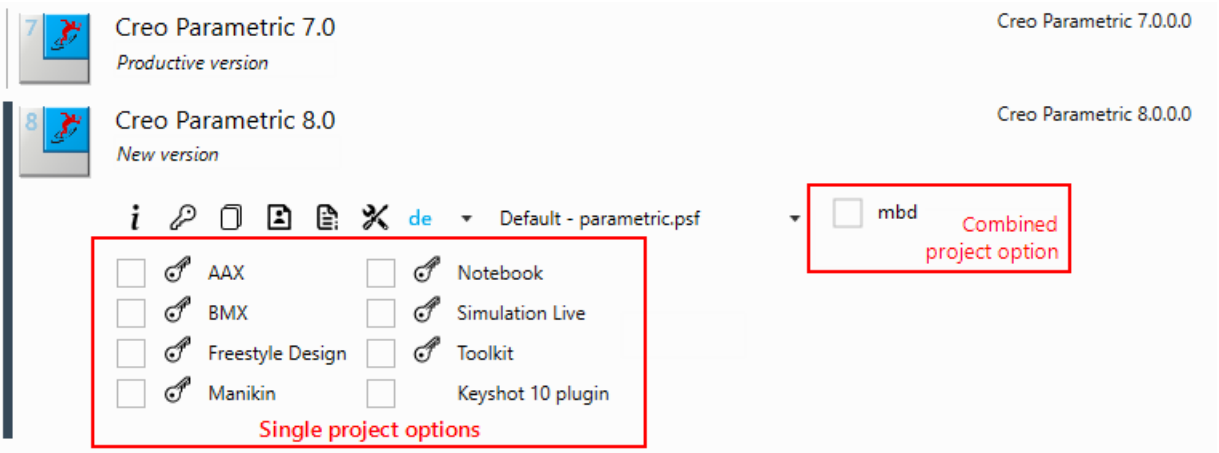

© 2021 INNEO Solutions GmbH

Creating single and combined project options: Overview

Administrators can create project options by placing a config.pro block in the required configuration level (single project option 126) or by creating a conditional config.pro block (combined project option 131). The following chapters explain the procedure step-by-step.


	Basic config.pro block		Conditional config.pro block	
	without GTS config.pro variables	**with GTS config.pro variables**	**without GTS config.pro variables**	**with GTS config.pro variables**
Validity	according to call hierarchy 19		according to call hierarchy and when conditions are (set by tag ID) are met	
Result 1) User interface of GENIUS TOOLS Starter App	no checkbox	single project option	grouped project option	combined project options are always displayed; single project options appear after selecting a combined project option
2) configuration options are set	always	after selection	after selection	after selection

5.10.1 Single project options

The project options can be selected in checkboxes below the project name and in the Options tab. The tab can be opened with the arrow symbol, which becomes visible if some checkboxes cannot be displayed below the project.

The order and display of the checkboxes can be defined, see below.

© 2021 INNEO Solutions GmbH

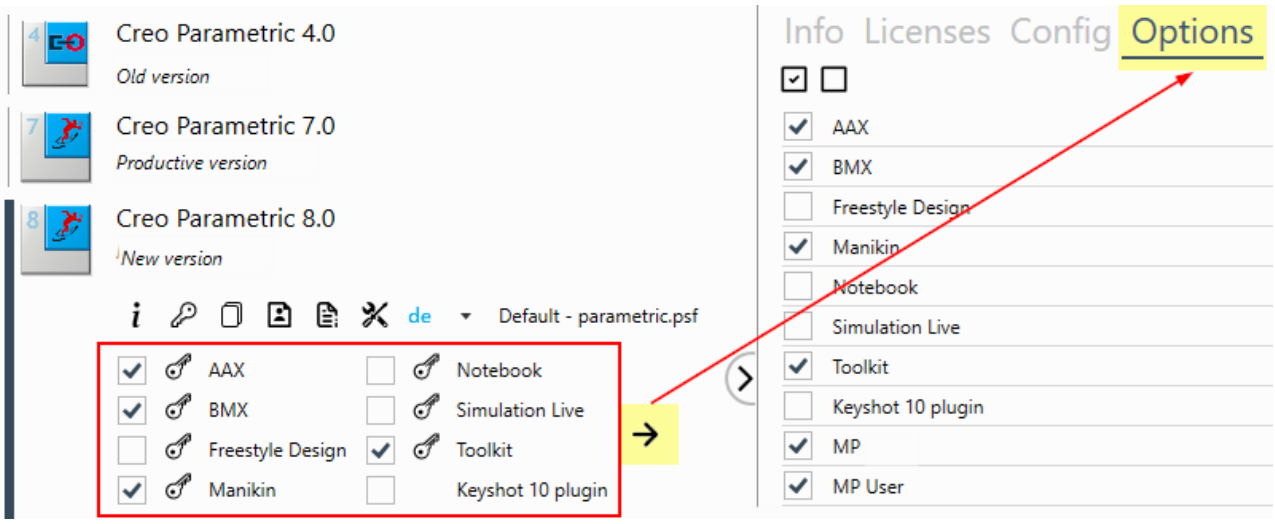

Creating single project options


A single project option can contain multiple configuration options, license extensions and/or add-on programs.

Configuration files can be located in four subdirectories of the configuration directory: standard directory for global system settings, unit directory, project directory for individual projects, and user directory for user-defined settings.

Procedure:

- Decide to whom the project options should be available to. Settings can apply to all ("standard") or to individual units, projects or users. The settings are processed according to the Call hierarchy for configuration files 19.
- Go the the corresponding directory, e.g. *<operatingenvironmentname>\configuration\projects\project_creo7p*.
- Create a text file in this directory for each project option. The name must begin with *config* and end with *.pro*, for example, *config_1_lic_sim_live.pro*.
- Enter the following necessary command: *! gts_is_selectable = true*.
- Specify further GTS config.pro variables in the file as required. The table below lists all variables.

© 2021 INNEO Solutions GmbH

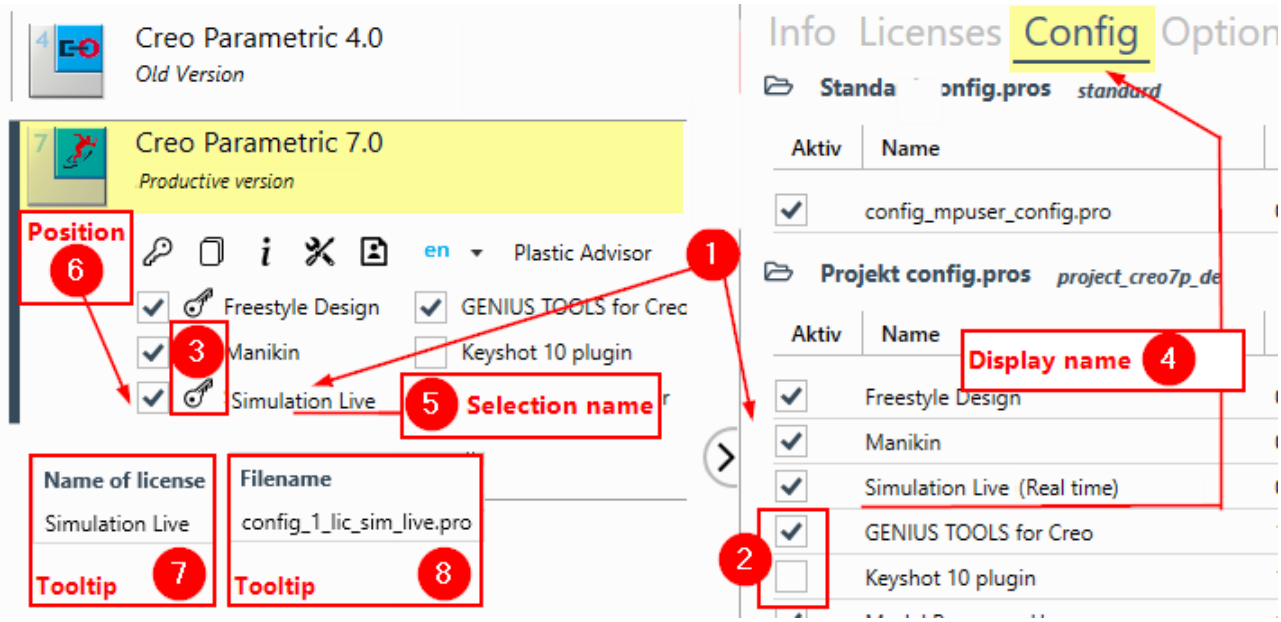

Variables for displaying a project option (numbering see table)

	GTS config.pro variable	Specification/ Example	Description
1	`! gts_is_selectable =`	true/false	Defines if the project option appears as a checkbox (in the Options tab as well as below the project name)
2	`! gts_selection_default =`	true/false	Defines whether the project option is selected by default or not, i. e. whether the box is checked. Default: false.
3	`! gts_creo_lic =`	379 385	License number(s) of the extension(s) to be added. Multiple numbers must be separated with empty space. – if this entry is set, an icon key appears next to the checkbox in the project – license numbers can be read from the *license.dat* file in the licensing folder under *PTC/FLEXnet Admin License Server*
4	`! gts_display_name =`	Simulation Live	display name in the Config tab – if not specified, the file name is used

© 2021 INNEO Solutions GmbH

	GTS config.pro variable	Specification/ Example	Description
		(Real-time simulation)	
5	! gts_selection_name =	Simulation Live	display name in selected project and in the Options tab – if not specified, *gts_display_name* is used
6	! gts_selectable_pos =	1	specifies the position in the list of project options. This does not change the order in which the configuration file is processed. – if this command is not specified, the project option will be placed after the options with position and ordered alphabetically
7	! gts_creo_lic_display_name =	Simulation Lives	Tooltip text for license symbol (key) – if not specified, the line under *License name* is empty
8	! gts_description =		Tooltip text for name of project option – if not specified, the file name is used
9	! gts_requires_base_lic =	PROE_Foundation	Defines condition: if the base license is not available, the project option will be deactivated, i. e. no checkbox is displayed. – Multiple licenses must be separated with empty space. The project option will be deactivated, unless all of the listed licenses are available.
10	! gts_auto_activate_base_lic =	PROE_Foundation	Defines condition: If the base license is available, the project option will be preselected, i. e. the box is checked.

© 2021 INNEO Solutions GmbH

GTS config.pro variable	Specification/ Example	Description
		– Multiple licenses must be separated with empty space. The project option will be deactivated, unless all of the listed licenses are available. – Take care not to simultaneously set the variable `!gts_selection_default` to `true`.


If the file is to control an auxiliary application, specify the corresponding configuration option, such as a protkdat entry. (Example: protkdat $GTS_ROOT_DIR\configuration\application\protk_keyshot.dat). These entries do not create icons next to the checkbox.

Example: Configuration for the "Simulation Live" project option in GENIUS TOOLS Starter App

1. Choose the directory which controls the settings for the project (standard, units, projects, users), here: *<nameofworkingenvironment>\configuration\projects\project_creo7p*.
2. Create a textfile with the name *config_1_lic_sim_live.pro*.
3. Enter the following specifications in the configuration file:

```
! gts_is_selectable = true
! gts_selection_default = true
! gts_creo_lic = 379
! gts_display_name = Simulation Live (Echtzeitsimulation)
! gts_selection_name = Simulation Live
! gts_selectable_pos = 3
```

Result: Display in of a checkbox for the "Simulation Live" project option in the project Creo Parametric 7.0

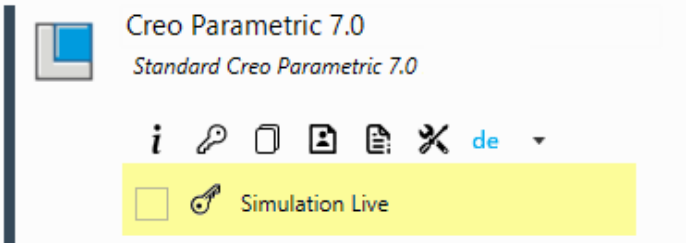


gtpc_settingsApp_example.png

Arranging the checkboxes for single project options


The display of the checkboxes can be controlled in the selected project:

© 2021 INNEO Solutions GmbH

1. To do this, select a group in the main menu item *Configuration* (or Standard for all settings).
2. In the item *GENIUS TOOLS Starter App > Area: Options* specify the number of rows and columns.

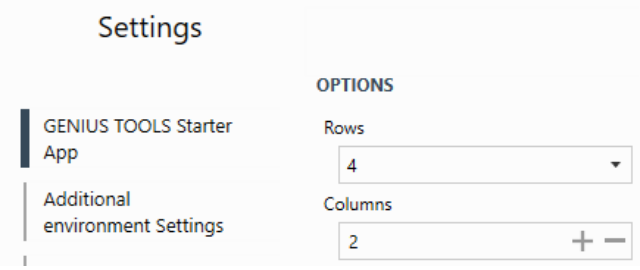

Settings in GENIUS TOOLS Project Configurator

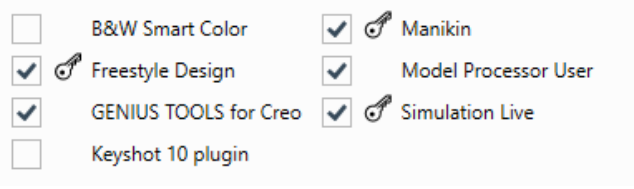

Display in GENIUS TOOLS Starter App


5.10.2 Combined project options

Combined project options can contain configuration options, license extensions and/or add-on programs. Combined project options offer possibilities that single project options cannot, as they are created with conditional config.pro blocks 18.

– With one click, several configuration options can be activated that are located in different directories and levels. (Use case 1)

– Combined project options can be stored in directories other than the project directories. (Use case 2)

– After selection of a combined project option additional single project options can be made available. (Use case 3 and 4)

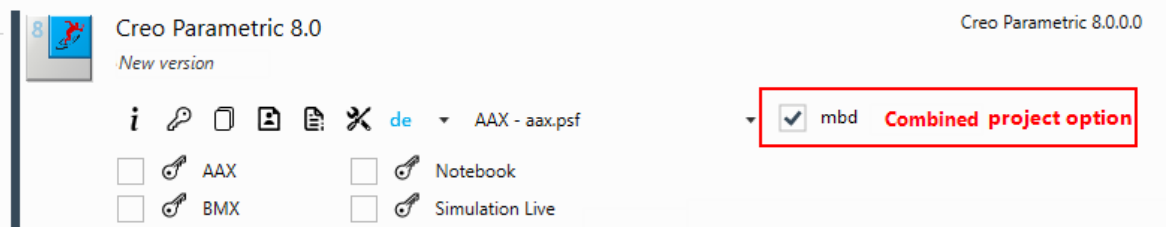

Users must activate the checkbox of the project option in GENIUS TOOLS Starter App. The underlying config.pro block is then read at project start.

1. Basics: Creating a combined project option

A combined project option appears as a selectable checkbox in GENIUS TOOL Starter App after having created at least one conditional config.pro block 18 with a free tag ID.

A **free tag ID** is an additional textual marking on a config.pro block that defines a combined project option and limits the validity of the block to it. The tag ID must not be assigned to a unit, otherwise it can be freely choosen.

© 2021 INNEO Solutions GmbH

Example: *config_lic.mbd.pro* – "mbd" is the free tag ID, if there is no unit called "mbd".

The functionality of a combined project option only comes into its own when you create multiple config.pro blocks with identical tag IDs. These are read across folders and levels, i. e. the content of all config.pro blocks with identical tag IDs is combined (added). The following rules apply:

- The configuration options specified in the combined project option are read at project start if all conditions set by tag IDs are met.
- If configuration options conflict, the option is applied according to the Call hierarchy for configuration files 19.
- The first config.pro block with the free tag ID creates the needed checkbox of the same name (here: mbd).

Use case 1: Different contents added across folders

Procedure: For *one* combined project option, assign *one* free tag ID to multiple files. The first free tag ID creates the checkbox to select.

1. Decide on which projects the project options should be available. Settings can apply to all ("Standard") or to individual units, groups, projects, or users.
2. Go to a folder you selected in (1).
3. Create a text file with a meaningful free tag ID, e. g. mbd. The name must start with *config* and end with *.freetagid.pro*, e. g. *config_lic.mbd.pro*.
4. Specify the required Creo configuration setting(s) in the file.
5. Repeat this for all config.pro blocks in all required folders and settings, for example:
   - *config_abc.mbd.pro* in the unit folder
   - *config_lic.mbd.pro* in the project folder
   - *config_mapkeys.mbd.pro* in the user folder

Result: The combined project option "mbd" has been created, which contains Creo configuration options from config.pro blocks from three different configuration levels.

2. Further use cases for one combined project option

2.1. Creating a combined project option with restriction to one unit

Combined project options can be restricted to one unit by adding a unit tag ID to a config.pro blocks with a free tag ID.

A **unit tag ID** is a textual marker that restricts the validity of a config.pro block to a unit. The difference to a config.pro module that is located in a specific unit directory, project options with a unit tag ID can be located in all directories and can be activated by selecting the unit – independent of the storage location.

© 2021 INNEO Solutions GmbH

A unit tag ID is assigned when creating a unit in GENIUS TOOLS Project Configurator, see Using unit tag IDs 100.

Please note: A config.pro block with a unit tag ID but without a free tag ID does not generate a project option.


Use case 2: A project should have two different project options depending on the selection of the unit available for selection.
Consult the example in Using unit tag IDs. 101

2.2. Creating a combined project option with restriction to several unit


A combined project option can be activated by multiple units, see Project options in a multi-unit environment 101.

2.3. Creating a combined project option and further project options

You can create a combined project option that generates further single project options after selection.

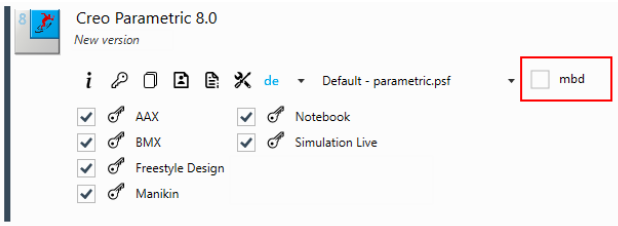

Before selection of the combined project option mbd

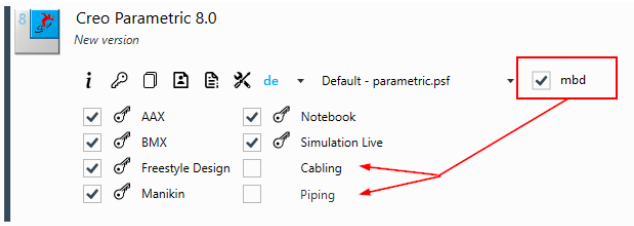

After selection of the combined project option mbd

Use case 3: When the project option METAL is selected, three additional single project options (X, Y, Z) are displayed

Procedure: For a combined project option, assign *one* free tag ID to *multiple* files and write GTS Config.pro variables single project options in each of these files.

1. Decide the configuration levels for which the project option should be available, i.e. system wide ("Standard"), individual units, projects or users.
2. Go to a directory you selected in (1).
3. Create a config.pro block with a free tag ID, e. g. *Metall*. The name of the text file must start with *config* and end with *.freetagid.pro*, e. g. *config_lic.metal.pro*.
4. Write into this file the GTS config.pro variables

   `! gts_is_selectable = true`

   `! gts_display_name = Cabling` – "Cabling" is the display name for the first single project option that will appear after selecting the project option *Metal*.
5. Specify further required GTS config.pro variables and/or further Creo configuration setting(s), see table. 126

© 2021 INNEO Solutions GmbH

3. Creating multiple combined project options

Each free tag ID creates a combined project option, hence, if two free tag IDs are used in a file name, there are two combined project options to choose from, e. g. *config.mbd.plastad.pro*. If there is no checkbox for selection yet, it will be created.

The order of the free tag IDs does not affect the validity of the Config.pro block.

This case is typically used in connection with further project options (use case 4) or with further configuration options (use case 5).

3.1 Creating two combined project options that allow further project options only after joint selection

Use case 4: When selecting the project options MBD and PLASTAD together, an additional project option NC shall be displayed.

Initial situation: The config.pro blocks *config_lic.mbd.pro* and *config_lic.plast.pro* already exist.

Procedure: Write GTS config.pro variables to a config.pro block to create a single project option, and add the free tag IDs that already exist to the file name.

1. Decide on which projects the two project option selections should be available (Standard, unit, project or User).
2. Place a config.pro blokc (text file) in a directory you selected in (1).
3. Name the file *config_lic.mbd.plast.pro*.
4. Write in the file the GTS-Config.pro variables

   ```
   ! gts_is_selectable = true
   ```

   ```
   ! gts_display_name = NC
   ```
   – "NC" is the display name for the checkbox that will appear after s
5. Specify further required GTS config.pro variables and/or further Creo configuration setting(s), see table. 126

3.2 Creating several grouped project options that set a configuration option after common selection without allowing further project options

It may be useful to apply a configuration setting when two grouped project options are selected without allowing users to choose the setting.

Use case 5: When selecting the project options MBD and PLASTAD together, Creo is to be started with the license extension NC.

Initial situation: The config.pro blocks *config_lic.mbd.pro* and *config_lic.plast.pro* already exist.

Procedure: Add the two existing free tag IDs to the config.pro block that contains information for the license extension.

© 2021 INNEO Solutions GmbH

1. Proceed as in use case 4, steps 1-3.
2. In the file *config_lic.mbd.plast.pro* specify the corresponding license extension in the GTS config.pro variables, e. g. for NC-SHEETMETAL:

```
! gts_creo_lic = 116
```

5.11 Linking projects with SAP


With GENIUS TOOLS Starter 7.0.1 you have the possibility to open a Creo project with a user-defined command. You can use this option, for example, to link Creo projects with SAP-ECTR (SAP Engineering Control Center interface to PTC Creo).

To use other applications that start a Creo project, proceed as follows.

1. Check Creo versions and information for licenses and license servers (Creo startkey)
Check that the Creo version defined in the Creo project in GENIUS TOOLS Starter matches the Creo version that is to be started by the external application. The correct *parametric.exe* is available by the environment variable *PROE_START*.

Check that licenses and license servers defined in the Creo project in GENIUS TOOLS Starter match the entries in the external application. We recommend using the *gts.psf* file as Creo startkey for the external application. This ensures that the correct licenses and license servers are used.

2. Change startup behavior of the project
In GENIUS TOOLS Project Configurator in the *Projects* page, go to the corresponding project and in the *Start* tab, go to the *Startup settings* section. Change the startup behavior of the project from *Creo* to *External*. Two further input fields open.

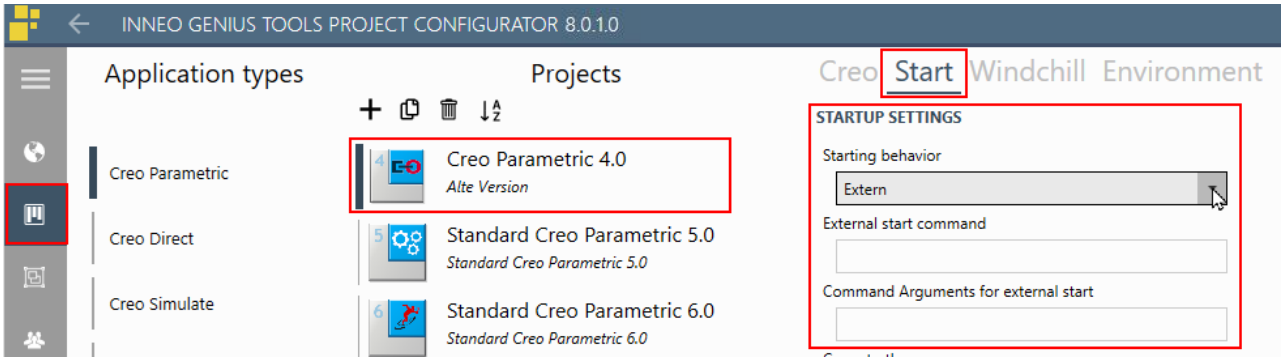

3. Enter information about the external start behavior
In the field *External start command*, enter the path to the application (executable file) with which the project is to be opened.

In the field *Command line arguments for external start* field, enter the commands with which the executable file should be opened.

© 2021 INNEO Solutions GmbH

All other information about a project does not change. (See chapter Settings for Creo projects 116.)

5.12 App-Projects: Creating projects of other applications

GENIUS TOOLS Starter allows you to also create projects that run on any other program. An administrator can set up all needed programs and files and thus make GENIUS TOOLS Starter App the central access point for users.

Projects that run on other programs are created and managed in the project lists in the menu item *Apps*. This opens a dialog with the following, simplified settings:

– general project settings

– complete start command

– startup directory

– project and data directory

The project directory can contain project-specific batch files which are executed at program start or after the program ends. Note that for an Apps project only batch files that are stored in the project directory are used and not, as with Creo projects, also those in directories of higher order.

Types of batch files

Prefix	Start time	Comment
prestart_	Started before the Creo Parametric configuration is created	When a project is started, GENIUS TOOLS Starter calls the *prestart_* batch files before the *config.pro* files for the project are assembled.
start_	Started before Creo Parametric is started	When a project is started, GENIUS TOOLS Starter assembles the *config.pro* files for the project, then calls the *start_ batch* files.
stop_	Started after Creo Parametric is closed	Please note that *Enable stop batches* has to be set to *Yes* in the Project Configurator under *Configuration* > *(Select group)* > *Creo Settings* > *Startup Settings*.

© 2021 INNEO Solutions GmbH


Warning: The batch file types *runonce_* and *env_* are not supported any longer. If you want to keep using your batch files, rename them to *start_*, e.g., *env_inneo.bat* to *start_inneo.bat*

Setting up Apps projects

To set up projects that run on other applications than Creo, follow these steps:

1. Add a new Apps project

Create a new project in the main menu *Projects* > *Apps* > *Create*. See also the chapter Creating a new project 113.

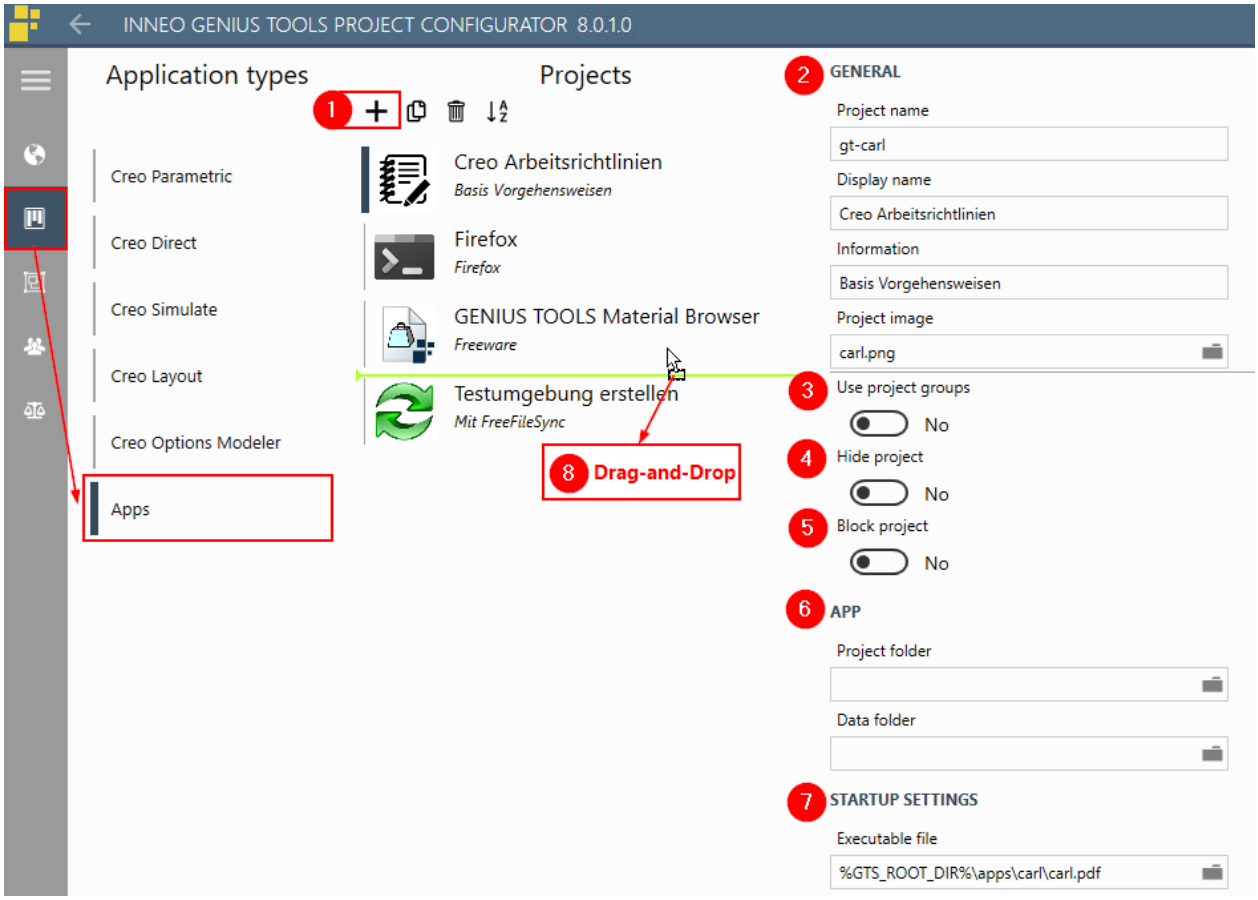

Dialog box for Apps projects

2. In the right dialog specify how the project is to be displayed in GENIUS TOOLS Starter App

▶ General

Project name

A unique name without space characters that identifies a project, e.g. project_creo6p_en. The default setting *New Project* can be overwritten. The project name can be changed at any time.

© 2021 INNEO Solutions GmbH

Display name
A unique name that is displayed for the users in GENIUS TOOLS Starter App. In GENIUS TOOLS Starter App, the projects will be listed alphabetically according to their *display name*.

Information (optional)
Short text describing the project. The information text will be shown below the *display name*.

Project image (optional)
A picture that is displayed for the project in GENIUS TOOLS Starter App. Use PNG or JPEG files.

3. Use project groups or not
Projects can be restricted to users who belong to a defined project group. Members of a project group can only view in GENIUS TOOLS Starter App the projects available to them. See also chapter. Using project access groups. 143

4. Hide project or not
When you set *Hide project* to *Yes*, the project is not listed in GENIUS TOOLS Starter App, but can still be started using a start parameter. See also chapter Hiding and blocking projects 116.

5. Block projects or not
A blocked project is neither displayed nor can it be opened.

6. Specify folders for app

▶ App

Project folder (optional)
Folder in *configuration\projects*. The files *config.pro, config.sup, customization.ui* and *config.val* are copied as templates from this directory to the application computer.

Data folder (optional)
Main directory of an operating environment to which Creo-related data is saved.

7. Specify startup settings

▶ Startup settings

Executable file
Enter the file that is to be started. It can either be an executable file (such as *.exe, *.bat) or a file for which a standard application is available on the computer (such as *.docx, *.html).

Commandline arguments
Enter commands that specify how the executable file is started. Set the commands in quotation marks.

© 2021 INNEO Solutions GmbH

8. Define display order
The order of projects displayed in GENIUS TOOLS Starter App can be changed here by dragging and dropping projects in the *Projects* list. You can also sort the projects alphabetically by clicking the *Change sorting* button in the *projects* column.

5.13 Project collections

In the main menu item *Project Collections* you can organize individual projects into collections, which are displayed to users in GENIUS TOOLS Starter App. This is especially helpful for companies that work with many projects.

The order of both collections and individual projects can be defined here by using drag and drop.
Project collections are displayed to all user groups, but within a collection only those projects a user has access to are displayed. If a user has no access to any of the projects, the button for the collection will not be displayed. There are company-specific project collections, which can include any projects, and application-specific project collections, which are comprised of all projects of an application.
A distinction is made between company-specific and application-specific project collections.

	Company-specific project collection	Application-specific project collection
Collection can be created and deleted	yes	no
Collection can include any project	yes	no, contains all projects of an application, e.g. Creo Parametric or the Apps group 136
Individual projects can be added and deleted	yes	no


In addition, there are Auto projects that are displayed automatically, see chapter Auto projects. 141

5.13.1 Creating project collections

You can create company-specific project collections and assign individual projects.

© 2021 INNEO Solutions GmbH

Application-specific project collections, on the other hand, already contain all projects that have been assigned to the individual applications in the main menu item Resources, e. g. Creo Direct, Creo Simulate, but also the Apps projects.

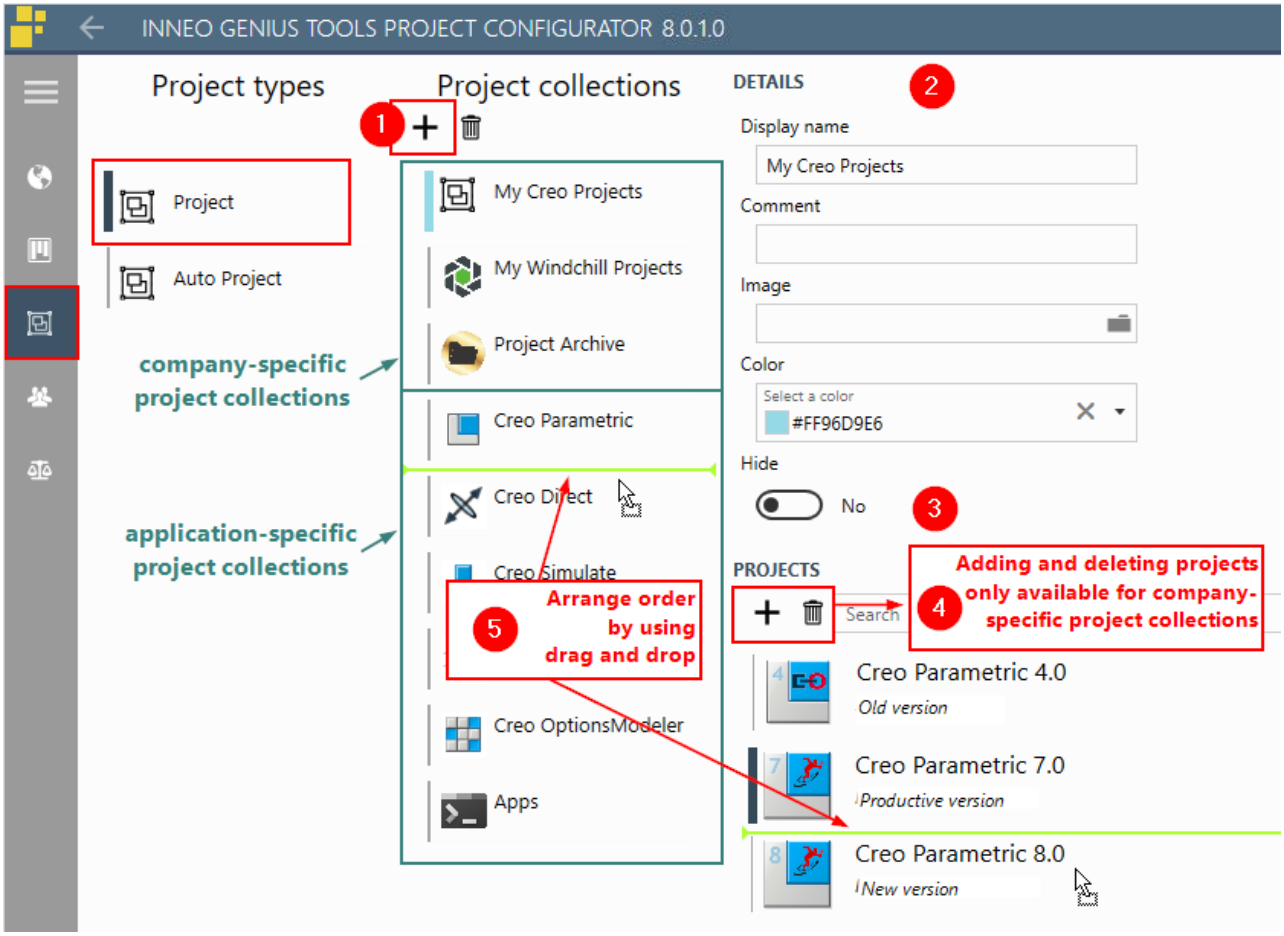

1. Create a new project collection: only possible for company-specific collections

Create a new project collection in the menu item *Project collections* > *Project types* > *Add (1).*

2. In the dialog on the right, fill in how the project collection should be displayed in GENIUS TOOLS Starter App

Display name

Enter a name for the project collection.

Comment

Enter an optional comment.

Image

A collection can be fitted with an icon in JPG or PNG format.

Color

A collection can be displayed with an individual color for better visualization.

3. Hide

No (default): The project collection is displayed in GENIUS TOOLS Starter App.

Yes: An project collection is not displayed.

© 2021 INNEO Solutions GmbH

4. Add/delete projects
You can add and delete projects only in company-specific collections.

Add
Add projects that have been created in the *Projects* menu item.

Delete
Select a project to delete it.


Search
Search a project by keywords.

5. Define order
Put projects in the order needed by using drag and drop.

5.13.2 Auto projects

Auto projects are automatically generated projects which cannot be configured. They can be started from GENIUS TOOLS Starter App. Auto projects are generated from the following applications: MathCad, Illustrate, Creo Elements/ Direct Modeling, Creo Elements/ Direct Drafting, Schematics, Keyshot and GeomagicDesignX.

The applications are automatically searched on the user computer. If the application is not installed on the user's computer, the Auto project will not be displayed.

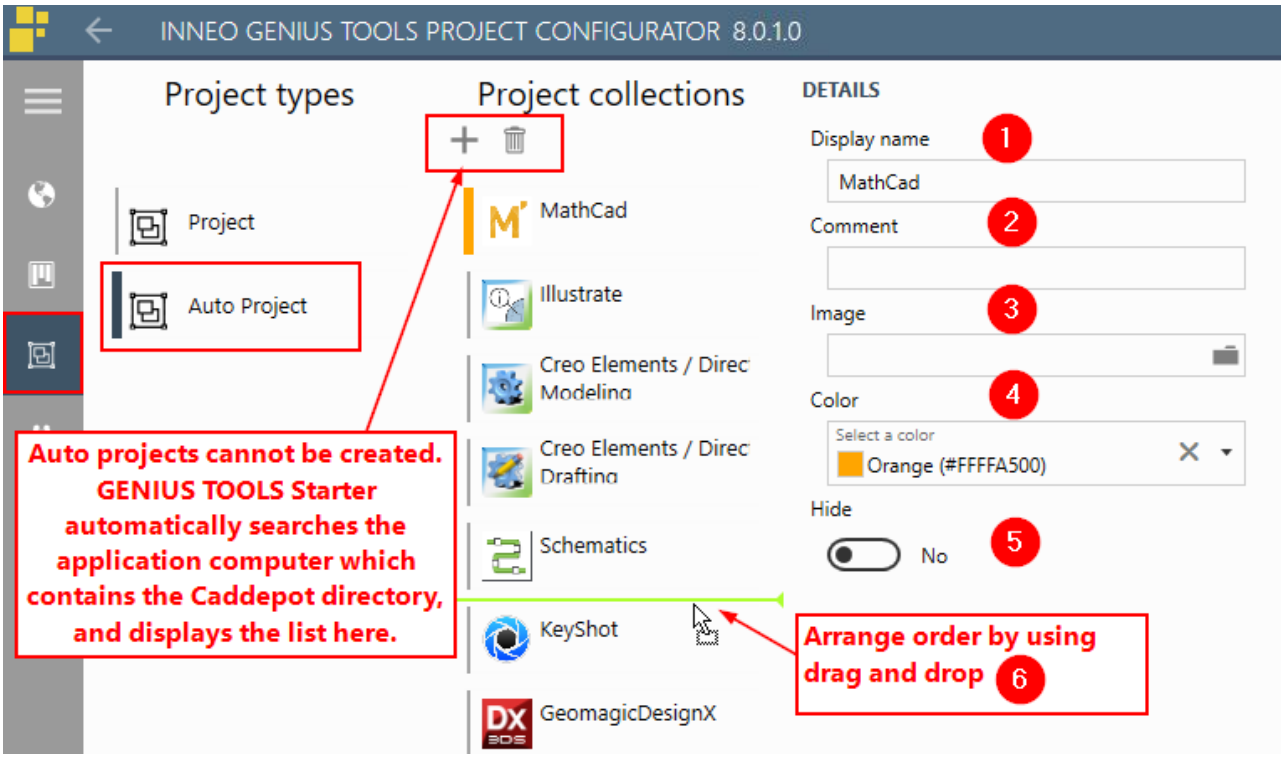

In the main menu item *Project collections* in the segment *Auto projects*, you can set the display of the Auto projects in GENIUS TOOLS Starter App, i. e. name (1), comment (2), icon (3) and color (4), as well as their order via drag-and-drop (6).

© 2021 INNEO Solutions GmbH

Individual Auto projects can be hidden in the user interface of GENIUS TOOLS Starter (5). You can also hide all Auto Projects for specific user groups in the user rights. 154

5.14 Working with project access groups


Project access groups limit access to configured projects to a defined group of users. Projects that are not assigned to any project access group are accessible for all users.

A user can be a member of any number of project access groups. The user will be able to access all projects assigned to a project access group of which they are a member.

Please note: Each user can only see the projects they are permitted to access. To verify which projects are accessible for a certain user, go to the card view under *Resources* > *Users* and click on the project symbol on the user's card.

5.14.1 Creating project access groups

To limit access to projects to defined groups of users, you first have to create a project access group. Go to the *Access rights* page, then click *Project access*. Click *Add (1)* under the *Project groups* list. A new item *New Project Group* is displayed in the list.

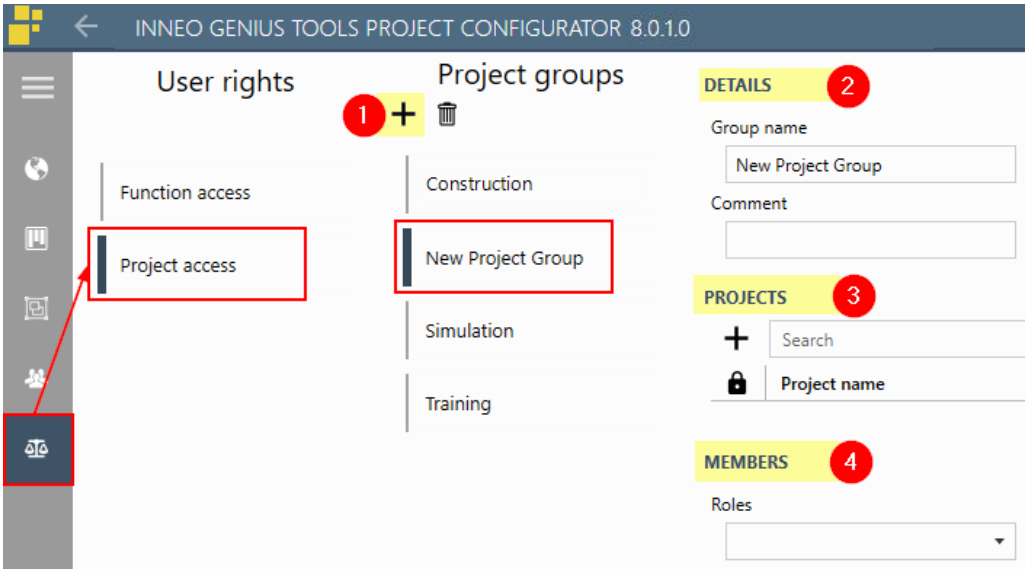

A newly created project access group does not have any users or projects assigned. Enter the settings for the new project access group.

▶ Project access group details (2)

Group name
Enter a name for the project access group.

Comment
Optionally, enter a comment to describe the project access group.

© 2021 INNEO Solutions GmbH

▶ Projects (3)

Add project
Assign projects to the project access group. Note that assigning a project automatically sets the option *Use project groups* for the project (*Projects* page, > *Creo* tab > *General*).

Please note: The option *Use project groups* is set automatically when you assign a project to a project access group. However, if you want to change the project back to general access without project access groups, you have to change the setting to *No* manually under *Projects* page > *Creo* tab > *General*.

▶ Members (4)

Role
Select the role.


▶ LDAP – User – Computer

This section shows the users and computers assigned to the role. To assign elements to a role, go to *Resources* > *Roles* > *Select role*.

If the checkbox before the user or computer name is set, the corresponding user or computer is locked. To make changes to the lock status, go to *Resources* > *Users* > *Create or edit user*, or to *Resources* > *Roles* > *Select role* > *LDAP*. (See also Block users or computers 107.)

5.14.2 Using project access groups

When you assign a project to a project access group, the option *Use project groups* under *Projects* page > *Creo* tab > *General* is set automatically to change the project access mode to group access.

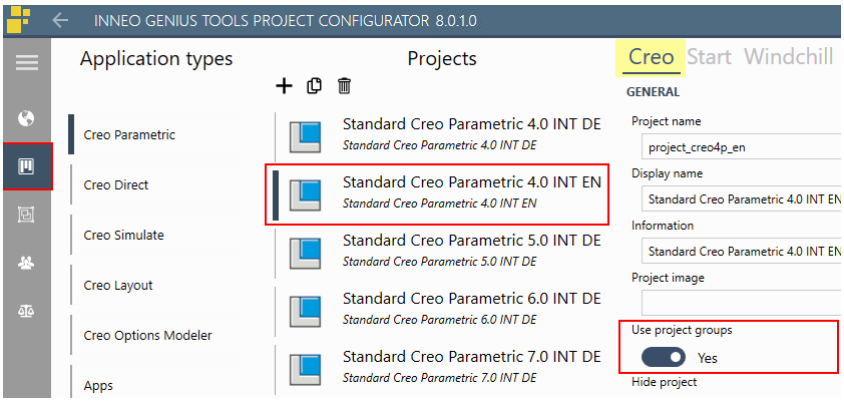

Project access mode (Projects > Creo > General)

Use project groups
Projects can be restricted to users who belong to a defined project access group.

© 2021 INNEO Solutions GmbH

No (Default): The project is available to all users.
Yes: Shows whether the project is assigned to at least one project access group. *Use project groups* is set to *Yes* automatically when a project is assigned to a project access group.

Please note: If you manually set the *Use project groups* option to *Yes* without assigning the project to a project access group, the project will not be visible for any user because it cannot be linked to any project access group.

5.14.3 General project access

If you want to change a project back to general access without project access groups, you have to change the *Use project groups* option to *No (Projects* page > *Creo* tab > *General).*


To make a project accessible to all users, it is not sufficient to remove it from all project access groups. To switch back to general access, you have to go to the project settings and change the *Use project groups* option to *No* manually.

5.15 Customizing Creo user interface

If you want to customize the user interface of Creo, go in Creo to *File* > *Options* > *Configuration editor*.

Changes made in Creo will by default be saved in the file *creo_parametric_customization.ui* in the directory %PTC_WF_ROOT%\.Settings, e. g. %APPDATA% \PTC\ProEngineer\creo4\.Settings.

Alternatively, you can have this file stored in the startup directory. To do so, select a group in GENIUS TOOLS Project Configurator and in *Creo Settings* > *Write* > *Target Directories* > *Ui file location* select *Start*.

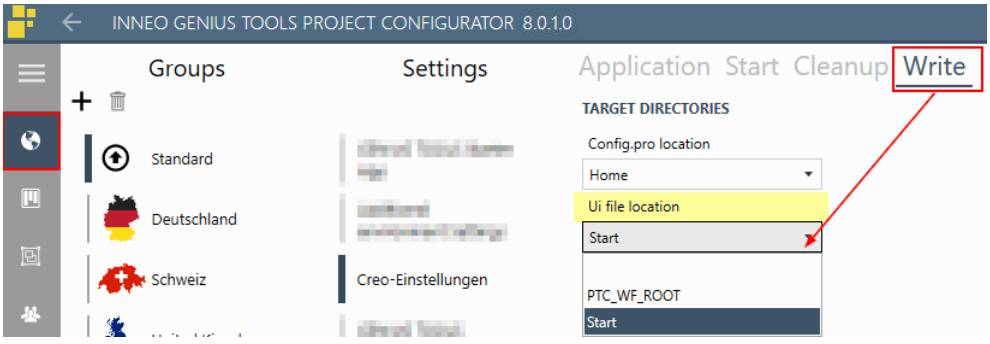

5.15.1 creo_parametric_customization.ui

The file *creo_parametric_customization.ui* (short: customization.ui) contains the settings for the graphical user interface (UI) of Creo.

© 2021 INNEO Solutions GmbH

To customize the user interface specific to a user or a group of users, do as follows:

1. Modify the settings for the user interface in Creo in *File* > *Options* > *Configuration editor*.
2. Copy the file *creo_parametric_customization.ui* that is saved in %PTC_WF_ROOT% \.Settings by default. (The use of the startup directory as alternative storage location is described in the previous chapter.)
3. Save the copied ui-file to one of these directories: *userdata, users, projects, units* or *standard*. (See also Directory structure. 15) In a subdirectory of *unit,* the UI file would, for example, determine the Creo user interface for the named unit.

There is only one customization.ui file. Hence, GENIUS TOOLS Starter does not write several separate files as it does for the config.pro-file (such as e. g. *config_mapkey.pro* which would be written into one final config.pro-file). This is important because it means that one customization.ui file cannot add configuration settings to an existing file, it can only substitute another customization.ui.

The customization.ui file that is found first determines the Creo user interface. The call hierarchy is as follows:

1. userdata > 2. users > 3. projects > 4. units > 5. standard

Company-wide configuration with creo_parametric_admin_customization.ui

The administrator can set up a configuration that is valid for the whole company or for specific users, projects or units. To do so, change the name of the ui-file that is automatically saved by Creo from *creo_parametric_customization.ui* to *creo_parametric_admin_customization* and save it to one of these directories: *userdata, user, project, unit* oder *standard*.

The settings in the admin file *creo_parametric_admin_customization* are overwritten or complemented by those in the individual *creo_parametric_customization.ui*.

Executing the file *creo_parametric_admin_customization.ui* follows a hierarchical search in these directories:

1. users > 2. projects > 3. units > 4. standard

The administrator can thus set up a standardized graphical user interface for specific users, projects and units, as well as a company-wide UI configuration.


Please note: A company standard, i. e. a UI file in the *standard* directory, can only be implemented if there are no admin_customization.ui files in the directories *users, projects a*nd *units*.

© 2021 INNEO Solutions GmbH

Individual customization.ui file

A user can manage his or her own customization.ui file by saving it to a directory *userdata* to which the user needs write access. There are two possibilities. One, the user can access the *userdata* directory in the caddepot directory of the administration computer – from where it will be synchronized to the client computer. Two, a directory can be created in any location on the client computer. There, it does not undergo data synchronization. (See also the chapter on User-driven configuration 23.)

The administrator can determine the storage location of the *userdata* directory in *Configuration* > *(select) group* > *Creo Settings* > *Application* > *User Settings* > *Configuration folder*.

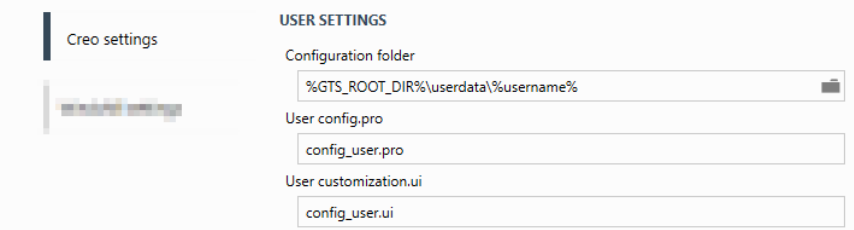

▶ User settings

Configuration folder
The configuration files of each user can be stored in the directory *userdata*.

User config.pro
Name of a user-defined *config.pro* file. It is appended to the *config_*.pro* files in the *users, projects, units* and/or *standard* directories.


User customization.ui
Name of a user-defined *customization.ui* file. It replaces any *customization.ui* file in the *users, projects, units* and/or *standard* directories.

Backup mechanism with GENIUS TOOLS Starter App

You can create a backup file (BAK file) from *creo_parametric_customization.ui* in GENIUS TOOLS Starter App. This can be useful for users who manage their own UI configuration files, as well as for administrators who modify Creo UI settings for test purposes.

1. In the info pane of GENIUS TOOLS Starter App go to the Config tab and click *backup user customization.ui*

© 2021 INNEO Solutions GmbH

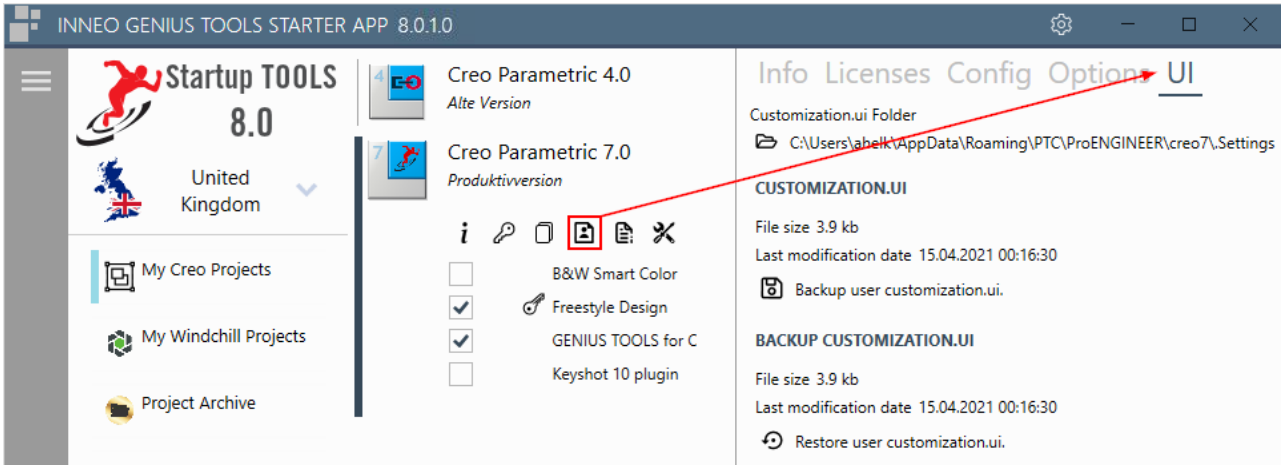

2. If a backup file already exists, confirm that it should be replaced.
3. In the following dialog box select whether *creo_parametric_customization.ui* should be deleted.

Result: The file will be saved as *creo_parametric_customization.ui.bak* in the directory %PTC_WF_ROOT%\.Settings.

In order to restore the user-specific UI file:

5. Click on *restore user customization.ui*
6. In the following dialog box select whether the backup file should be deleted.


Result: The file *creo_parametric_customization.ui.bak* in the directory %PTC_WF_ROOT%\.Settings is changed to *creo_parametric_customization.ui*.

5.16 Working with Windchill

GENIUS TOOLS Starter can be used in conjunction with Windchill. The following section describes requirements and considerations for working with Windchill.

If you want GENIUS TOOLS Starter to look for Creo data in Windchill first, and in the project directories in the second place, you should set your system settings to *Using Windchill*. To do so, go to *Configuration* > *Standard* > *Windchill settings* > *General* > *Using Windchill* > *Yes*.

© 2021 INNEO Solutions GmbH

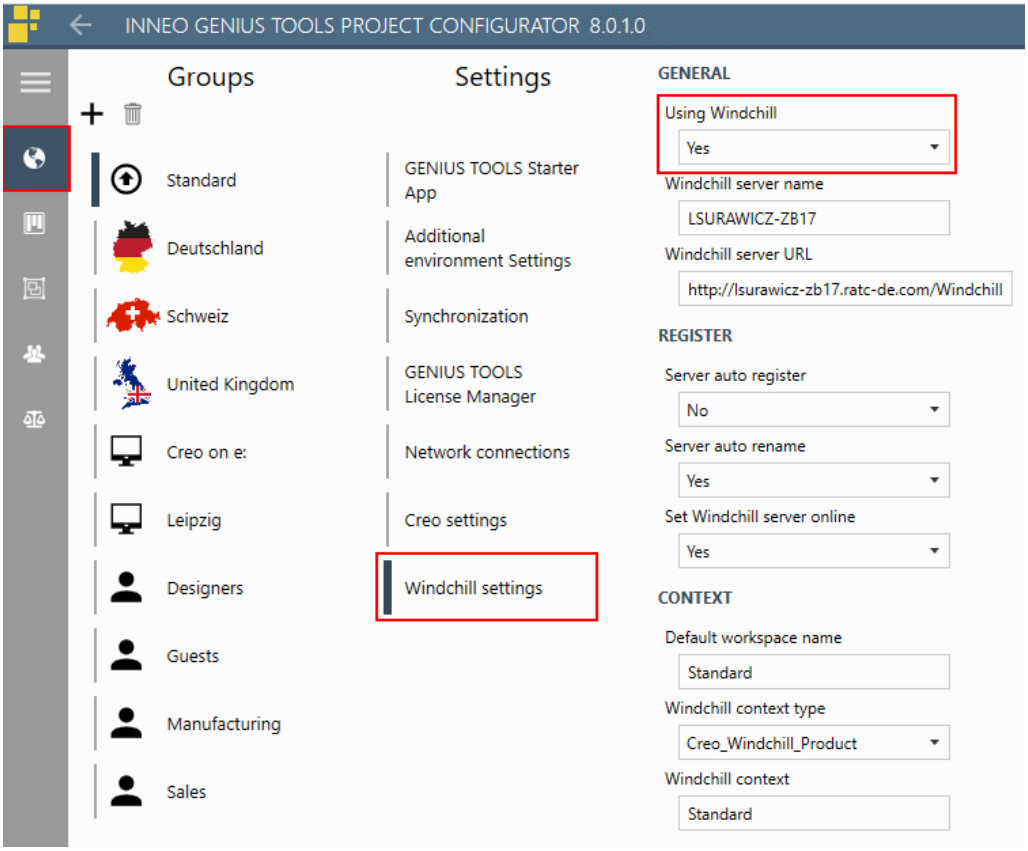

You also need to set search paths for all library directories and load them when Windchill is used, as long as not all Creo data has been transferred from disk storage to Windchill. There is a template *config_searchpath.pro* file in the *SEARCHMODE* directory under the project directory:
<GTS-OperatingEnv>\configuration\projects\<ProjectDir>\SEARCHMODE. You can adapt this template file to your setup.

5.16.1 Object search hierarchy in Creo

Creo looks for objects in the following order:

1. Creo session
2. Search or call directory in which the parent object has been found, or directory which is specified in the *Open* dialog.
3. Active Windchill workspace.
4. Active Windchill commonspace
5. Local working directory
6. Search paths

(See http://www.ptc.com/appserver/cs/view/solution.jsp?n=131190.)

© 2021 INNEO Solutions GmbH

5.16.2 Using a Windchill library

You can define dedicated directories for libraries, drawing frames, start objects and UDF in Creo. When you are using Windchill, these directories can point to products or libraries in the Windchill environment. The required syntax of the *config.pro* entry is as follows, using the library directory of Windchill PDMLink as an example.

```
Pro_library_dir wtpub://<Windchill_server>/<Context>/<Directory>
```

– wtpub: refers to the Windchill commonspace

– <Windchill server>: name of the Windchill server as registered in Creo

– <Context>: context you want to refer to, e.g., SUT libraries

– <Directory>: directory within the context

Each user can define their own name for the Windchill server. This means that the general *config.pro* entry cannot point unequivocally to a storage location, as maybe not all users have used the same name when first registering the server. The following section describes how GENIUS TOOLS Starter can be used to influence Windchill server naming.

5.16.3 Automatic Windchill server rename

In the general Windchill settings in GENIUS TOOLS Project Configurator, you can define a Windchill server name that should be used system-wide (*Configuration* > *Standard* > *Windchill settings* > *General* > *Windchill server name*). To link this name with an existing, manually configured Windchill server, you also have to make two other settings:

1. Windchill server URL: address of the Windchill server
2. Server auto rename: Yes (under *Register*)

If a server is found under the URL you have specified for the Windchill server, this server will be renamed to the specified name on the next Creo start.

5.16.4 Automatic Windchill server registration

The Windchill server registration enables the automatic registration of a Windchill server under a given name in PTC Creo.

The concept of automatic server registration is that previously registered servers are retained without changing the entire registration and that a newly registered server is set to *active*. It is also part of the concept that server registration does not result in the registered server reverting to *active* as soon as a project with the corresponding configuration is selected. Usually the user wants Windchill settings of the previous Creo session to be set again after restarting Creo.

© 2021 INNEO Solutions GmbH

Users who are to get access to a Windchill server via automatic server registration need to have a valid Windchill account and have access to the defined workspace in the defined Windchill context. It can be useful to create a context (product, library or project) that is not otherwise used and that these users have access to.

Please note: In order to use automatic server registration, the following requirements must be met:
– *Using Windchill* must be activated.
– The *Windchill Context* must be set and must exist.
– The default workspace must be located in the *Windchill Context* that is given.
– The Windchill cache directory must be a subdirectory of the Windchill user root folder.

Automatic server registration is configured under *configuration* > *(Select group)* > *Windchill settings*. The Windchill settings are expanded once you set *Use Windchill* to *Yes*.

▶ General

Use Windchill
Activate/deactivate the Windchill server.
Yes: Activates Windchill-relevant settings such as automatic server registration.
No: Windchill settings will be disregarded.
No, don't register: The Creo session is started without an active Windchill server. However, the Windchill server remains in the server registry without being selected.

Windchill server name
Specify the name with which the server will be registered in Creo.

Windchill server URL
Specify the URL under which the server can be reached.

▶ Register

Server auto register
Select whether the server should be registered automatically.
Yes: The above mentioned Windchill server is automatically registered and is then available within Creo.
No: The server is not entered automatically.

Server auto rename
If a server already exists at *Windchill server URL* and has a different name than *Windchill server name*, the server will be renamed when starting Creo next.

Set Windchill server online
Select whether the server should be put online.
Yes: A new server that was added by auto-registration will automatically be put online.
No: The server is registered offline.

© 2021 INNEO Solutions GmbH

▶ Windchill context

Default workspace name
Name of the workspace that is active during registration. The default workspace has to be present under the context given.

Windchill context type
Type of context: Product, Library, Project.

Windchill context
Context of the workspace.

5.16.5 Project-specific Windchill settings

You can also define a Windchill server to be used for a specific project. To do so, go to the *Projects* page, select the desired project and make the project-specific Windchill settings in the *Windchill* tab.

See also Workspace for Windchill 123.

5.16.6 Integration in Windchill Worker

If you want to open Creo with Windchill, you can use GENIUS TOOLS Starter to apply the project settings and environment variables. In this case, you will neither get the GENIUS TOOLS Starter user interface nor will Creo be opened. For this option, you must create an extra project for access by the Windchill Worker. Proceed as follows.

Steps for integrating GENIUS TOOLS Starter into an existing Windchill Worker
Creating a project in GENIUS TOOLS Project Configurator

1. In the main page *Projects*  click the *Create* 113 button. A new project is created with the name "New Project".
2. Rename the project. The default name is *publish*.
3. If you want the project to be invisible to users, hide it in the *Creo* tab in the section *General* with *Hide Project* 116. Alternatively, you can create a project group 142 which you grant access to the project.
4. If necessary, assign a separate license to the project in a Creo startkey 73 (PSF file).

Including the call to the GENIUS TOOLS Starter App in the Worker batch file

5. Open the batch file *proeworker.bat* in the Windchill Worker directory.
6. Enter the following line below the line set `PVIEW_HOME=D:\ptc\object` adapter:

```
call <cadpoolpath>\<nameofoperatingenvironment>\software\worker.bat <project
name>
```


© 2021 INNEO Solutions GmbH

The project name corresponds to the name selected in step 2.

Install Cadpool on user computer

7. Make sure that GENIUS TOOLS Starter is installed on the user computers that are to access the project. To do so, perform an initial synchronization by opening the file *gts.exe* from the operating environment of the Caddepot directory which is located on the administration computer: *<caddepotpath\<working environment name>\software\gts.exe*

This will install the Cadpool directory and synchronize it with the Caddepot directory.

5.17 Access rights

The following access rights for software functionality can be assigned to users or groups

1. GENIUS TOOLS Starter App:

– Can enter Project Configurator

– Can pause synchronization

– Can see licenses

– Can borrow licenses

– Can disable Creo config files

– Can see auto projects

– Can analyze project (with GENIUS TOOLS Starter App Config Analyzer)

For users that do not have a function access right, the corresponding control is not displayed in the UI of GENIUS TOOLS Starter App. For more information on the GENIUS TOOLS Starter App UI, please refer to User interface 168.

2. GENIUS TOOLS FOR CREO

– Is GTfC admin

– Prevent switch to local installation

Please note: Not every functionality can be controlled using access rights. Standard functions as well as starting GENIUS TOOLS Starter and opening a project cannot be changed.

For a description of the individual rights, please refer to Assigning access rights 154.

5.17.1 Creating function access groups


Use function access groups to manage access rights for individual users or for groups. The function access groups *Everyone* and *Administrator* are pre-configured defaults. *Everyone*

© 2021 INNEO Solutions GmbH

contains all Windows users known to the system, even if they have not yet been configured in Project Configurator. This groups is created automatically to avoid having to manually enter every user in Project Configurator.

Anyone who starts GENIUS TOOLS Starter from the Caddepot can use the function access group *Administrator*.

Please note: The function access groups *Everyone* and *Administrator* have to be considered separately when updating to GENIUS TOOLS Starter 6.0.1 or migrating from a Startup TOOLS environment. Please refer to the release information.

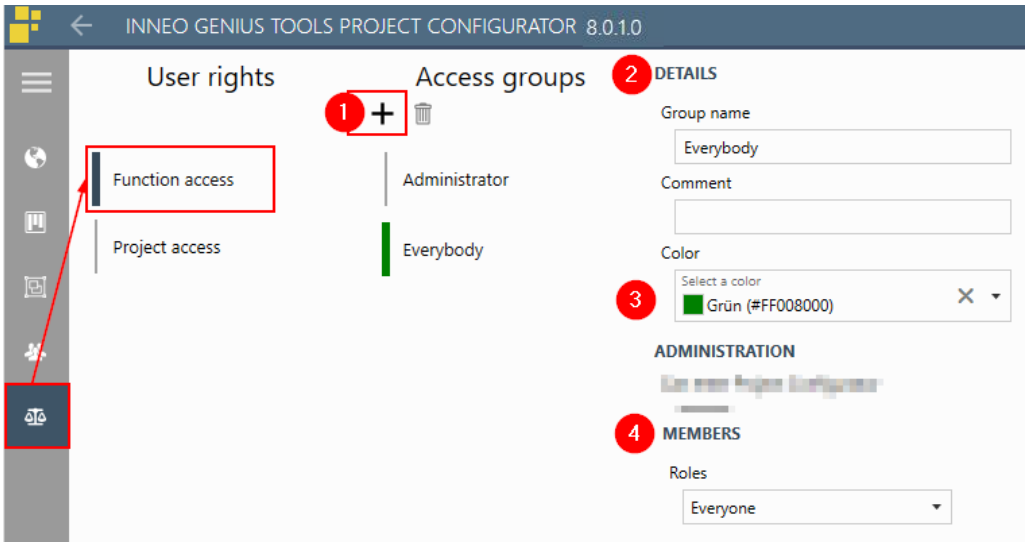

To create a new function access group, select *Function access*, then click *Add (1)*. Under *Details (2)*, enter a name and, optionally, a comment for the new group. For visualization of group assignment in the user view (*Resources* > *Users*), you can specify a color for the group (3).

Each function access group has to have an assigned role (4). You can give the function access group the same name as the role for an easy grasp.

A role groups users or computers. To create a role, got to *Resources* > *Roles*. By default, the role *Everyone* is assigned to the function access group *Everyone*, and the role *Administrator* to the function access group *Administrator*.

Please note: A user can be assigned to multiple groups or roles. In this case, the user will have all rights granted by their groups or roles, meaning that a right will not be revoked by an assignment to another group that does not have this right.

▶ Members (4)

Role
Assign a role. To create new roles, go to *Resources* > *Roles*.

© 2021 INNEO Solutions GmbH

▶ LDAP – User – Computer

This section shows the users and computers assigned to the role. To assign elements to a role, go to *Resources* > *Roles* > *Select role*.

If the checkbox before the user or computer name is set, the corresponding user or computer is locked. To make changes to the lock status, go to *Resources* > *Users* > *Create or edit user*, or to *Resources* > *Roles* > *Select role* > *LDAP*. (See also Block users or computers 107.)

Add user
Add users to the group to give the group's rights to them.

5.17.2 Assigning access rights

To assign access rights to a function access group, select the group under *Access right* > *Function access*. Edit the settings under *Function access*.

▶ Administration

Can enter Project Configurator
The user may open GENIUS TOOLS Project Configurator. For users who do not have this right, a message will be displayed, and the Project Configurator will be closed when the user confirm the message.
Default for group Administrator: Yes
Default for group Everyone: No

Hint: When GENIUS TOOLS Starter is started locally from the Caddepot directory, Project Configurator is always accessible. In this way, an administrator will always have access to the configuration.

Please note: If this right is not assigned to any user, GENIUS TOOLS Project Configurator will revert to the default setting of granting the right to all uesers.

Is GTFC admin
The user can access the editors in the GENIUS TOOLS for Creo (GTFC).
Default for group Administrator: Yes
Default for group Everyone: No

Can see project information

Users can open the Info tab containing the project name, paths to the project, data and working directory as well as the selected language and the startkey. The button *i* is displayed in GENIUS TOOLS Starter App.
Default for group Administrator: Yes
Default for group Everyone: No

© 2021 INNEO Solutions GmbH

Can analyze project
Users are able to analyze and edit all configuration files of a project. (Function GENIUS TOOLS Starter App Config Analyzer). The button is displayed GENIUS TOOLS Starter App.

Default for group Administrator: Yes
Default for group Everyone: No

Can create project report
The user can view all information about the project and user settings in a separate document. The button is displayed in GENIUS TOOLS Starter App.

Default for group Administrator: Yes
Default for group Everyone: No

▶ Synchronization

Can pause synchronization
The user may pause the automatic data synchronization. Synchronization has to be paused if you want to make changes to files in the Cadpool locally, otherwise local changes would be overwritten as soon as the synchronization runs.

Default for group Administrator: Yes
Default for group Everyone: No

Warning: GENIUS TOOLS Starter App will keep the synchronization on pause even after a restart of the software as long as the user still has this right. If this right is withdrawn while the synchronization is paused, the synchronization will run automatically when the software is restarted, which may result in data loss from the Cadpool directory.

Prevent switch to local installation
By default, if the GENIUS TOOLS Starter App is started from the Caddepot directory on the administration computer, GENIUS TOOLS Starter App will switch automatically to the local Cadpool. If *Prevent switch to local installation* is set to *Yes*, there is no automatic switch and the user can work on the data in the Caddepot.

Default for all groups: No

Warning: If this right is granted to a user before the initial synchronization, GENIUS TOOLS Starter App will not be installed locally for this user, and the user will not be able to start locally.

▶ Project

Can analyze licenses
Users can see the license statistics in GENIUS TOOLS Starter App. (See chapter Display license details.) To use this option, you also have to set *Show licenses* under *Configuration > Creo settings > Tab: Start > Show licenses* to *Yes*.

Default for group Administrator: No
Default for group Everyone: Yes

© 2021 INNEO Solutions GmbH

Can borrow licenses

Users can start the license borrowing process. The button is displayed in GENIUS TOOLS Starter App in the Licenses tab. GENIUS TOOLS Starter App will borrow the Startup TOOLS license, then start the borrowing process for PTC. The PTC borrowing process will borrow the Creo and GENIUS TOOLS for Creo licenses.

Default for group Administrator: No
Default for group Everyone: Yes

Warning: To borrow the PTC licenses, the user has to complete the PTC borrowing process.

Can disable Creo config files

The user can temporarily disable configuration files for a project. Disabled files will not be used by GENIUS TOOLS Starter App when creating the configuration settings.

Default for group Administrator: No
Default for group Everyone: Yes

Warning: Disabled configuration files will become active again on the next project validation or synchronization.

Hint: This right makes it possible to quickly disable configuration files on individual computers without having to change company-wide configuration settings.

Can see auto projects

GENIUS TOOLS Starter will search for other supported applications on the local application computer, for example Keyshot or Creo Elements / Creo Direct. The applications can be started from GENIUS TOOLS Starter App. However, it is not possible to configure the auto projects.

Default for group Administrator: No
Default for group Everyone: Yes

Please note: Licenses for auto projects cannot be checked by GENIUS TOOLS Starter.

Can see and save customization.ui file

Users can view, edit and make a backup copy of the file *creo_parametric_customization.ui* (short: Customization.ui), which contains all user-specific settings for the graphical user interface of Creo. The button is displayed in GENIUS TOOLS Starter App in the UI tab.

Default for group Administrator: Yes
Default for group Everyone: No

© 2021 INNEO Solutions GmbH


5.18 Settings for GENIUS TOOLS Starter App

This section explains how to configure GENIUS TOOLS Starter App for the users. Settings for GENIUS TOOLS Starter App are made from Project Configurator. In addition, as an administrator, you can send messages to the users that will be displayed via the message symbol in the GENIUS TOOLS Starter App sidebar.

5.18.1 Presenting projects

The display of projects in GENIUS TOOLS Starter App can be influenced as follows:

- projects can be displayed to specific groups only: see Working with project access groups 142
- projects can be grouped into collections: see Project collections 139
- the order of collections and the projects they contain can be defined via drag-and-drop: in *Project collections > Project types* 139
- project collections and auto projects can be assigned a color and an icon: in *Project collections > Project types* 139
- projects can be provided with an icon and an additional info line: *Projects > Application > Projects > General*

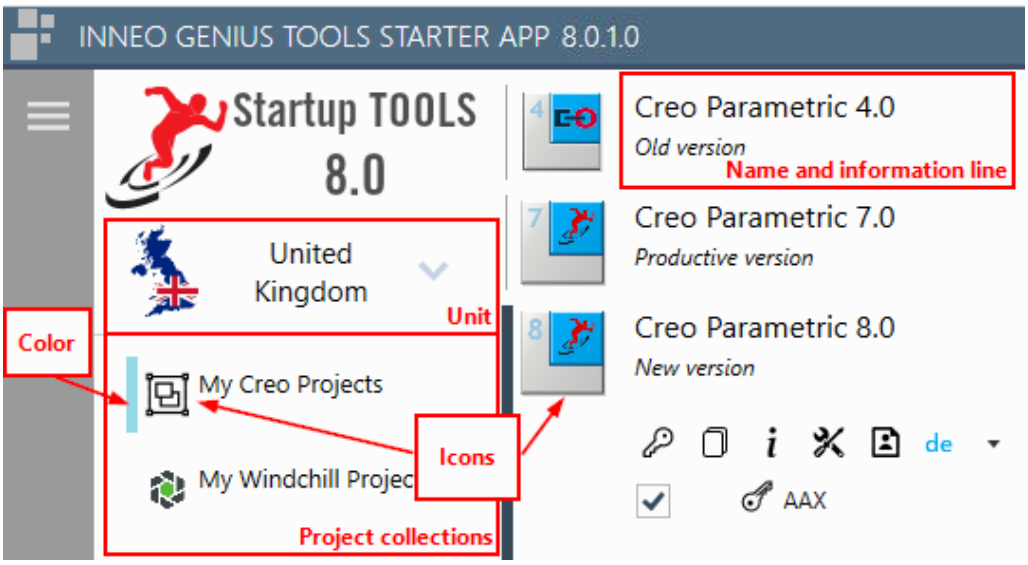

Marking invalid projects

You can control whether users can open projects for which they do not have a license or the required license extensions.

The following actions and warning colors can be set in the menu item *Configuration > Group (select) > Settings: GENIUS TOOLS Starter App > Segment: Projects*. The warning

© 2021 INNEO Solutions GmbH

colors are only displayed after a project has been clicked upon or after activating the *Analyze licenses* function in the Licenses tab of the GENIUS TOOLS Starter App.

▶ Projects

Display invalid projects
Specifies how projects with missing licenses are displayed to the user. To use this setting, *Show licenses* has to be set to *Yes*.

No: Projects without a valid license are hidden.

Yes, as warning: Projects without a valid license are displayed with a yellow background and can be started regardless.


Yes, as error (default): Projects without a valid license are displayed with a red background and cannot be started.

Yes, deactivated: Projects without a valid license are displayed with a gray background and cannot be started or selected.

Please note: Projects for which no corresponding Creo version can be found are never displayed. In case the Creo version is found, but no PSF key, you can choose between not displaying the project and displaying it as warning, see Assigning Creo licenses to projects. 120

Warnings

Project settings can cause warnings other than missing licenses, e.g. if the project directory cannot be found. The project bar will then be orange and a flag icon appears, which opens the Warning tab.

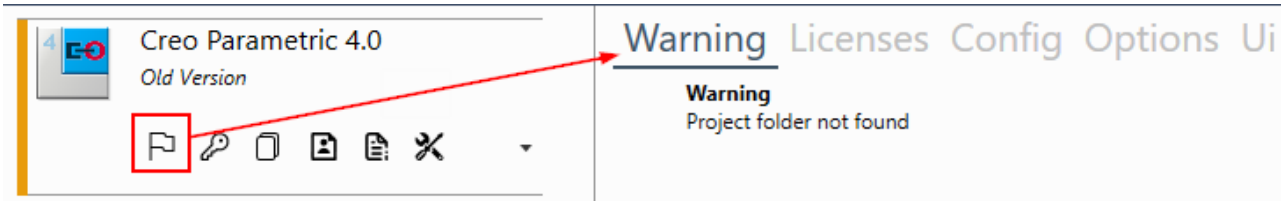

5.18.2 Defining project options

Administrators can decide to set up projects so that users are able to select from the following project options:

– Creo language 159 (1)


– Creo start key 159 (2)

– company-specific project options 160 for license extensions, add-on programs and configuration settings:

  – single project options (3)

© 2021 INNEO Solutions GmbH

– combined project options (4)

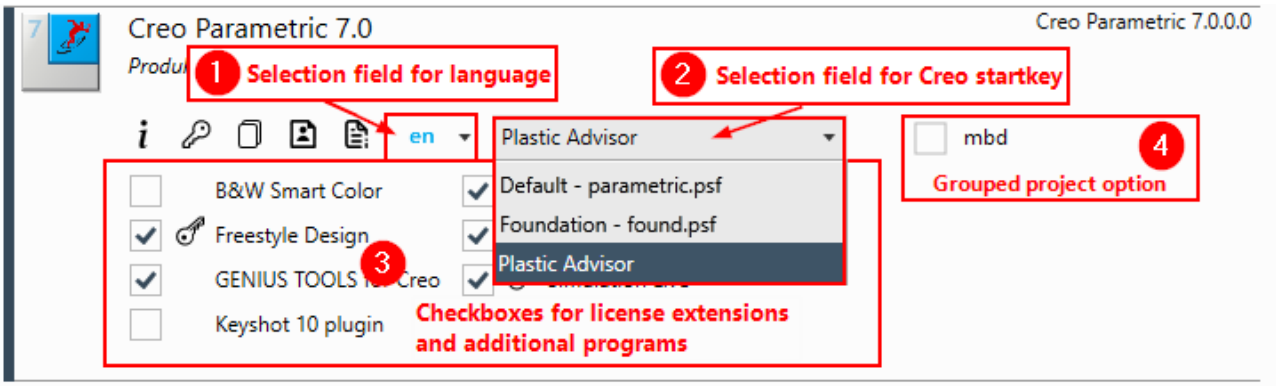

Selectable project options in GENIUS TOOLS Starter App

1. Language selection field

You can set whether users can select the language of the projects they have access to. The right is granted in *Configuration* > *Group (select)* > *GENIUS TOOLS Starter App* > *Projects*. If the right is not granted, neither selection field nor information about the set language appears. If you want to provide users with information about this, you can include this in the name of the project or in the subtitle, e.g. Creo Parametric 7.0. DE.

Creo language selectable
Specify whether users are allowed to change the preset language, in which Creo is to start. The language of a project can be preset in the *Projects* main page under *Application type* > *Projects* > *Tab: Start* > *Startup settings* > *Language.* 119

Please note: This option requires that the selectable language has to be available in the Creo installation used. This is not checked by GENIUS TOOLS Starter.

Yes: Users have the right to change the language of a project. If this options is activated, a drop down menu will be displayed in GENIUS TOOLS Starter App.
No (default): Users cannot change the language. There is no information about the language that Creo will start in.

Show only installed languages
By default only languages of the installed Creo versions are displayed in the drop-down menu (see above setting).

Yes: Menu contains only installed Creo languages.
No (default): Menu contains all languages supported by Creo.

2. Selection field for Creo startkey

A startkey is a configured start command that opens Creo with one or more specified licenses or license extensions. Startkeys are PSF files in the bin directory. You can assign multiple startkeys to a project. The procedure is described in chapter Assigning Creo

© 2021 INNEO Solutions GmbH

licenses to projects. 120 If users have multiple startkeys to choose from, a selection field appears in the selected project in GENIUS TOOLS Starter App.

Users can be given start keys to select from:

- per project: select the startkeys in *Projects* > *(select) Project* > *Tab: Start* > *Segment: Creo Startkey Configuration*. For more information, see the chapter Assigning Creo licenses to projects. 120
- for all projects that can be accessed by a group or unit: Select the startkeys in *Configuration* > *Creo Settings* > *Tab: Start* > *Segment: Creo Startkey Configuration*

The administrator can set in GENIUS TOOLS Project Configurator whether a project should have a default start command or whether the start command last selected by the user should be used again. (See chapter Assigning Creo licenses to projects 120, 2.1. and 2.2..)

If the right to select is not assigned, neither selection field nor information about the used start key appears. If you want to give users an information about the start key, you can insert this in the name of the project or in the subtitle, e.g. Creo Parametric 7.0. AAX.

Checkboxes for company-specific options

Administrators can define further project options that are tailor-made to a company's requirements, e. g. for starting Creo with:


- additional license extensions, such as Simulation Live or Manikin,
- separate programs such as Keyshot or Model Processor User, or
- any other configuration setting as defined in a config.pro block.

There are two types of company-specific project options, **single (3)** and **combined project options (4).**

These two types of project options are not created in GENIUS TOOLS Project Configurator, but with Config.pro blocks. The chapter Making use of project options 124 explains the procedure.

Editing a config.pro block

The file *config_1_lic_sim_live.pro* can be opened by double-clicking on the display name *Simulation Live* in the Config tab.

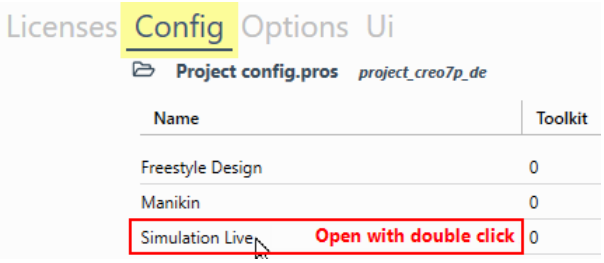


© 2021 INNEO Solutions GmbH

5.18.3 Customizing the information pane

There are two areas displaying project information.

– the info area, which opens when a project is selected and contains the info icons (see table).

– the info tabs that open on the right side after selecting an info icon. These are tabs Licenses, Config, Options and UI. The Error and Warning tabs are displayed when an error or a project warning has occurred. (See also chapter GENIUS TOOLS Starter App > User Interface 168).

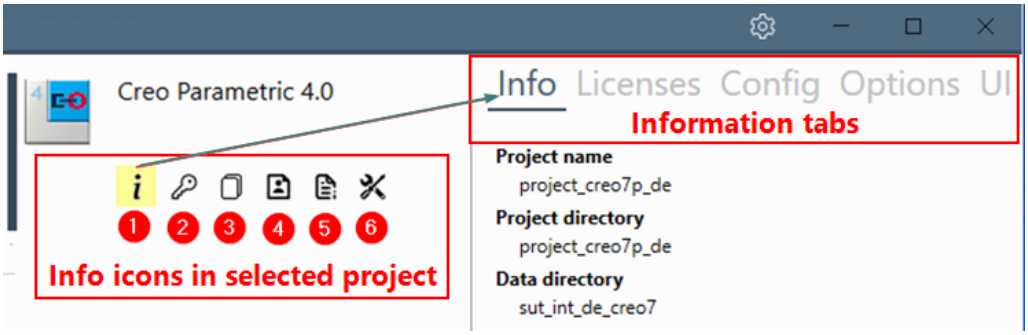

Some of the information can be configured or be completely hidden by the administrator.

	Function	Description	Funktion im Project Configurator konfigurierbar?
	Warning 	warning icon appears only if project settings trigger a warning opens Warning tab	no
1	Information 	opens Info tab with: – project name – path to project, data and working directories – Creo language, Creo startkey – Windchill	button and Info tab can be disabled with *Can see project information* under *Function access > Administration* 154
2	Licenses 175 	opens Licenses tab: – shows licenses and license servers – button for analyzing licenses – button for access to the license borrowing process	button: no Licenses tab: yes, see Displaying license details 163


© 2021 INNEO Solutions GmbH

	Function	Description	Funktion im Project Configurator konfigurierbar?
3	Configuration files 	opens Config tab – lists all used config.pro files and additional applications (Toolkit Application) in the selected project – config.pro files can be opened by right clicking	button: no Config tab: users can deactivate configuration files if administrator assigns rights in *Can disable Creo config files* under *Function access > Project* 154
4	UI (Customization .ui file) 	opens the UI tab: – displays the *customization.ui* file, which contains the user-specific settings for Creo's graphical user interface (UI). – users can create a backup copy of the *customization.ui* file, see Backup mechanism in GENIUS TOOLS Starter App. 146	button and UI tab can be disabled with *Can see and save Customization.ui file* under *Function access > Project* 154
5	Project report 	opens PDF file containing all information about the selected project	button: can be disabled with *Can create project report* under *Function access > Administration* 154
6	GENIUS TOOLS Starter App Config Analyzer 	opens separate utility to view and edit all configuration and batch files used for the project and their location. You can edit these files with an editor.	button: can be deactivated able with *Can analyze project* under *Function access > Administration* 154

© 2021 INNEO Solutions GmbH

5.18.4 Displaying license information

The *Licenses* tab contains information on the license servers (1) assigned to a project as well as the two Symbols *Analyze licenses* (2) and *Borrow licenses* (3) if the users have been granted the following rights.

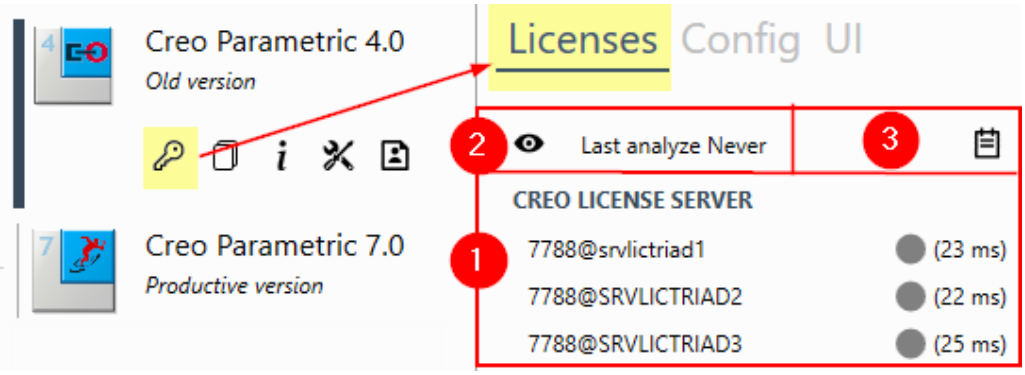

1. Creo license server

All PTC license servers are listed to which a project has access to.

Settings: Together with Analyze licenses

2. Analyze licenses

This function shows all available licenses and extensions as well as the time that has passed since the last analysis.

Settings: These two functions (1,2) belong together and can be switched on or off with two settings in GENIUS TOOLS Project Configurator.

– *Configuration* > *Select group* > *Creo Settings* > *Tab: Start* > *Section: Licenses* to *Yes/No*.

– *Access Rights* > *Function Access* > *Select: Access Group* > *Section: Function Access* > *Can analyze licenses.* 154

3. Borrow licenses

The borrowing function can be turned off by the administrator in the GENIUS TOOLS Project Configurator

Settings:

– *Access rights* > *Function Access* > *Select: Access group* > *Section: Function Access* > *Can borrow licenses: Yes/ No.* 154


– The default and maximum borrowing duration can be preset in *Projects* > *Application types* > *Tab: Start* > *License borrowing* 119

© 2021 INNEO Solutions GmbH

5.18.5 Configuring the desktop link

By default, a desktop link for GENIUS TOOLS Starter App is created automatically on the application computers. You can define the properties of this desktop link in Project Configurator, including centrally-defined start parameters.

To configure the desktop link, go to the *Configuration* page , select a group, then select the settings item *GENIUS TOOLS Starter App*. Set *Create desktop link* to *Yes*. This setting determines that the desktop link is created or updated according to the configuration with each program start or synchronization process.

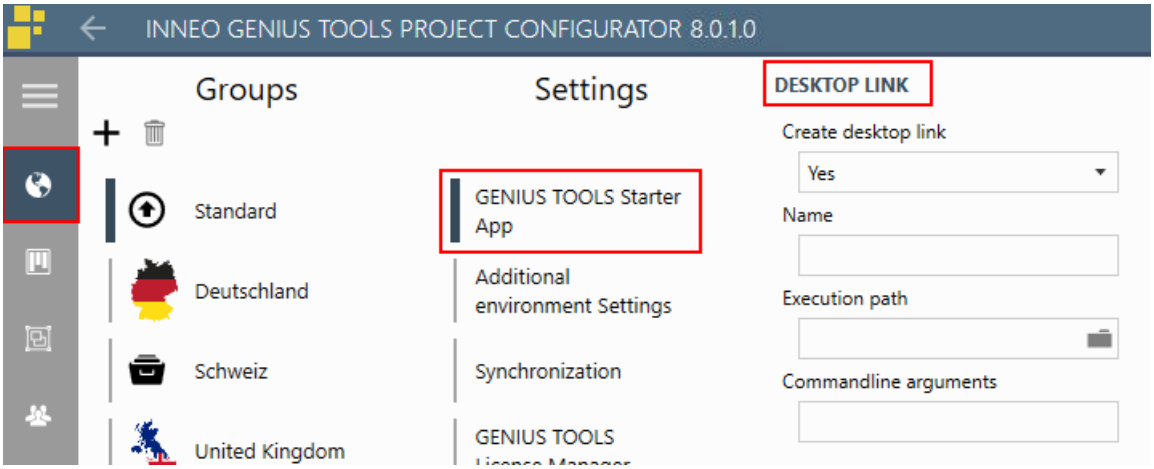

You can define the following settings for the desktop link.

Name
You can define a name for the desktop link. Without an entry the desktop link will be named *GENIUS TOOLS Starter App - <operating environment name>*.

Execution path
Enter the path GENIUS TOOLS Starter App should be run in.

Commandline arguments
Enter any start parameters that should be used by GENIUS TOOLS Starter App.

Warning: If you used start parameters in version 6.0.0, take care to move them to this setting in Project Configurator. If the start parameters are not specified here, start parameters in local links will be deleted!

Warning: If the start icon is located in the *users\public\desktop* directory, it cannot be changed with user access rights. This means that the central icon definition cannot be applied!

© 2021 INNEO Solutions GmbH

Custom icon graphic

If you want to use a custom icon graphic, you have to place the image file in the *_Images* directory of the operating environment using the file name *<operating_environment_name>.ico*.



Example result


5.18.6 Support link and logging

In *GENIUS TOOLS Starter App* > *General* you can define whether users should have access to the online support function of INNEO (TeamViewer) or to a company-specific link or document. You can also hide the Support menu item altogether.

▶ General

Hide support
Hides the menu item *Support* in the user menu item *Help* of GENIUS TOOLS Starter App.

No selection (Default): Users are referred to the Hotline website of INNEO.
No: The user sees the Support item in the menu.
Yes: The Support item is not visible.

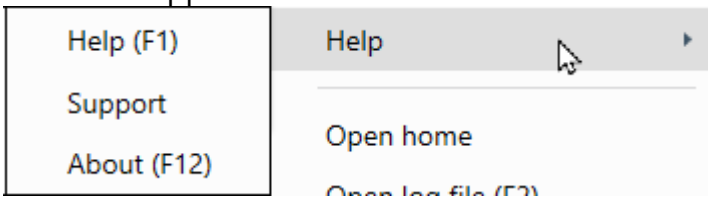

Support
Enter the URL of a website or the path to a document. Set the above field *Hide support* to *No*.

Log projects without permission
Projects to which a user has no access rights are by default not displayed in the log file.

Yes: Information about the projects is displayed in the log file.
No (Default): Projects are not included in the log file.

Write crash report to Caddepot directory
Unexpected errors are written to a log file by GENIUS TOOLS Starter App (*gts_error.log*). The file can also be copied to the server and is saved there as *serveronly_ErrorLog\<Computer_name>.log*.

Yes: The client will copy its log file if an unexpected error occurs.

© 2021 INNEO Solutions GmbH

No (Default): The log file is only available on the client computer.

5.18.7 Operating environment clean-up

Under *GENIUS TOOLS Starter App* > *Cleanup of working environment*, you can define whether an outdated operating environment should be deleted from the application computers, that is, from the Cadpool directories. The operating environment in the Caddepot is not affected. The user is asked to confirm before the deletion process is started.

5.18.8 Sending messages to the users

GENIUS TOOLS Starter includes a functionality for administrators to send messages in form of text files to users who can access them in the GENIUS TOOLS Starter App sidebar 183.

Creating a message

Step 1: Go to the operating environment's *_Information* directory in the caddepot directory.

Step 2: Create a TXT or a PDF file with your message. The name of the text file has to start with the prefix *alert_*, e.g., *alert_message.txt*.

After synchronization the existence of new messages is displayed to users by coloring the message symbol red 

. After reading the document can be opened again.

5.18.9 Freely configurable debug mode

GENIUS TOOLS Starter provides a freely configurable debug mode that allows you to use the Windchill Workgroup Manager to interact with Windchill in debug mode.

The files logger.cfg.debug and logger.cfg.bat are used for this purpose according to the call hierarchy for configuration files 19. Place both files in the standard directory <*working environment name*>*configuration**standard*.

Hint: Information on how to use client log files for debugging with Windchill Workgroup Manager can be found at PTC in article CS140107.

logger.cfg.debug
If the logger.cfg.debug file exists multiple times within the directory, it is copied together like a config.pro file. File names are used in the following notation: *logger.cfg*.debug*

© 2021 INNEO Solutions GmbH

After merging *logger.cfg.debug* the log output folder is always set to HOME\ANALYSEWF by adding the line *log_dir_path*.

logger.cfg.bat
The batch file is used to define environment variables which should be additionally defined in the Creo session if the debug mode is used. If more than one batch file exists, all batch files matching the *logger.cfg*.bat* notation will be executed.

The debug mode is switched on in the user menu 181 of GENIUS TOOLS Starter App with *Debug Creo/Windchill*.

© 2021 INNEO Solutions GmbH

6 GENIUS TOOLS Starter App

GENIUS TOOLS Starter App lists the projects defined in GENIUS TOOLS Project Configurator and lets the users start them.

If changes are made to the central configuration, these changes are taken up by GENIUS TOOLS Starter App with the next synchronization.

6.1 Starting GENIUS TOOLS Starter App

By default, GENIUS TOOLS Starter App is configured to start automatically with the operating system. GENIUS TOOLS Starter App is displayed in the Windows task bar and can be called up from there.

If GENIUS TOOLS Starter App is not started automatically, the app can be started via a centrally configurable desktop link.

Please note: To close GENIUS TOOLS Starter App, select *Exit* in the user menu . When you click *Close*, the window is minimized.


6.2 User interface

GENIUS TOOLS Starter App comes with a clearly structured user interface. Depending on the configuration, for example, license information on the PTC products configured for each project is listed in the user interface.

Start the desired project with a double-click. The desktop application is started with the configuration defined for the project.

Auto projects are applications which cannot be configured and are automatically listed by GENIUS TOOLS Starter.

© 2021 INNEO Solutions GmbH

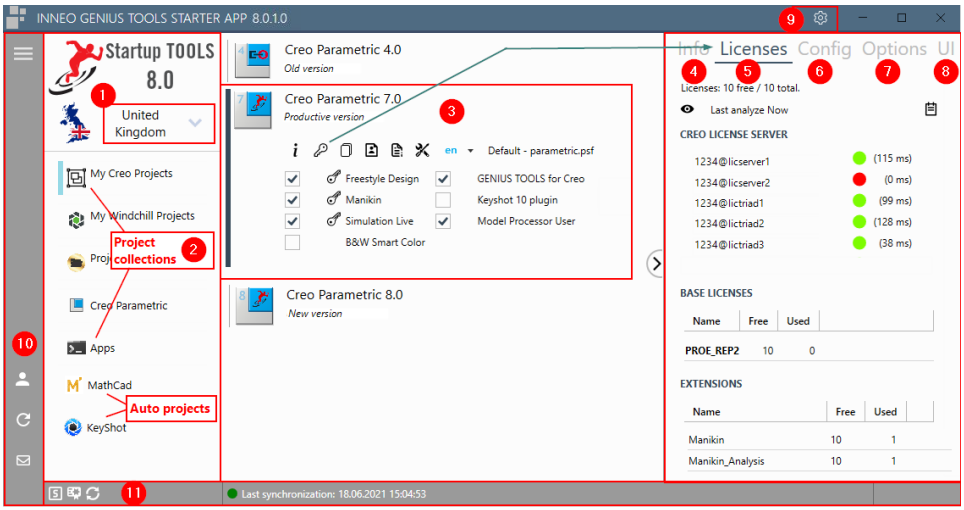

User interface of GENIUS TOOLS Starter App

The user interface of GENIUS TOOLS Starter App is divided into three areas.

Left **area for selection** of:

1. a unit 170 and
2. project collections 139, which can be created by administrators according to company needs (e.g. My Creo Projects, Project Archive) or applications (e.g. Creo Parametric, Creo Direkt, Apps), and

   auto projects 141, which are applications that cannot be configured and will be automatically listed by GENIUS TOOLS Starter.

Central **area with project list:**

3. Configurated project with project details and options 171

The right side with **information tabs** which open when clicking on the corresponding button in a selected project:

4. Info 174: shows the most important project (name, directories, Creo startkey, language of the project)
5. Licences: 175 displays all license servers and gives access to analyzing and borrowing licenses if user has access rights.
6. Config: 177 contains information on the configuration files and additional applications (toolkit applications) for the selected project.
7. Options: 178 shows all selectable configuration settings for license extensions, additional programms etc. (Single project options).
8. UI: 179 displays the path to the customization.ui file containing the user-specific UI settings for Creo.

Warning / Error 180: these tabs are only displayed if a project cannot be started or causes a warning.

© 2021 INNEO Solutions GmbH

There are three bars for **usage of the Starter App**:


9. User menu 181
10. Sidebar 183
11. Footer 183

6.3 Selecting a unit

When you are using a subscription license, *units* can be defined as an additional configuration layer to reflect different company branches or divisions. (See chapter Configuring heterogeneous environments. 90)

If units are used in your environment, the current unit is displayed in the header of GENIUS TOOLS Starter App.

If a user account is assigned to multiple units, the user can switch between units via the header.

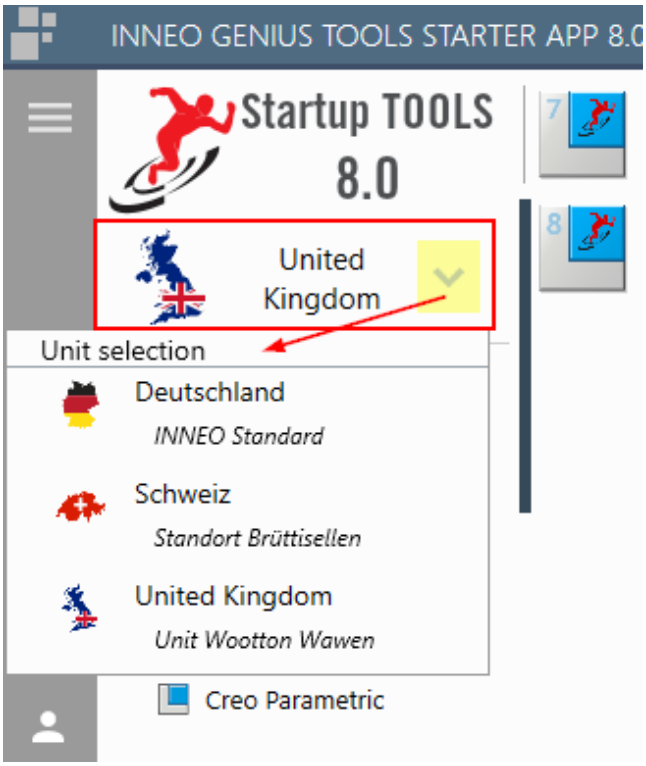


Unit selection


Units are displayed in alphabetical order unless a unit is defined to be the first on the list. This can be specified in GENIUS TOOLS Project Configurator by inserting a space character in front of the unit name. (See Displaying units in GENIUS TOOLS Starter App. 91)

© 2021 INNEO Solutions GmbH

Selecting a subordinated unit (subunit)

If users can select from subordinate units (subunits), the selection field will open a separate dialog for selecting all subunits.

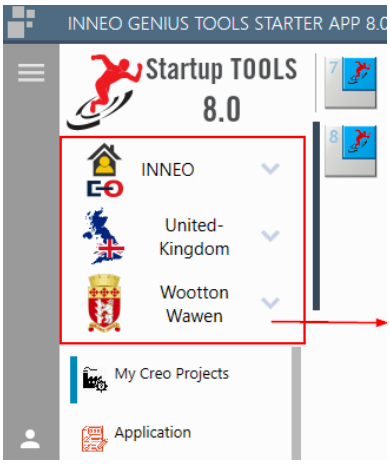

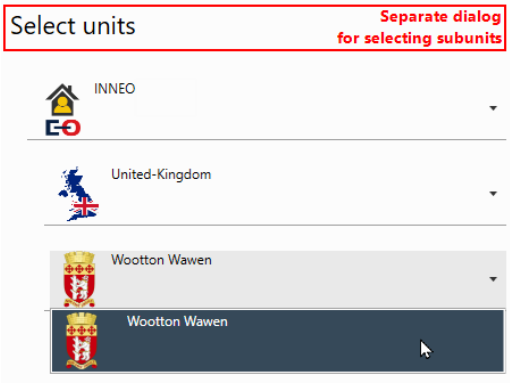

In this dialog box you can select another unit. Note that units can be selectable from several levels. If no selection is made, the first unit in the drop-down menu will be used.

Confirm the selection with the Change button at the bottom right.

6.4 Project details and options

Information about a project is available in the area below the selected project, the info tabs, and by the color of the bar to the left of the project name.

In the selection fields, users can set the language, the Creo start key and additional programs and license extensions for a selected project if they have the rights to do so.

License check for projects

In GENIUS TOOLS Project Configurator, your administrator can define whether you can check for available Creo licenses (this adds the *Analyze licenses* button in the Licenses tab) and how projects should be displayed if there is no license available for them. The display of projects without a license can be set by the adminsitrator as follows:

– The projects are not visible for the user.

– The projects are marked with a red background and cannot be started.

– The projects are marked with a gray background and cannot be started.


– The projects are marked with a yellow background and can be started.

The warning or error colors only appear when a project has been clicked or the *Analyze Licenses* function in the Licenses tab.

© 2021 INNEO Solutions GmbH

Project details

When selecting a project the following icons appear in the area below the project name.

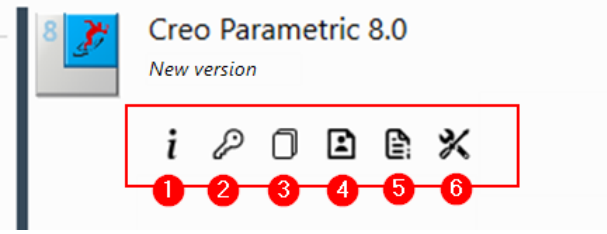

	Function	Description	Funktion im Project Configurator konfigurierbar?
	Warning	warning icon appears only if project settings trigger a warning opens Warning tab	no
1	Information	opens Info tab with: – project name – path to project, data and working directories – Creo language, Creo startkey – Windchill	button and Info tab can be disabled with *Can see project information* under *Function access > Administration* 154
2	Licenses 175	opens Licenses tab: – shows licenses and license servers – button for analyzing licenses – button for access to the license borrowing process	button: no Licenses tab: yes, see Displaying license details 163
3	Configuration files	opens Config tab – lists all used config.pro files and additional applications (Toolkit Application) in the selected project – config.pro files can be opened by right clicking	button: no Config tab: users can deactivate configuration files if administrator assigns rights in *Can disable Creo config files* under *Function access > Project* 154


© 2021 INNEO Solutions GmbH

	Function	Description	Funktion im Project Configurator konfigurierbar?
4	UI (Customization .ui file) 	opens the UI tab: – displays the *customization.ui* file, which contains the user-specific settings for Creo's graphical user interface (UI). – users can create a backup copy of the *customization.ui* file, see Backup mechanism in GENIUS TOOLS Starter App. 146	button and UI tab can be disabled with *Can see and save Customization.ui file* under *Function access > Project* 154
5	Project report 	opens PDF file containing all information about the selected project	button: can be disabled with *Can create project report* under *Function access > Administration* 154
6	GENIUS TOOLS Starter App Config Analyzer 	opens separate utility to view and edit all configuration and batch files used for the project and their location. You can edit these files with an editor.	button: can be deactivated able with *Can analyze project* under *Function access > Administration* 154

Project options (checkboxes)

In the drop-down fields of a project, users can select the following project options, if they have been granted the right to do so: Language, Creo-Startkey, and additional programs and license extensions.

© 2021 INNEO Solutions GmbH

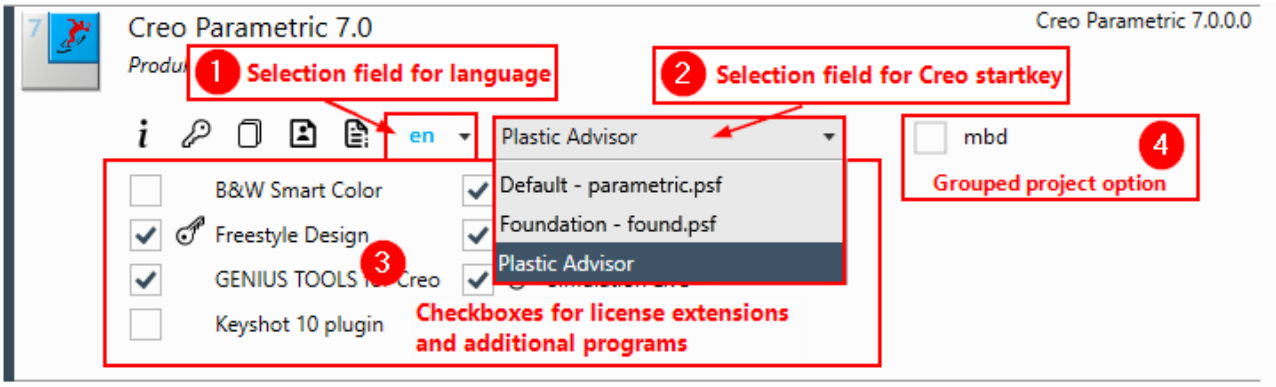

	Function	Beschreibung	Funktion in Project Configurator konfigurierbar?
1	Language en	selects the language in which Creo starts the project	yes, see Defining project options: Language 159
2	Creo startkey Foundation - found.psf	selects the license key (PSF key) to start the project with	yes, see Defining project options: Creo startkey 159
3	Single project options Simulation Live Deselect all options Select all options – clicking on the right opens a menu to deselect or select all options – arrow will appear, if more options are available and opens the Options tab	activates license extensions (key symbol) and additional programs	create config.pro blocks, see Defining project options > Single project options 126
4	Grouped project options	activates combined configuration options – after selection further single project options may become available	create config.pro blocks, see Defining project options > Grouped project options 126

6.4.1 Information


The *Info* tab contains the following information on the selected project.

© 2021 INNEO Solutions GmbH

- Project name
- Project directory
- Data directory
- Working directory
- Information on the application:
- Creo startkey (PSF file that contains startcommands). Users may have been granted the right to select a startkey. (See project options 173)
- Application language. Users may have been granted the right to choose the start language. (See project options 173)
- Windchill

6.4.2 Licenses

The *Licenses* tab contains information on the license servers assigned to a project as well as the two Symbols *Analyze licenses* and *Borrow licenses* if the users have the corresponding user rights.

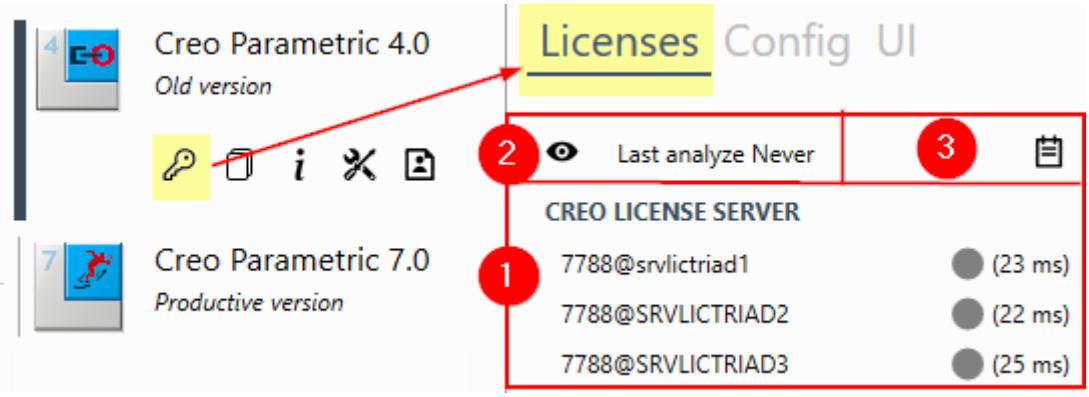

The administrator defines which license functions users can use, see chapter Displaying license information 163.


1. Creo license server

All license servers specified in the project are listed here without being checked for availability. The dots turn green or red only after a license analysis (2)

2. Analyzing licenses

After clicking *Analyze licenses (2)* all licenses and extensions needed for the project are listed and their availability is displayed in the column *Free*. Also, the time passed since the last analysis is shown.

© 2021 INNEO Solutions GmbH

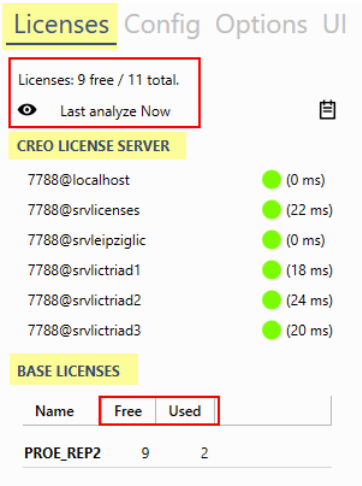


If you are working with borrowed licenses and without synchronization, the *Licenses* tab is hidden. If you are working with borrowed licenses, empty information tables are hidden.

Please note: If you are running Creo Parametric on your local computer, using one license, and there are no other licenses available on the license server, the number of free licenses is given as *1*, not *0*. Also, the note *Multiple usage* is displayed. This is meant to show that you can start additional instances of Creo because no additional license is required.

3. Borrow licenses


If a user is permitted to borrow licenses, the Borrow button is displayed.

1. In the *Licenses* tab, click *Borrow (2)*. The *Borrow licenses* dialog is displayed.

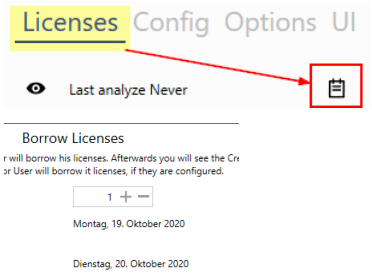

2. Select the number of days for which you want to borrow the licenses and click *Borrow*. GENIUS TOOLS Starter App borrows the licenses for GENIUS TOOLS Starter. The PTC license borrowing dialog for Creo opens.

3. In PTC Creo license borrowing dialog, select the correct startkey and the duration of borrowing in days. The correct startkey is the one that starts with the selected project (see Info tab in GENIUS TOOLS Starter App). Click *Start*. Creo is started with the borrowed licenses.

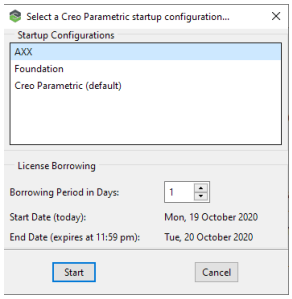

© 2021 INNEO Solutions GmbH

4. Once Creo has been started completely, GENIUS TOOLS for Creo will automatically borrow its licenses. If GENIUS TOOLS for Creo does not start, check in the PTC message window whether the full startup of Creo is displayed.


Please note: If you click on Borrow (step 2) and then cancel the PTC borrow dialog (step 3) you will have borrowed a GENIUS TOOLS license.

Return licenses
To return borrowed Startup TOOLS licenses, select *Return all borrowed GT licenses* in the user menu .

Display of borrowed licenses
For projects: projects with borrowed licenses can be recognized quickly in the main window by the note on the right.



For applications: In the tooltip of the plane button in the footer you can see which GENIUS TOOLS licenses have been borrowed and until when.

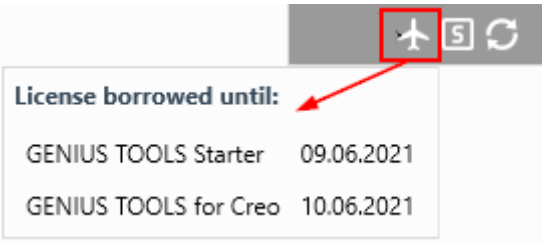


6.4.3 Configuration files

The *Config* tab shows the user which configuration files are used for configuring the project (*config.pro* files) and in which directories these files are stored as well the additional applications (toolkit applications) used in the selected project. All files listed can be opened by double clicking on them.

The tab opens by clicking on the button.


© 2021 INNEO Solutions GmbH

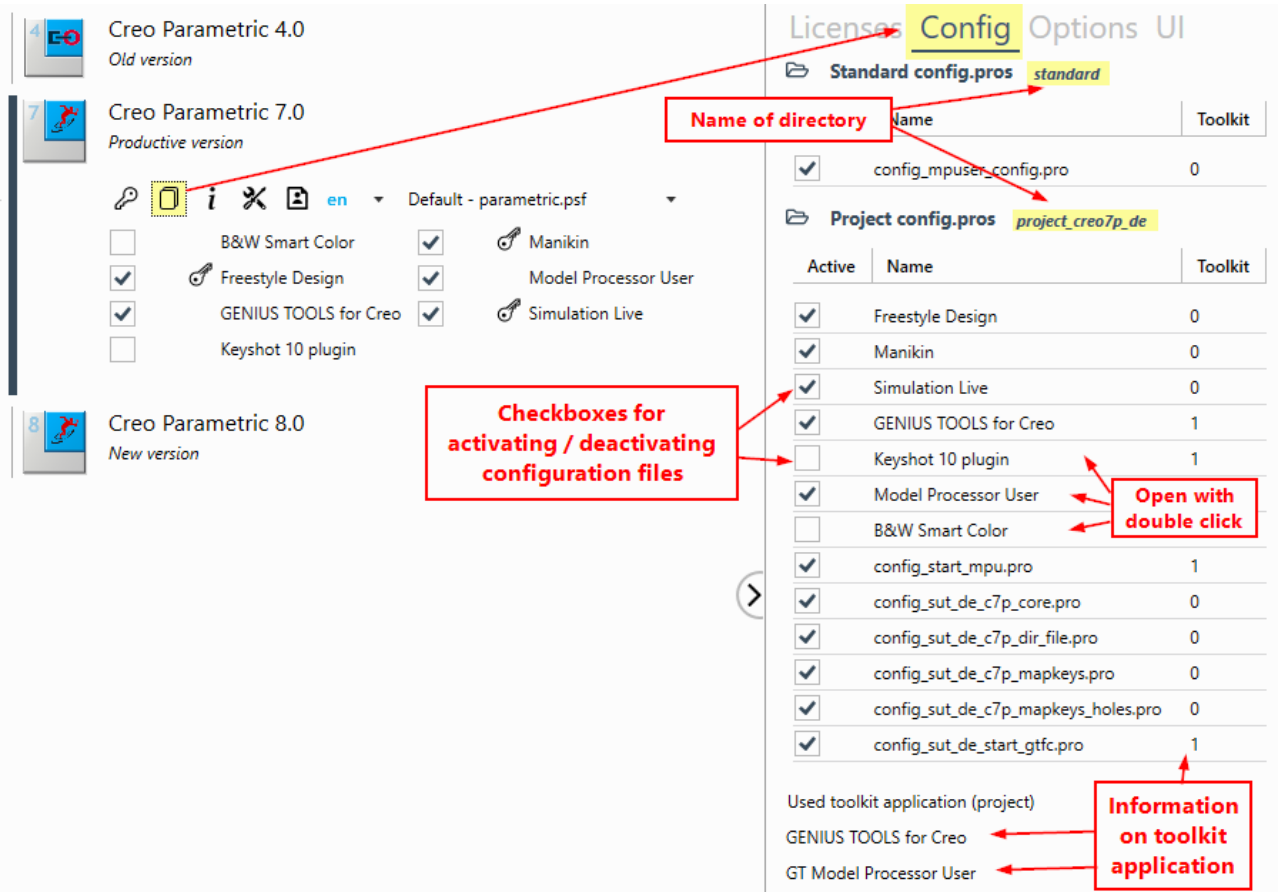

Your administrator defines whether users can deactivate the use of individual configuration files, see chapter Assigning access rights 154.

6.4.4 Options

In the Options tab all single project options, e. g. for license extensions or additional programs, can be activated , The tab can be opened with the arrow symbol, which will become visible if some checkboxes cannot be displayed below the project.

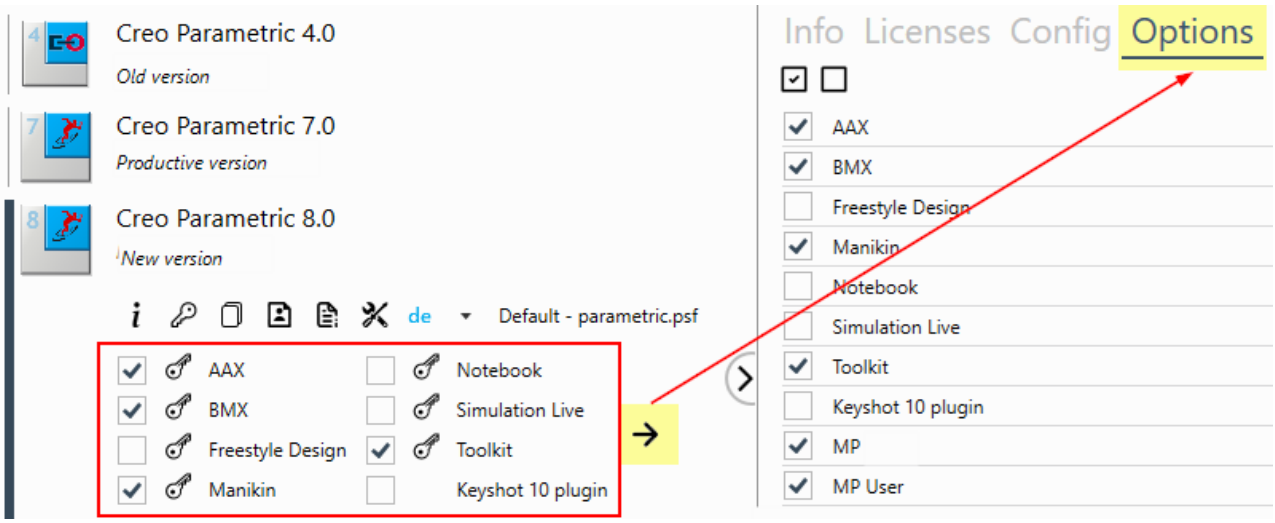


© 2021 INNEO Solutions GmbH

6.4.5 Customization.ui file

The file *creo_parametric_customization.ui* (short: *customization.ui*) contains the user-specific settings for the graphical user interface of Creo.

The UI tab – which opens with the button – displays the path to the customization.ui file and allows for making a backup copy of it, if the user has the right to do so.

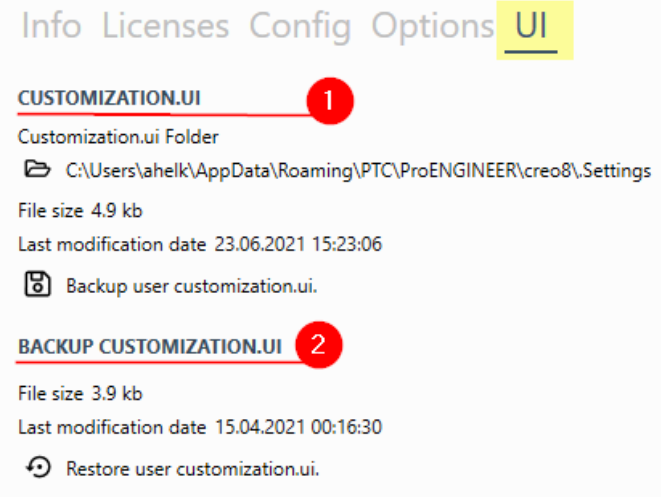

1. Graphical settings

Users can manage a UI configuration file on their own if it is stored in the *userdata* directory and the user has write permissions for this directory. The *userdata* directory can be located in the caddepot of the administration computer, from where it is synchronized to the user computer, or on the user computer, where it is not subject to synchronization. (See also User-driven configuration 23).

2. Backing up user-specific UI settings

You can create a backup copy of the user-specific file *customization.ui,* which contains settings for the user interface of Creo. To do so, click *Backup customization.ui*. To restore the *customization.ui* from a backup copy, click *Restore customization.ui*. For more information consult Backup mechanism with GENIUS TOOLS Starter App. 146

6.4.6 Project report

The project report – created by clicking on the button – is a separate file containing all information about the selected project and the current user.

The information is grouped as follow:

- General project details
- GENIUS TOOLS STARTER Network-settings

© 2021 INNEO Solutions GmbH

- GENIUS TOOLS Starter App
- Additional Environment Settings
- Synchronization
- Licensing
- Creo Settings
- Delete Creo configuration locally
- Write Creo configuration locally
- Windchill Settings
- Used Files
- Batch-files
- Config.sup
- Config.pro
- Customization.ui
- Dynamic Customization.ui
- Config.val
- Assigned rights
- Appendix
- All environment variables
- Generated config.sup
- Generated config.pro
- Generated config.val

6.4.7 Warning and error tab

Warning

The Warning tab will only be displayed if a project causes a warning. The application can be started.

- Project folder not found: Check the project folder specification in GENIUS TOOLS Project Configurator in the *Projects* menu item.

Error


The error tab will only be displayed if a project cannot be started. It contains information about the error. Errors can be:

- Creo cannot be started
- No licenses are available
- Creo startkey is incorrect or does not exist

© 2021 INNEO Solutions GmbH

6.5 User menu

To access the user menu, click on the gear symbol in the header .

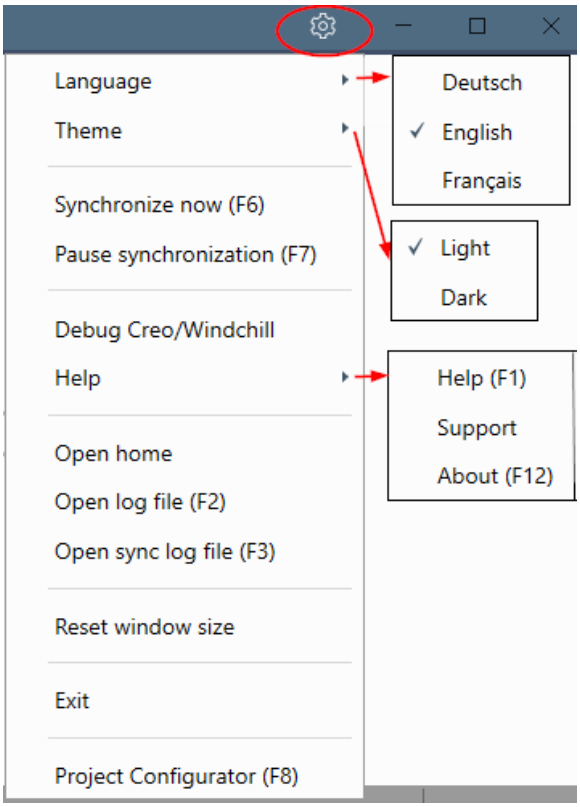

Language: user interface language

You can switch the user interface language between English, German and French at any time. The language setting is saved and will be used the next time you start the software.

The software first starts with a German user interface if the operating system locale is set to German. For all other locale settings, the software first starts with an English user interface.

Theme: user interface color settings

The software comes with the color themes *Blue*, *Light* and *Dark*. You can switch themes at any time. The theme setting is saved and will be used the next time you start the software.

Synchronize now (F8)

GENIUS TOOLS Starter immediately synchronizes from the central Caddepot, regardless of the specified synchronization interval, and loads any updated files into the Cadpool.

Pause synchronization (F7)

GENIUS TOOLS Starter stops synchronization until it is re-started by the user. The setting

© 2021 INNEO Solutions GmbH

Pause synchronization is saved for the next start and marked by a yellow bar below the header. When the user resumes synchronization, they are asked whether they want to resume and overwrite local changes.

Pause synchronization if you want to prevent local changes from being overwritten until they have been added to the Caddepot by your administrator.

Please note: Your administrator defines whether you can pause the synchronization. If you are not allowed to pause the synchronization, the item *Pause synchronization* is not displayed in the menu.

Debug Creo/Windchill

Switches Creo debug mode on. This mode processes the files *logger.cfg.debug* and *logger.cfg.bat*. Settings for this are made by the administrator, see chapter Freely configurable debug mode. 166

Help

- **Help (F1):** Opens the software help for GENIUS TOOLS Starter. The help corresponds to this document.
- **Support:** Opens contact details for the technical support of INNEO or a company-specific link which can be set up in GENIUS TOOLS Project Configurator. Inneo's support can be reached by email, telephone and with Teamviewer.
- **Info (F12):**. Shows the current GENIUS TOOLS Starter version.

Open home

Opens the user directory in the file manager.

Open log file (F2)

Opens the log file that is written on each project start. The log file *gts-starter-INNEO.log* is saved in the user directory of the client.

Please note: Please always find and check your log file before opening a call with the support hotline. The log file is required for troubleshooting any issues.

Open sync log file (F3)

Opens the log file that is written by GENIUS TOOLS Starter App and GENIUS TOOLS Project Configurator at each synchronization. The log file *gts-starter-INNEO-sync.log* is saved in the user directory of the client.

Reset window size

Restores the default size of the dialog window of GENIUS TOOLS Starter. The window can

© 2021 INNEO Solutions GmbH

be adjusted to all sizes.

Project Configurator (F8)

Opens GENIUS TOOLS Project Configurator.

> **Please note:** Your administrator defines whether you can access GENIUS TOOLS Project Configurator via the access rights 152. If you are denied access, the item *GENIUS TOOLS Project Configurator* is not displayed in the menu.

6.6 Sidebar

The sidebar contains the functions *User*, *Refresh projects* and *Message from administrator*.

User

A picture can be displayed here. Store it in the format 100 x 130 px under the name of the user in *<caddepot>\<environment>\userdata\%USERNAME%\%USERNAME%.png*.

Refresh Projects (F5)


Refresh Projects reloads all project configurations from the administration computer in the same way as when you restart the application.

Message from Administrator (F4)

There are new messages from your administrator when a red number is displayed on the letter symbol. Messages that have been opened are displayed in gray color and can be reread. Messages are saved as text files in the *_Information* directory, see also Sending messages to the users 166.

6.7 Footer

The footer contains the following information.

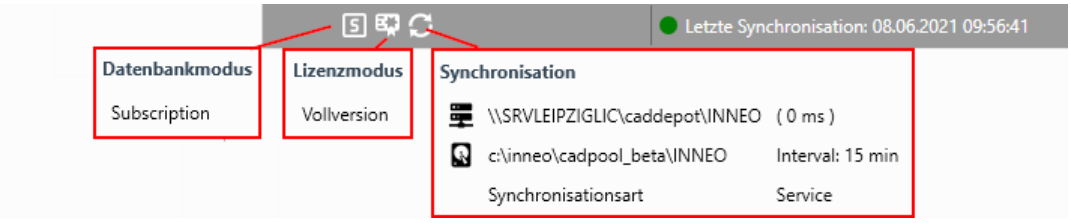

© 2021 INNEO Solutions GmbH

Data base mode

The state of the database is displayed in the footer:

–  Database requires a subscription license. Projects cannot be started when working with a permanent license.

–  Database has been created with a permanent license. It can be accessed by both permanent and subscription license.

License mode

The GENIUS TOOLS Starter App footer shows the current license mode by displaying an icon.

–  Full version

–  Full version. No free subscription license available, i. e. projects cannot be started.

–  Borrowed license

–  Educational or home use

–  Fail-safe mode (Fallback license, if license server is not available)

Please note: A fail-safe license is available only after GENIUS TOOLS Starter has found valid licenses on a license server during project validation. Projects are validated by the command *Refresh Projects*  in the sidebar.

Synchronization mode and synchronization status

To the right of the icon for the license mode, information on the synchronization mode is displayed. For more information, please refer to Procedures and synchronization 13.

–  Synchronization is active
Hover the mouse on the synchronization symbol to see the paths to the Caddepot and to the local operating environment as a tooltip.


–  Synchronization inactive
The synchronization of toolkit applications is paused as long as Creo is running

–  Local operating environment
There is no synchronization; you work on a local directory

License borrowed until:

This icon appears when licenses have been borrowed.

© 2021 INNEO Solutions GmbH

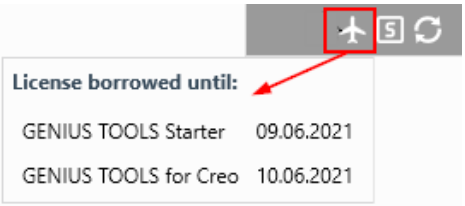

The synchronization status with the date and time of the last synchronization is displayed in the middle area of the footer.

Running applications

If a supported desktop application is running, the application icon will be displayed in the footer.

– Creo Parametric

6.8 GENIUS TOOLS Starter App Config Analyzer

GENIUS TOOLS Starter Config Analyzer is a tool that allows you to view and edit configuration files (in the Project information 185 page) as well as to directly compare configuration settings of two projects (in the Compare projects 187 page)

You can access the Config Analyzer by clicking the *Analyze* button in the Config tab of GENIUS TOOLS Starter App.



This button can be hidden by the administrator in GENIUS TOOLS Project Configurator under *User Rights* > *Function access* 152 > *Can analyze project*.


6.8.1 Project information

In the *Project Information* section of the GENIUS TOOLS Starter App Config Analyzer, you will see a list of all configuration files (3) and batch files (4) used for the project, as well as their location (column: Location). Configuration files can be located in the Standard, Unit or Project directories.

You can click directly on the configuration files and edit them with an editor.

The analysis of the configuration files refers to the found weekly version of Creo.

© 2021 INNEO Solutions GmbH

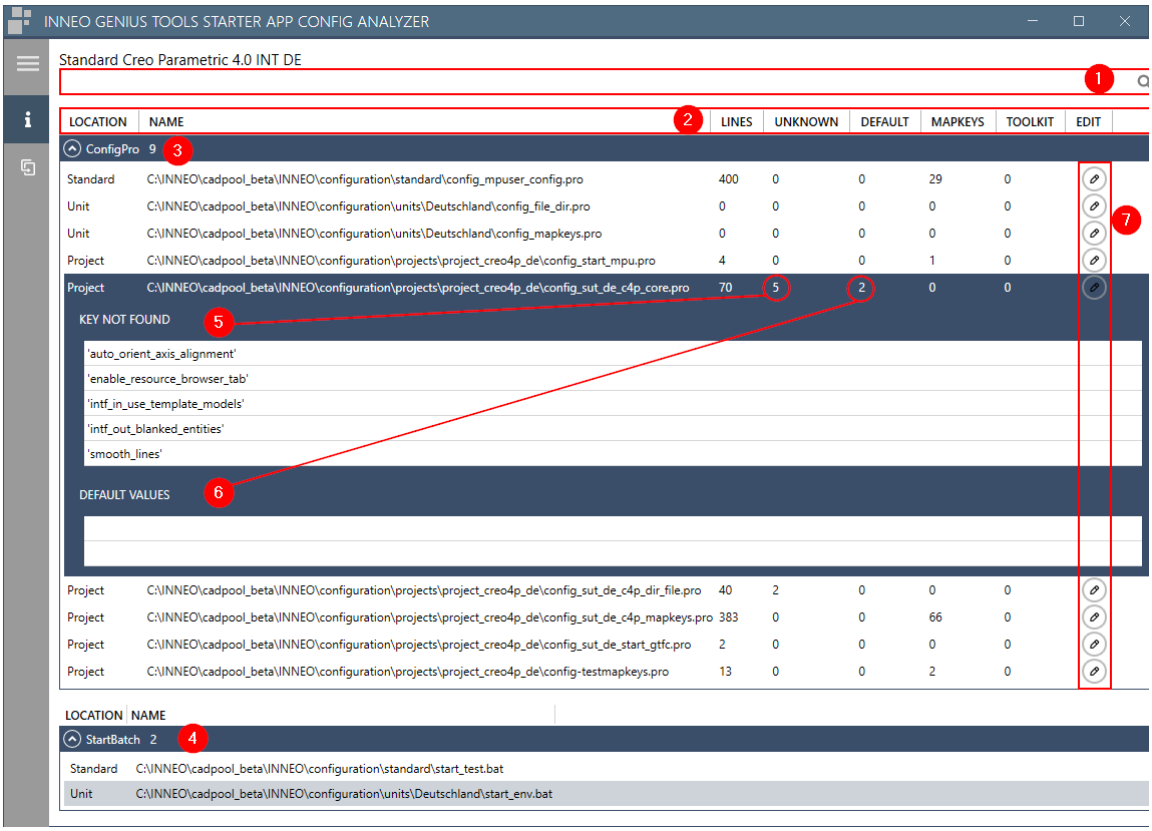

Search and sort configuration files

Search (1): Search for a file (at least three letters)

Sort (2): Click on the following areas to sort the files by the size of the value (ascending or descending)

- **Lines** (number of lines)
- **Unknown**: Config option not found (i.e. does not exist or is hidden) or value not found in the Creo weekly version
- **Default**: Default value of the configuration option in the Creo weekly version
- **Mapkeys**: Number of mapkey definitions
- **Toolkit**: Number of Toolkit applications


Values in Unknown and Default are displayed separately (5, 6)

Edit configuration files

Click on the pen symbol (7) to enter the Config Analyzer editor. You can

- edit values for existing configuration options
- insert new configuration options. The auto-completion (1), which contains all configuration options of PTC, helps with this. An explanation for the selected option is provided in an extra window (2).

© 2021 INNEO Solutions GmbH

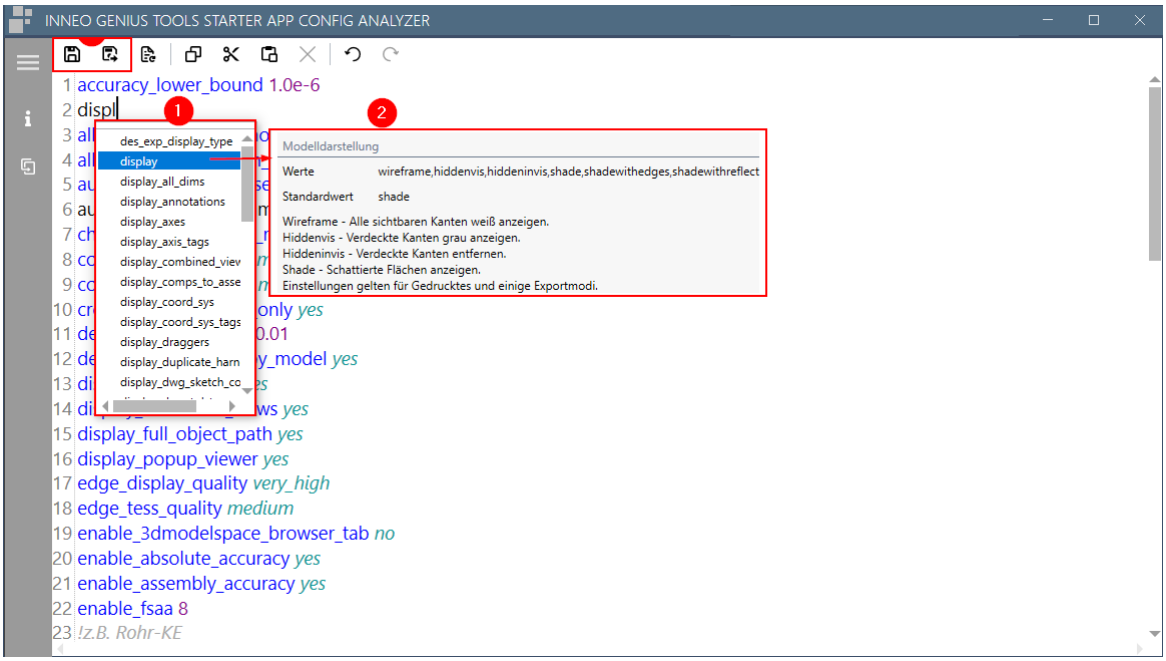

Editor of GENIUS TOOLS Config Analyzer

After editing a file, you can choose whether to save it externally or locally (3). If you save the file locally, you will be asked whether you want to pause the synchronization. This is necessary if you want to test an environment and the edited file should not be overwritten by the next synchronization.


6.8.2 Compare projects

The dialog *Compare Projects*  allows you to directly compare the configuration settings of two projects.

Select the projects from the drop-down menu (3). The projects available for selection are those that you are allowed to open in GENIUS TOOLS Starter App.

Search (1) for a configuration option (at least three letters) or use the *All, Equals* and *Not Equals* buttons to compare configuration options (2).

© 2021 INNEO Solutions GmbH

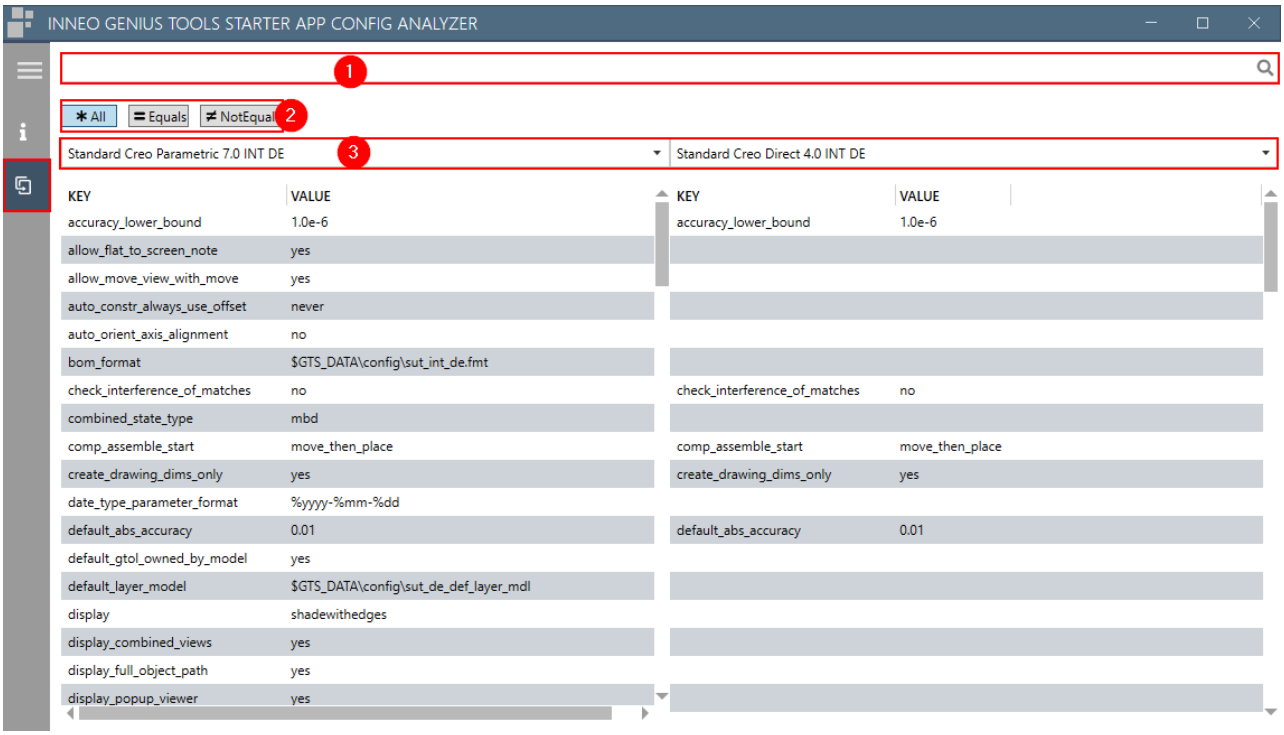


© 2021 INNEO Solutions GmbH

7 GENIUS TOOLS product overview

This chapter provides graphics showing the modules and products of the GENIUS TOOLS product family.

© 2021 INNEO Solutions GmbH


7.1 GENIUS TOOLS product family

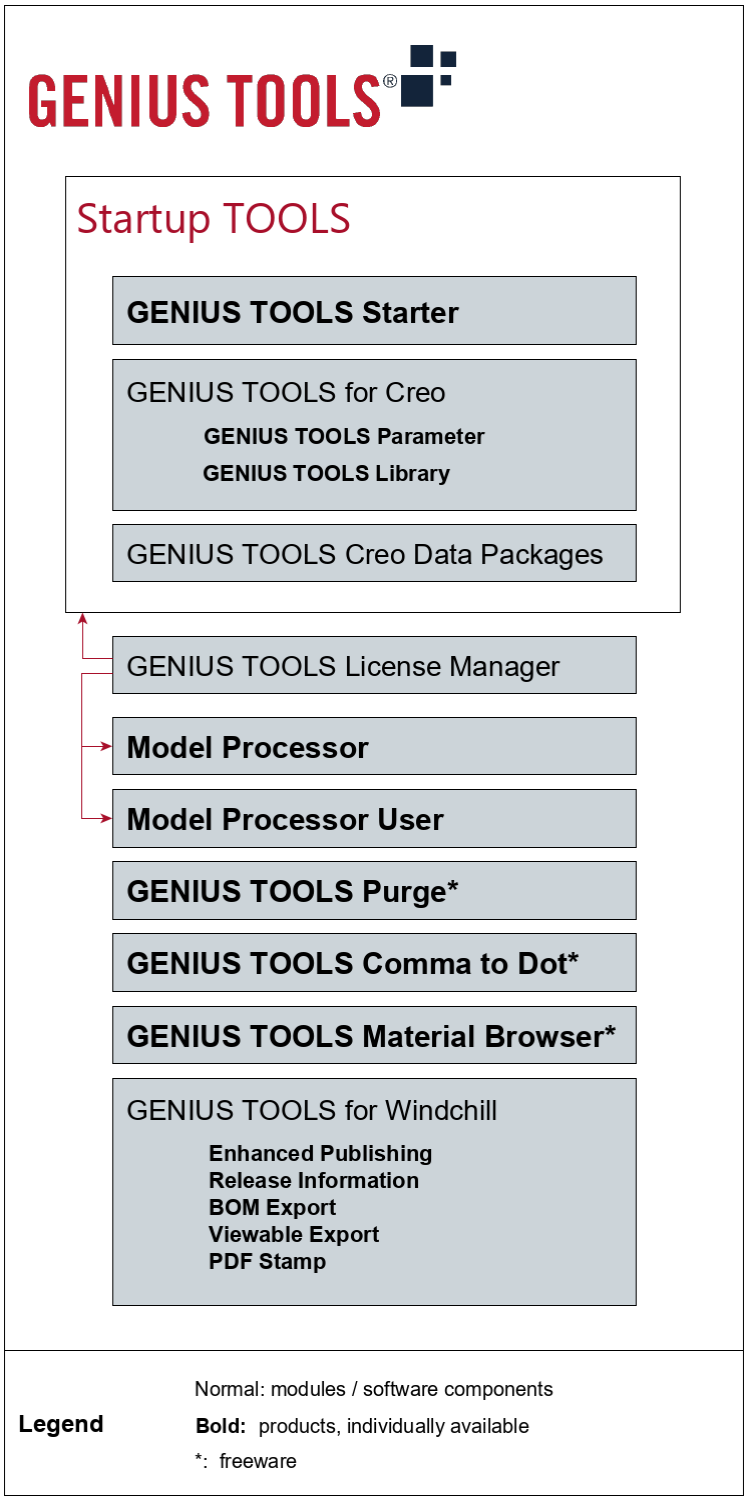

GENIUS TOOLS products with Startup TOOLS 6.0. and later versions.

© 2021 INNEO Solutions GmbH

7.2 Startup TOOLS product development

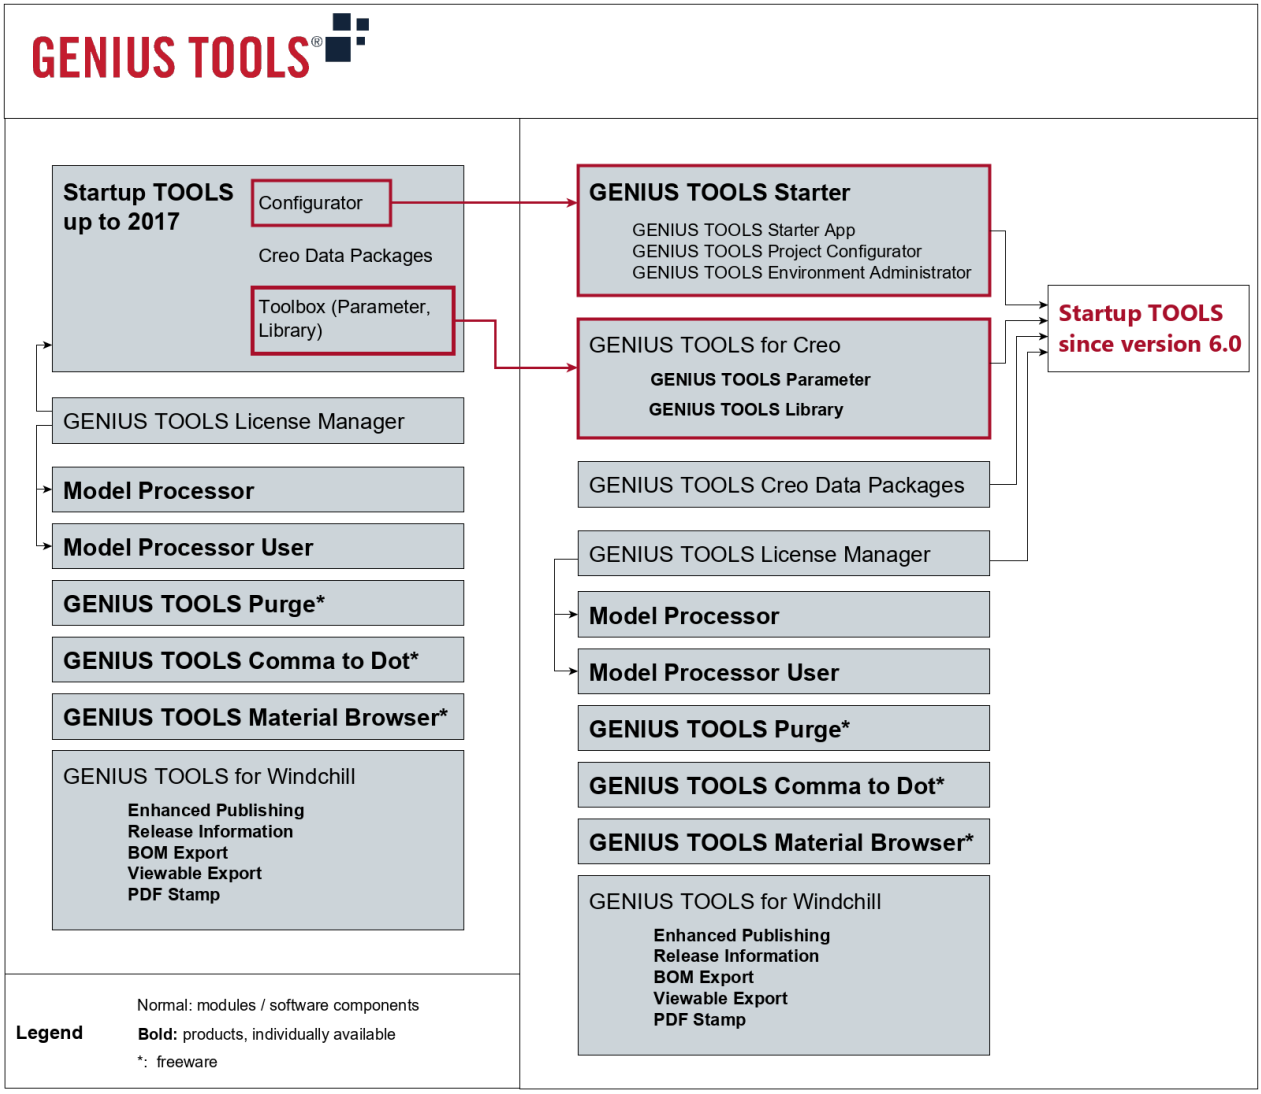

Development of Startup TOOLS from an integrated to a modular product.

© 2021 INNEO Solutions GmbH

8 Appendix

Geben Sie hier den Text ein.

8.1 Start parameters

You can start GENIUS TOOLS Starter App with the following parameters.

Start parameter	Description
-gts:admin	Starts GENIUS TOOLS Project Configurator
-gts:appdata	Redefines the path to the Appdata directory
-gts:debug	Activates debug logging
-gts:expcfg	Defines the location of the *expcfg.bat* file of the worker
-gts:debug	Activates debug logging
-gts:home	Sets the home directory. Example: *D:\gtstarter\cadpool\inneo\software\GTS.exe -gts:home=%SystemDrive%\home\%USERDOMAIN%.%USERNAME%\pro.creo3*
-gts:lang	Starts GENIUS TOOLS Starter App in a defined language (de/en/it/fr)
-gts:L	Sets Creo language
-gts:CL	Set language for GENIUS TOOLS Starter
-gts:licDebug	Activates debug logging for the license server (loud alarm when license problems occur)
-gts:licServer	Sets the license server
-gts:licTimeout	Defines the maximum waiting time to receive a license, in milliseconds. Entries from 1000 to 60000. Default: 10000. Setting is passed on to Creo by environment variable GT_LIC_TIMEOUT .
-gts:networkTimeout	Redefines the network timeout. Entries in milliseconds.
-gts:noChecksum	Deactivates checksum tests during synchronization

© 2021 INNEO Solutions GmbH

Start parameter	Description
-gts:noProjectAutostart	Prevents the project (gts:p) from being started immediately
-gts:noSync	Deactivates synchronization
-gts:p	Starts a project and filters the project list
-gts:pui	Filters the project list to a list of projects specified separated by commas (-gts:pui=pname1,pname2,pname3)
-gts:temp	Redefines path to the Temp directory
-gts:worker	Starts in Worker setting

8.2 Environment variables

Created environment variables

GTS environment variable	Description / example	Old SUT variable
GT_LIC_SERVER		
GT_LIC_TIMEOUT		
GTFC_ADMIN		TBXADMIN
(GTS_CFG_LW) recommended instead: GTS_ROOT_DIR	GTS:<Cadpool>\<WorkEnvironment> GTS: D:\gtstarter\cadpool\2017_latest SUT: <DriveLetter> SUT: P:	STOOLS_CFG_LW
GTS_*_ESCAPED	Variant of a variable that prevents the variable from being erroneously being resolved, e.g. in mapkeys. (See explanation in section below.)	
GTS_COMPUTER_GROUP	Name of computer group	
GTS_DATA		SUTDATA

© 2021 INNEO Solutions GmbH

GTS environment variable	Description / example	Old SUT variable
GTS_DATA_LIB		
GTS_ENV_NAME	Name of operating environment	
GTS_MC		SUTMC
GTS_NET_LW	Name of the first network drive	
GTS_PLOT_CONFIG_DIR		PLOT_CONFIG_DIR
GTS_PLOT_FILE_DIR		PLOT_FILE_DIR
GTS_PROEDATECODE		SUT_PROEDATECODE
GTS_PROERELEASE		SUT_PROERELEASE
GTS_PROJECT_DIR		APPL_PROJECT_DIR
GTS_PROJECT_NAME	Name of current project	SUT_PROJECT_NAME
GTS_ROOT_DIR		SUT_ROOT_DIR
GTS_SERVERONLY_DIR		
GTS_SERVER_DIR		
GTS_SYNC_LAST		
GTS_SYNC_MODE		
GTS_TRAIL_DIR		TRAIL_DIR
GTS_UNIT_DIR		
GTS_UNIT_DIR_NAME	Name of the unit directory	
GTS_UNIT_NAME	Name of unit	
GTS_USER		STOOLS_USER

© 2021 INNEO Solutions GmbH

GTS environment variable	Description / example	Old SUT variable
GTS_USER_CONFIG_DIR		USER_CONFIG_DIR
GTS_USER_GROUP	Name of user group	
GTS_USER_LW	Letter of user drive	STOOLS_USER_LW
GTS_USERLONG		STOOLS_USER_LONG
GTS_USERSHORT		STOOLS_USER_SHORT
GTS_VERSION		
GTS_WCSRVNAME	Windchill server name	STOOLS_WCSRVNAME
GTS_WCSRVURL	Url of windchill server	STOOLS_WCSRVURL
LANG		LANG

Created environment variables: _ESCAPED variant

Since version 6.0.2.0 variables are resolved in configuration files. This means that mapkeys, in which environment variables with path specifications are used, no longer worked. Therefore new variants of environment variables were introduced, in which the variable is extended with the extension *_ESCAPED*. This makes it possible to continue using variables in mapkeys and other places where resolution is undesirable.

All variables can be extended with *_ESCAPED*. In particular, the following variables are required for use in Mapkeys: GTS_PLOT_CONFIG_DIR_ESCAPED, GTS_SERVERONLY_DIR_ESCAPED, GTS_SERVER_DIR_ESCAPED, GTS_TRAIL_DIR_ESCAPED, GTS_UNIT_DIR_ESCAPED, GTS_USER_CONFIG_DIR_ESCAPED.

Affected environment variables

PTC_WF_ROOT

Environment variable that overwrites the default location of the Creo directory. (WF comes from "Wildfire", name of the predecessor product of Creo.)

© 2021 INNEO Solutions GmbH

PTC_WF_CACHE

Environment variable that refers to additional cache space.

PTC_SESSION_LOG_PATH

PTC_SESSION_TRACEBACK_PATH

PTC_SESSION_TRAIL_PATH

© 2021 INNEO Solutions GmbH

9 Glossary

Administration computer
Computer on which the administrative user has full write access to the Caddepot directory in order to manage all data on the file system level.

Application computer, workstation
Computer on which the (Creo) user works. The application computer houses the Cadpool directory, which contains the local operating environment.

Creo
CAD software by PTC with the applications Creo Parametric, Creo Elements, Creo Direct.

Creo startkey (also: PSF key, start command)
Configured start command that opens Creo with one or several defined licenses or license extensions. Stored as PSF file in PTC bin directory.

Cadpool
Directory on the application computer that contains the local operating environments. The Cadpool directory is synchronized from the Caddepot.

Caddepot
Directory on the administration computer that contains the central operating environment.

Client
Term for application computers for Startup TOOLS versions up to 2018.

Computer group
A defined group of configured Windows computers. Contains settings in which the computers' configuration differs from the general system-wide configuration.

Conditional config.pro block
Config.pro block whose validity is restricted to condition(s) by one or more tag ID(s). Notation: config_*.TAGID.pro

Configuration file
File which determines settings for a Creo application. There are four types of configuration file: *config.pro*, *customization.ui*, *config.sup* and *config.val*.

Config.pro block
Configuration file which is read by GENIUS TOOLS Starter and assembled to form a config.pro file for Creo. Contains Creo configuration options. Notation: *config_*.pro,* e. g. *config_sut_de_c5p_mapkeys.pro*.

© 2021 INNEO Solutions GmbH

Config.pro file (short: config.pro)
Most important Creo configuration file, defines user settings.

Config_*.pro file
See config.pro block

Config.sup file
Creo configuration file which contains settings that cannot be changed by the users, e.g., to ensure drawing standards.

Config.val file
Creo configuration file which contains validation settings for data import.

Customization.ui file
Creo configuration file which contains user interface customizations for a user.

Data directory
Main directory for all data related to an operating environment at *<GTS-OperatingEnv>\data*.

Educational license
License for academic institutions.

Free tag ID
Textual marking in a config.pro block 197 which restricts the file to the selection of a combined project option.

GENIUS TOOLS
Family of software products by INNEO Solutions GmbH, including Startup TOOLS, Model Processor, and freeware tools such as Purge.

GENIUS TOOLS for Creo
Component of the Startup TOOLS software product which contains functional enhancements for Creo.

GENIUS TOOLS Environment Administrator
Stand-alone administrative tool. It is used to create and update work environments, edit work environment properties and migrate from older versions of Startup TOOLS to version 6 and later. GENIUS TOOLS Environment Administrator is located at ... *\installdepot\gtsa-latest\gtsa-exe*.

GENIUS TOOLS License Manager
Administrative tools for managing Startup TOOLS licenses.

GENIUS TOOLS Project Configurator
Administrative component of GENIUS TOOLS Starter for managing project configurations and other properties of an operating environment. Open GENIUS TOOLS

© 2021 INNEO Solutions GmbH

Project Configurator from the user menu of GENIUS TOOLS Starter App.

GENIUS TOOLS Starter
Software product consisting of the three components GENIUS TOOLS Project Configurator, GENIUS TOOLS Starter App and GENIUS TOOLS Environment Administrator.

GENIUS TOOLS Starter App
Stand-alone component of GENIUS TOOLS Starter which lets users start configured Creo projects. GENIUS TOOLS Starter app is located in each operating environment under *...\caddepot\lokal\software\GTS.exe*.

GENIUS TOOLS Starter App Config Analyzer
Dialog box in GENIUS TOOLS Starter App, in which configuration settings of projects can be analyzed and edited.

GENIUS TOOLS Starter Service
Method in GENIUS TOOLS Starter for faster data synchronization.

GTS
Abbreviation for GENIUS TOOLS Starter.

GTS.exe
Name of the executable file for GENIUS TOOLS Starter App.

GTSA.exe
Name of the executable file for GENIUS TOOLS Environment Administrator.

GTS Alias
User alias in GENIUS TOOLS Starter, for use in additional applications for Creo. The GTS alias is available as an environment variable (`%GTS_USER%`) in Creo. If you do not specify an alias, the Windows user name will be used.

GTS Alias Long
Long user alias. The long alias is available in Creo via the environment variable `%GTS_USERLONG%`.

GTS Alias Short
Short user alias. The short alias is available in Creo via the environment variable `%GTS_USERSHORT%`.

Home Use license
License for private use.

Initial synchronization, initialization
First synchronization run which creates the Cadpool directory on the application computer and synchronizes it with the Caddepot.

© 2021 INNEO Solutions GmbH

Installdepot
Subdirectory of the installation directory that contains the release and version setups without settings and customizations. All setup programs unpack their data to this directory.

Installation computer
Computer on which the setup programs are run. Typically, this is also the administration computer.

LDAP (Lightweight Directory Access Protocol)
Network protocol for accessing a distributed directory service, e.g. the Windows user management.

Mapkey
Macro defining a sequence of commands and functions which can be created in Creo to simplify often-used procedures.

Mediadepot
Subdirectory of the installation directory. It contains setup files for different releases and versions. All setup files will install or unpack to the Installdepot directory.

NAS (Network Attached Storage)
File server providing independent storage capacity in a network of computers.

NC (Numerical Control)
Computer-based applications for controlling machine tools and production lines.

Operating environment
Directory that contains all the data required for working with the desktop application. This includes configuration data, libraries, templates and additional applications. The operating environment also contains a database with all configured projects.

Operating environment, local
Operating environment on the application computer.

Organization tree
Structure of all units and subunits that specifies the call hierarchy. Created in GENIUS TOOLS Project Configurator.

Perpetual license, permanent license
License that allows using a defined version of a software for an unlimited period of time.

PDMLink
Component of the Windchill software product family that is used for product data management.

© 2021 INNEO Solutions GmbH

PTC
The software company that develops Creo.

Project
Collection of configurable application properties such as project directory, data directory and license, e.g. for Creo Parametric.

Project, blocked
Project that a user can neither access nor see in GENIUS TOOLS Starter App.

Projekt, hidden
Project that a user cannot see in GENIUS TOOLS Starter App, but is able to access it with a transfer parameter.

Project, invalid
Project, for which a user has no valid license or required license extensions. Access to it an display in GENIUS TOOLS Starter App can be configured.

Project directory
Directory for project data at *<GTS-OperatingEnv>\configuration\projects\% GTS_PROJECT_DIR%*

Project option
Option to select on one or more projects in GENIUS TOOLS Starter App the Creo language, Creo startkey as well as license extensions and add-on programs.

Role
Group of users or computers that are assigned access rights to projects and GENIUS TOOLS Starter App functionality.

Satellite (also: synchronization or mirror server)
Computer or shared folder on a computer to which the state of one or more operating environments of a central main server is mirrored.

Searchmode directory
Subdirectory of the directory *Standard*, *Units*, *Projects* or *Users* which is included into the call hierarchy for configuration files and batch files if Windchill is active.

Startup TOOLS
Software package that comprises the products GENIUS TOOLS Starter, GENIUS TOOLS Library, GENIUS TOOLS Parameter, as well as Creo data packages and the GENIUS TOOLS License Manager.

Startup TOOLS Server
Term for the administration computer for Startup TOOLS versions up to 2018.

© 2021 INNEO Solutions GmbH

STOOLS
Root directory name for Startup TOOLS versions up to 2018.

Subscription license
License that allows using a software for a limited period of time.

Subunit
Subordinate unit created by attaching a unit to another unit in the organization tree 200.

SUT
Abbreviation for Startup TOOLS.

Synchronization
Functionality that copies the data of an operating environment in the Caddepot directory to the Cadpool directory on an application computer.

Tag ID
Textual marking in a config.pro block that is recognized by GENIUS TOOLS Starter. There are tag IDs for units (unit tag ID 202) and for project options (free tag ID 198).

TeamViewer
Third-party software used by INNEO Solutions GmbH to provide remote support.

UDF (User-defined feature)
Template for repeatedly required Creo features.

Unit
Group of users who belong to a company department defined either geographically or organizationally. Created in GENIUS TOOLS Project Configurator.

Unit directory
Directory in the units system directory that contains config.pro blocks 197 and other files for a unit.

Unit tag ID
Tag ID that is assigned to a unit in GENIUS TOOLS Project Configurator.

Unit type
Individually defined category for units, for better representation in GENIUS TOOLS Project Configurator.

User group
A defined group of configured Windows users. Contains settings in which the users' configuration differs from the general system-wide configuration.

Windchill
Software product by PTC for managing product data over the entire product life cycle.

© 2021 INNEO Solutions GmbH

10 Copyright

Copyright 2021 by:

INNEO Solutions GmbH

Rindelbacher Str. 42

73479 Ellwangen

Germany

This documentation is protected by copyright. All rights reserved.

Without prior written consent of an authorized representative of INNEO Solutions GmbH it must not be copied, photocopied, reproduced, translated, communicated or converted to electronic or machine readable form in whole or in part.

The unauthorized use of the documentation can lead to a claim for liquidated damages or legal prosecution. INNEO Solutions GmbH does not accept liability for possible faulty information in this documentation and the consequences resulting from such.

Note on registered trademarks:
Most of the software, hardware and trade names mentioned in this documentation are also registered trademarks of the respective software manufacturers.

Registered trademarks and trade names of INNEO Solutions GmbH:
GENIUS TOOLS, Startup TOOLS, INNEO

- B -

Borrowing duration
define default, maximum 163

- C -

Combined project option 131
config.pro block 17
basic 18
conditional 18
config_*.pro file 17
Creo settings 81

- D -

Data base mode 183

- F -

Footer 183
Free tag ID 131
Full version 183

- L -

License analysis
blocking of 163
License borrowing
blocking of 163
License extensions 122
License keys 25
License mode 183
Licenses
borrow 25
determine 25
distribute 25

- P -

Project options 122

- T -

tag ID
free 18
unitdriven 18

- U -

unit tag ID 18

- W -

Windchill settings 88

© 2021 INNEO Solutions GmbH